


Q: How to views Camera via Internet?

A: Please process with following step to views Camera via Internet:

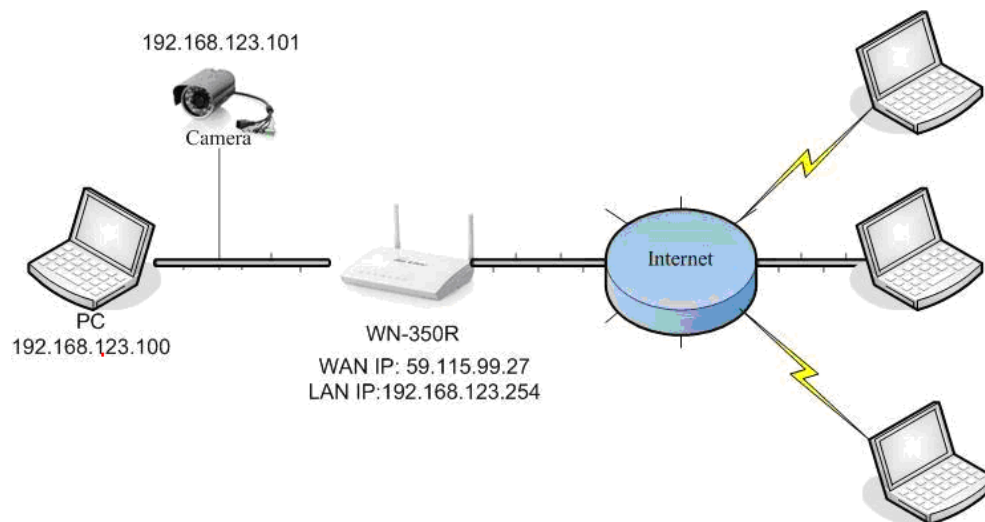

1. Setting Camera's Web UI on Internet

- Select Virtual Server function on WN-350R.
- Setting Local Camera (Private IP: 192.168.123.101) private port: 80 to Public port: 33001.

Air Live www.airlive.com
Home | General Setup | Status | Tool
WN-350R
Wireless b/g/n 2T2R 300 Mbps Router

Virtual Server ?

You can configure the Wireless Router as a Virtual Server so that remote users accessing services such as the Web or FTP at your local site via Public IP Addresses can be automatically redirected to local servers configured with Private IP Addresses. In other words, depending on the requested service (TCP/UDP) port number, the Wireless Router redirects the external service request to the appropriate internal server (located at one of your LAN's Private IP Address).

Enable Virtual Server

Private IP	Computer Name	Private Port	Type	Public Port	Comment
192.168.123.101	<< Select >>	80	Both	33001	

Add Reset

Current Virtual Server Table

NO.	Computer Name	Private IP	Private Port	Type	Public Port	Comment	Select
1	OFFLINE	192.168.123.102	80	TCP+UDP	33001		<input type="checkbox"/>

Delete Delete All Reset

APPLY CANCEL

2. Results

Camera's URL: <http://59.115.99.27:33001>

(ddns, ex: <http://demoipcam.airlive.com:33001>)