

Q: How to switch mode from Router to **Universal Repeater**?

A: Please perform the following step and switch to **Universal Repeater** mode.

1. Login to the admin panel of WN 350R with web browser.
2. Click the **Wireless** menu on the left of web management interface.
3. Then click the **Basic Settings**.
4. Click on the **pull-down** list of MODE and select **Universal Repeater**.
5. Click on the **Site Survey** button at the bottom.
6. Select the wireless AP or Router which choice you want to connect to it.
7. Press the **Apply** button.