- Q: My ISP disconnect the ADSL connection frequently, how can I make my router to reconnect automatically?
- A: You need to turn on the "Automatic Reconnect" option on the router. Please follow the steps below:

1. Open your web browser and type in the router's IP address (for example, 10.0.0.2)

2. When asked for Login and Password, Enter:

- Login: admin
- Password: epicrouter

**3.** Under "**Configuration -> WAN**". Check the "**Automatic Reconnect**" box under the PPP option.

0.1.1.1	^			^
OvisLink The Total Networking Solutions		РРР		
		Service Name		
Status	≡	Username		
Home		Password		
ADSL		Disconnect Timeout	0 seconds (Max:32767)	
LAN		MRU	1492	
PPP		MTU	1492	
		MSS	1432	≡
Configuration		Authentication	Auto 🗸	
WAN		🗹 Automatic Reconnect	Advanced PPP configuration	
LAN				
PPP		DHCP		
NAT		DHCP client enable		~
Virtual Server	~			
<			Save Settings	~

**4.** Press the "Submit" button first (all the way on the bottom), then press "Save Settings". The router should reboot to the new configuration.