

Please refer to the user manual at page 14 to configure the Air3G.
After Configuration, please enter the Air3G Web UI Console. Select Wireless Setting >> WPS Setting. In the WPS Progress, select "PIN" then "Apply." You will get a PIN Code.

