


# Airlive CamPro Express Setting Quick Guide

All ipcam use the factory default settings  
All ipcam and Airlive CamPro Express server in the same subnet  
Please see the detail setting in user manual

1. Run the Airlive CamPro Express-->Admin.

2. Select “E-MAP” then “Add Area”.

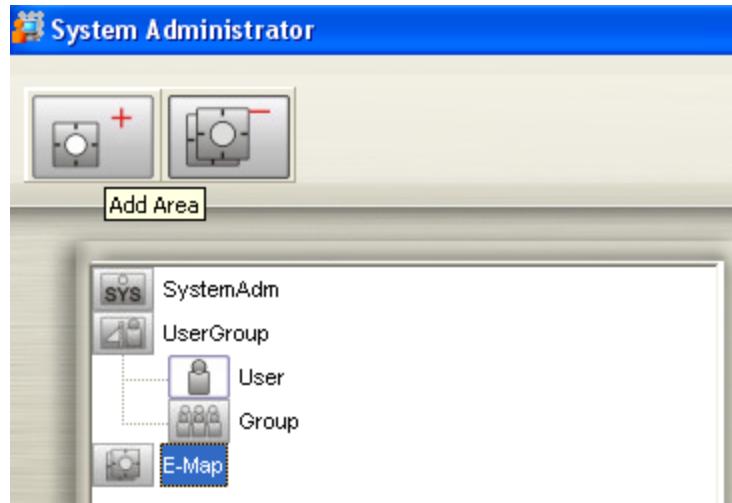


3. Enter the Area Name then Create.




4. Select area name then select “Auto Add Device”.




5. When search completed select “Create”.

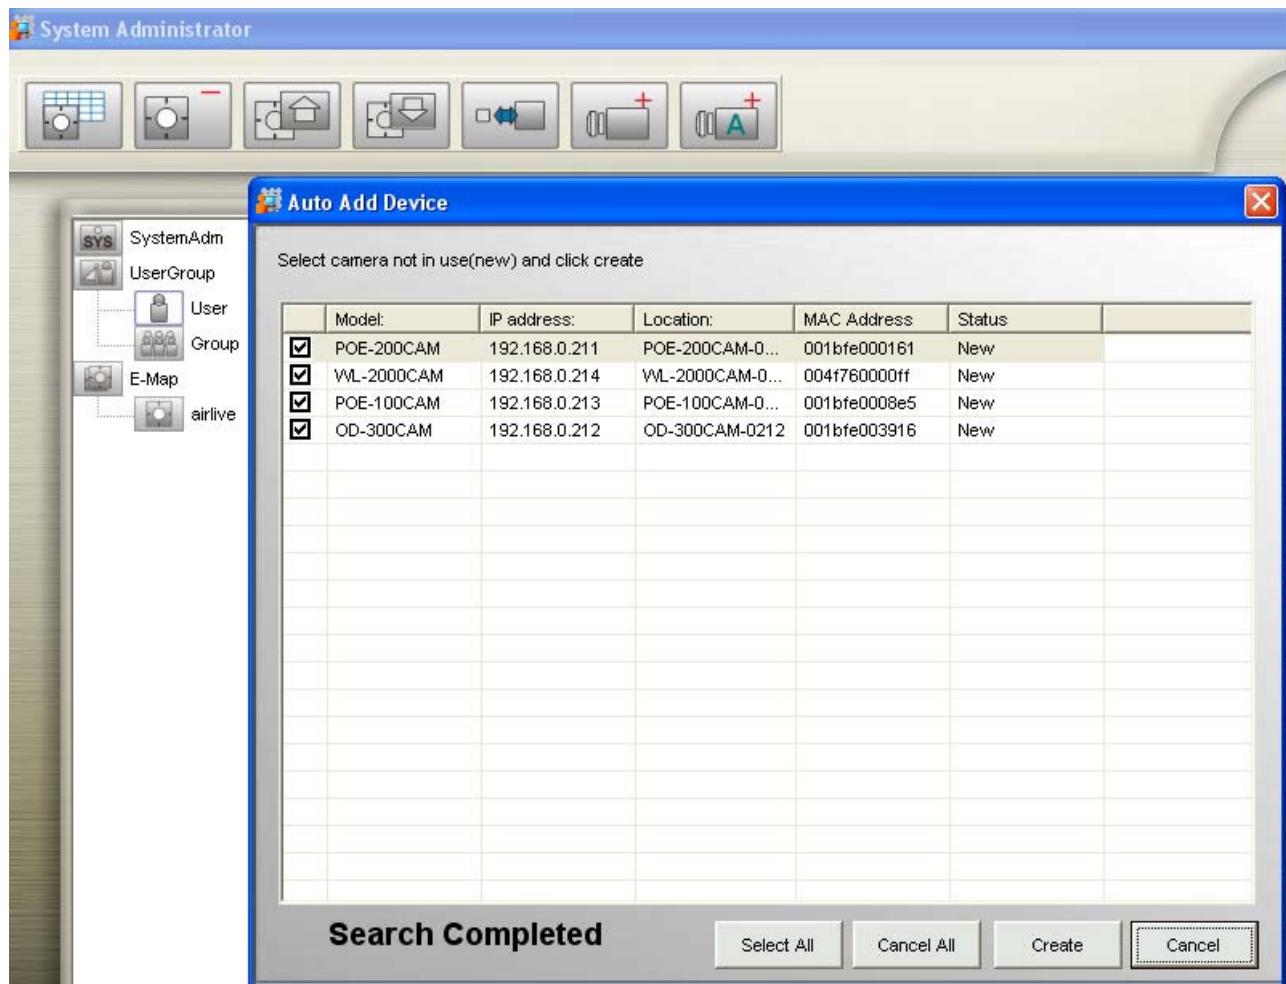


6. Select the ipcam device icon then select “Image Setting” .

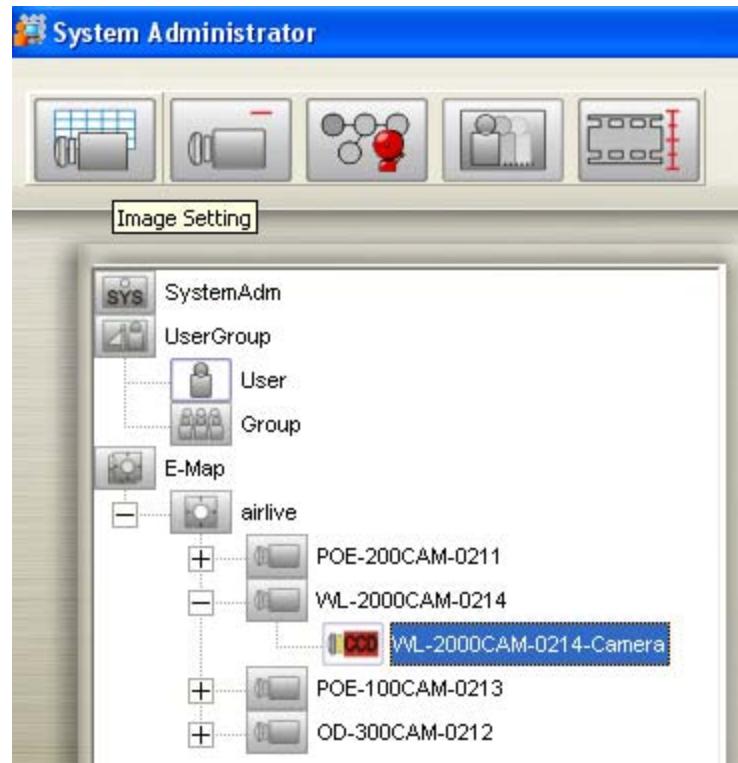


**7. Setting Alarm recording time and schedule recording in this page.**

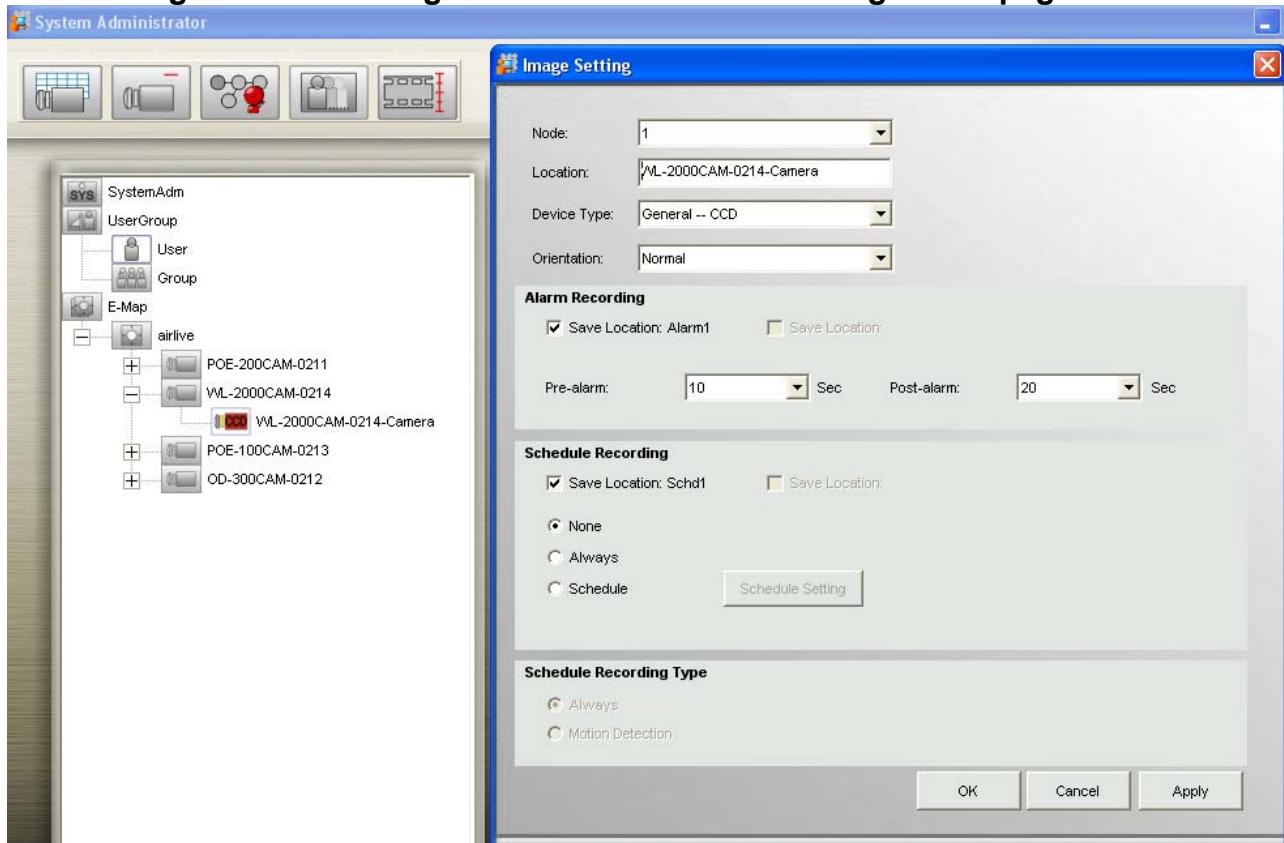


**8. Select the ipcam device icon then select “Motion Detection”.**

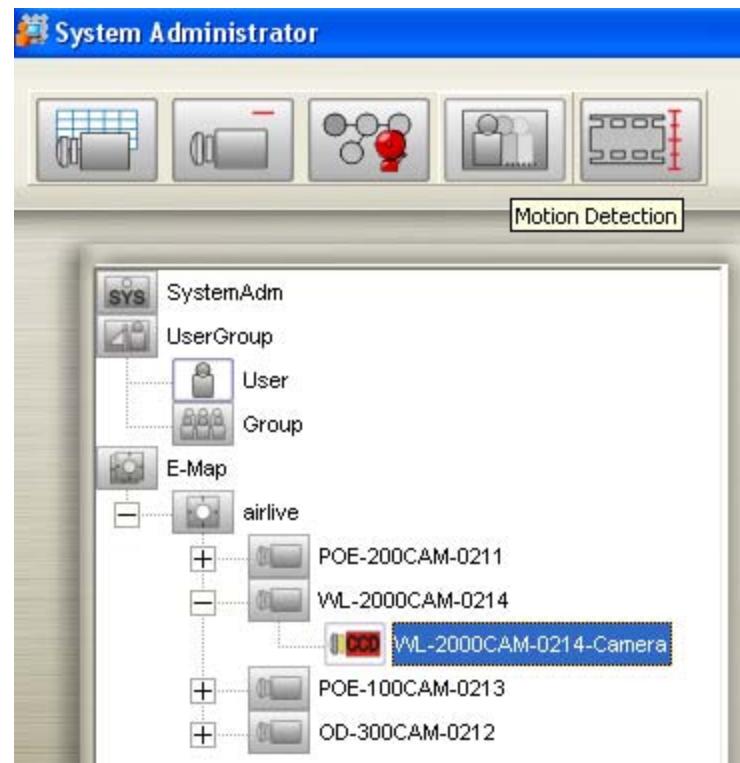


**9. Setting motion detection area in this page.**

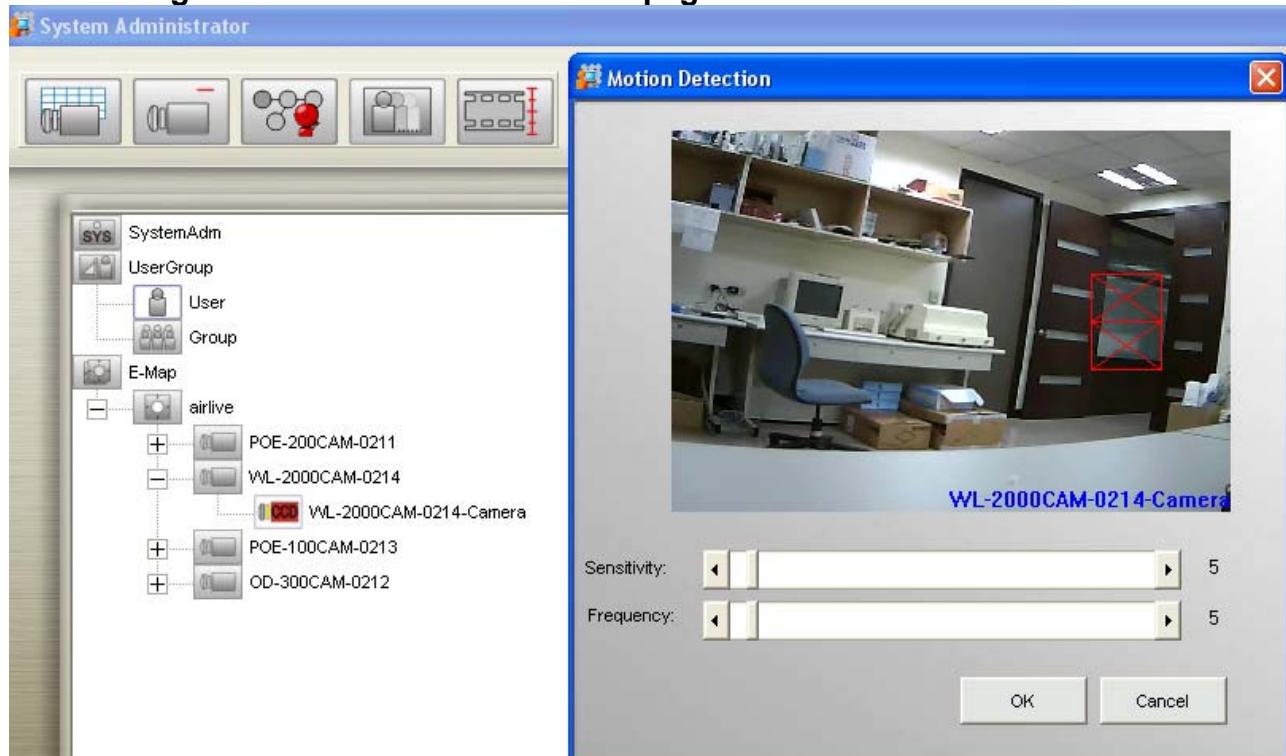


**10. Select the ipcam device icon then select “Image Alarm”.**

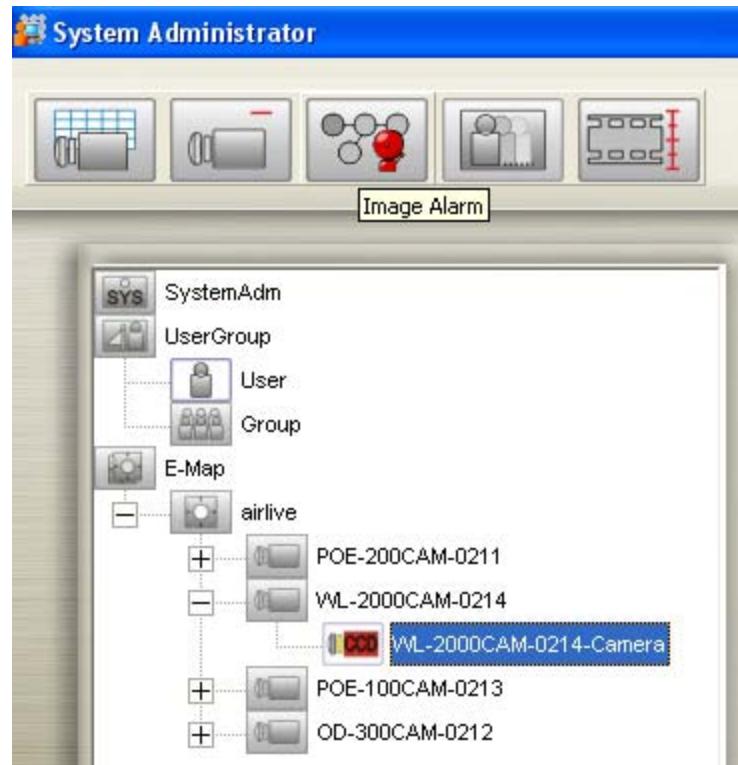


**11. Setting motion detection alarm in this page.**

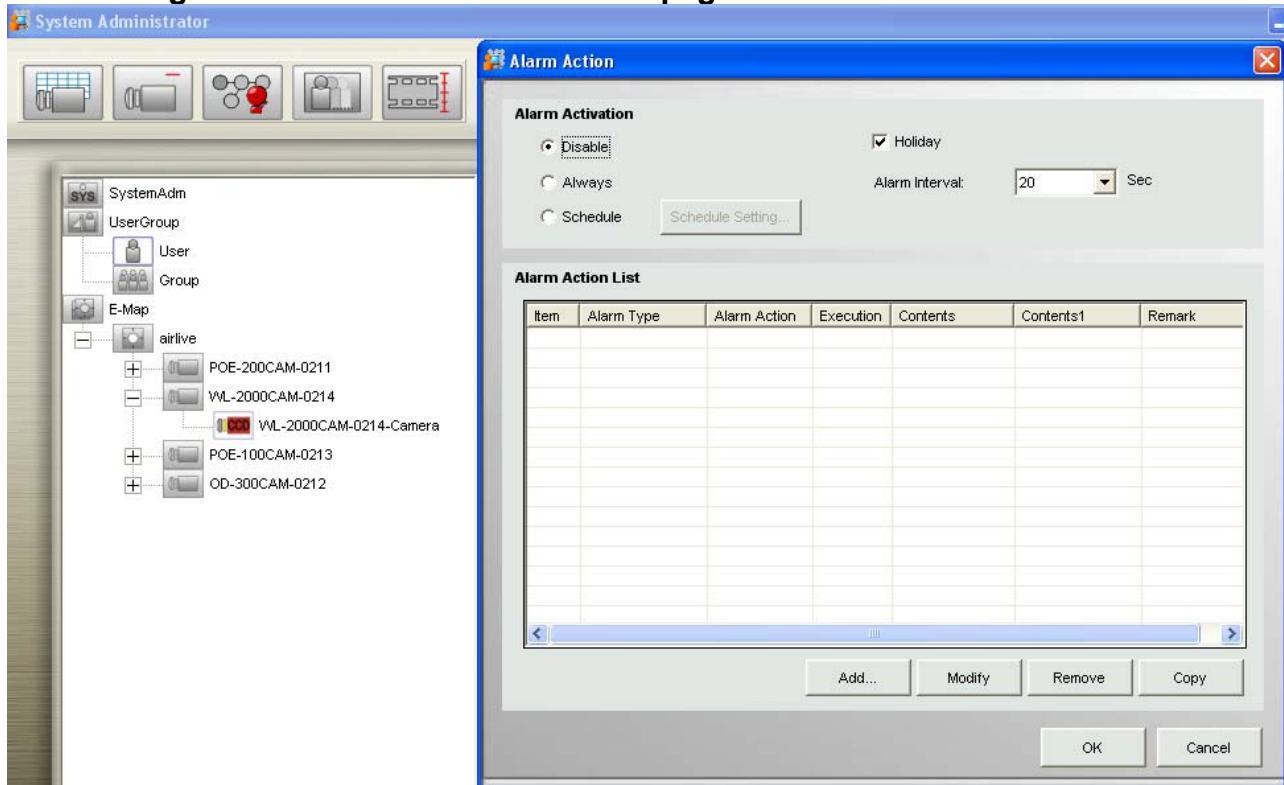

**12. Select “SystemAdm” then select “Rotation”**

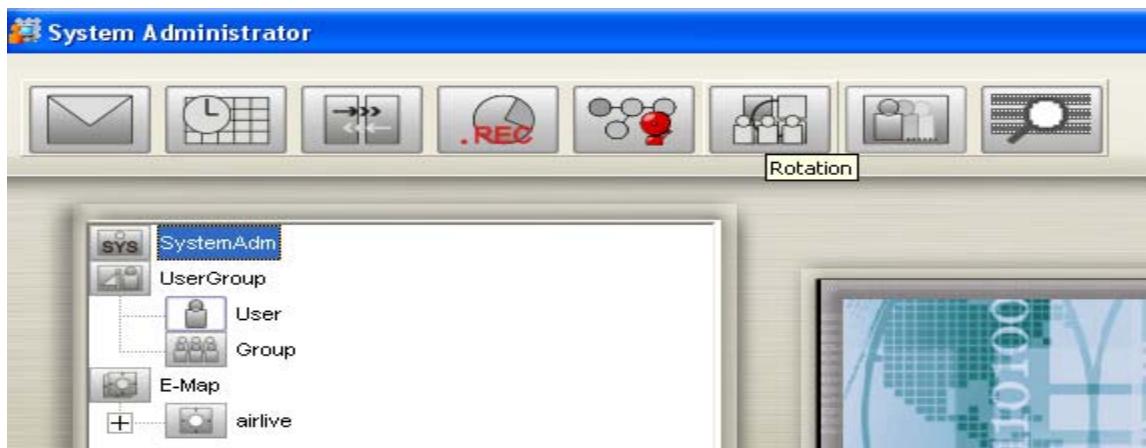

### 13. Setting rotation place in the monitor

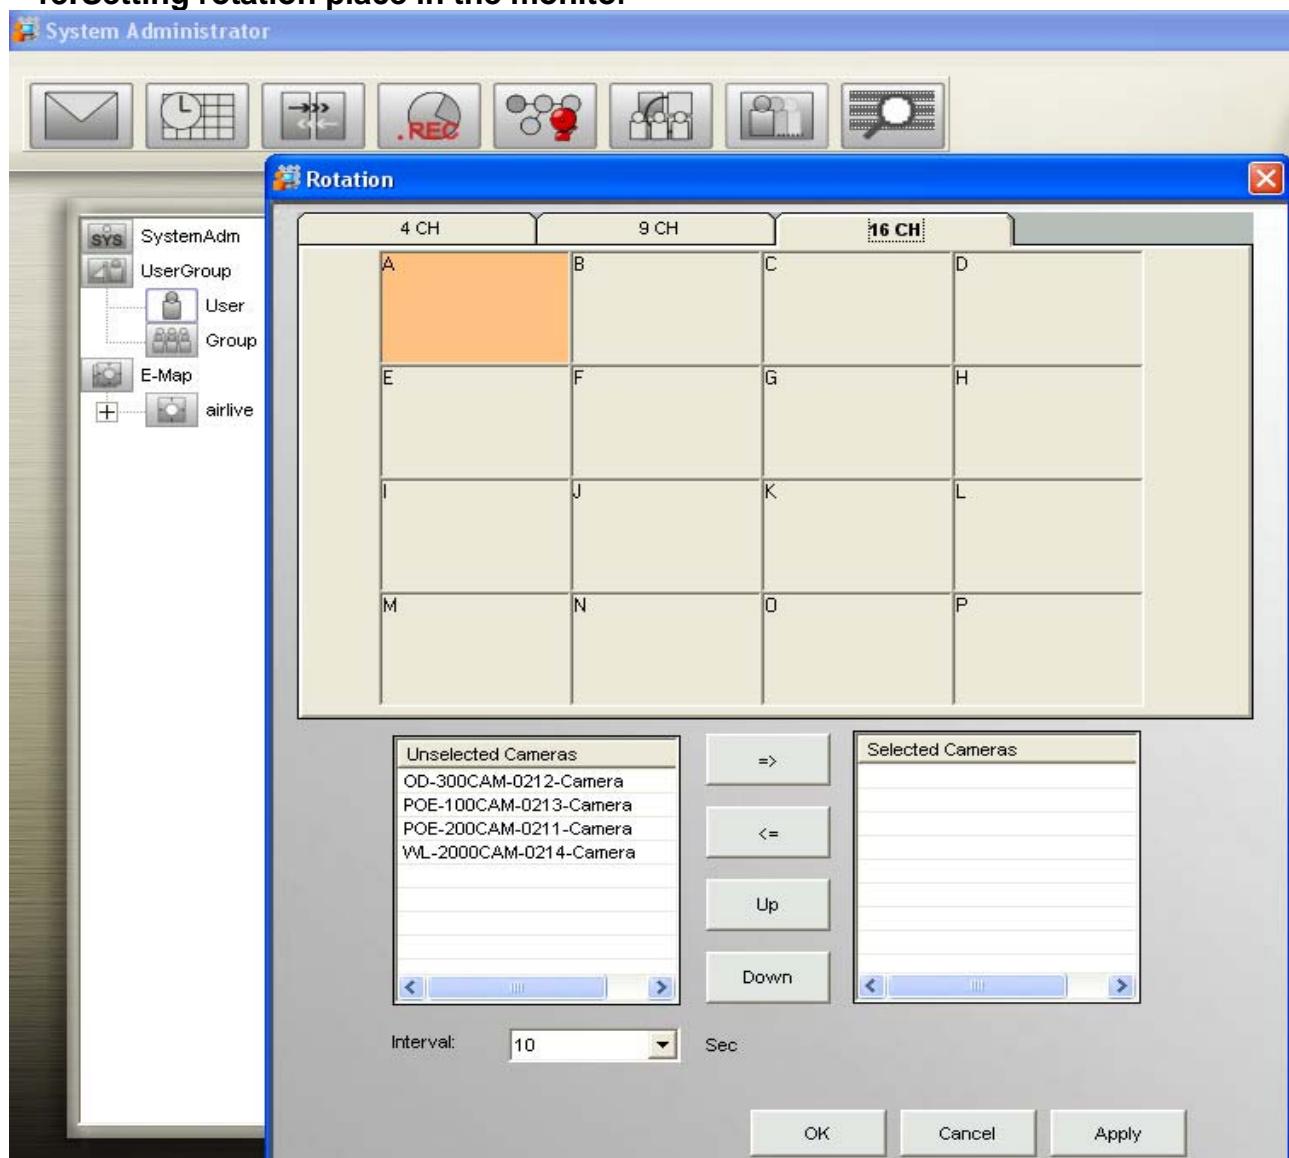

### 14. Run the Airlive CamPro Express->Monitor.

