



# How can I configure BT client at 6500FS

1. Select the BitTorrent page and click “BT Client Config” button

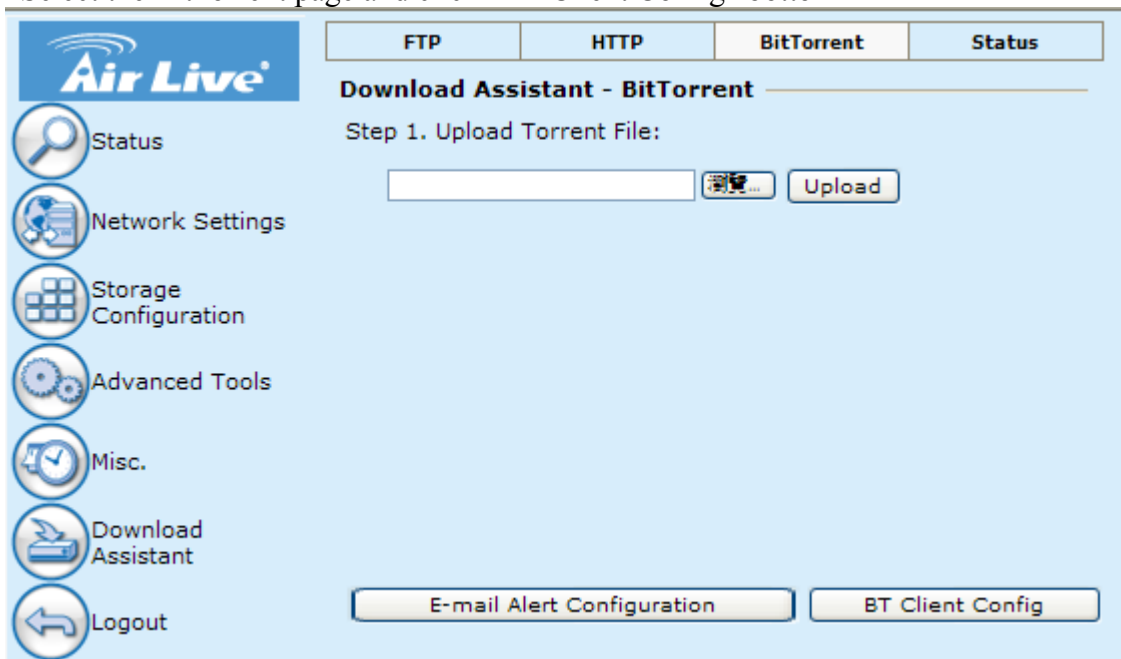

The screenshot shows the Air Live! web interface. At the top, there are four tabs: FTP, HTTP, BitTorrent, and Status. The BitTorrent tab is selected. Below the tabs, the page is titled "Download Assistant - BitTorrent". Under this title, it says "Step 1. Upload Torrent File:". There is a text input field for the torrent file path, followed by a small icon of a computer and a button labeled "Upload". On the left side, there is a vertical menu with icons and labels: Status, Network Settings, Storage Configuration, Advanced Tools, Misc., Download Assistant, and Logout. At the bottom of the page, there are two buttons: "E-mail Alert Configuration" and "BT Client Config".

2. Argument Setting

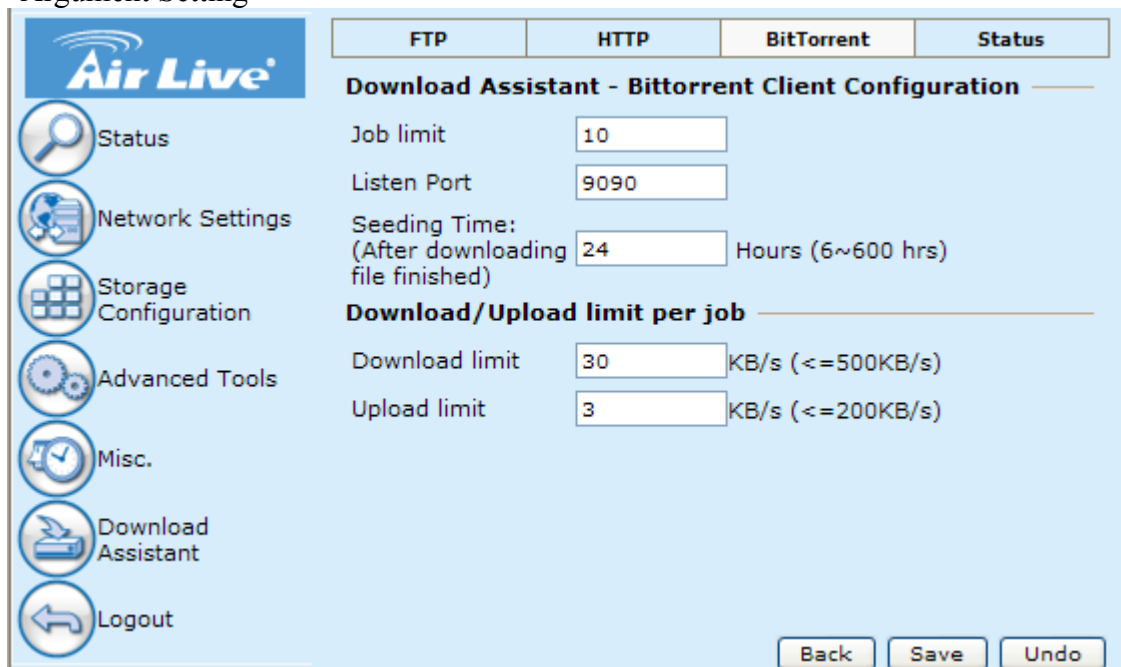

The screenshot shows the Air Live! web interface with the BitTorrent tab selected. The page is titled "Download Assistant - Bittorrent Client Configuration". It contains several configuration options with input fields: "Job limit" (10), "Listen Port" (9090), "Seeding Time: (After downloading file finished)" (24 Hours (6~600 hrs)), "Download limit" (30 KB/s (<=500KB/s)), and "Upload limit" (3 KB/s (<=200KB/s)). At the bottom right, there are three buttons: "Back", "Save", and "Undo". The left sidebar menu is the same as in the previous screenshot.

**Job limit** : Job download limit in the same time. (Proposed not to change)

**Listen Port** : If 6500FS under the NAT that please open the port for 6500FS.

**Seeding Time** : Setting the seeding time after download .(Proposed not to change)

**Download limit** : Setting the download limit for per job. (Not the real download speed)

**Upload limit** : Setting the upload limit for per job. (Not the real upload speed)