

**Q: I use WL-5460AP as AP mode, connect directly to a RADIUS server by an Ethernet cable.
I want to use RADIUS server for authentication, what do I provide as information?**

A: Please provide 2 information:

RADIUS Authentication server IP and port information,

RADIUS accounting server IP and port information (optional only if you adapt this solution).

Here is the most easy way to set RADIUS on WL-5460AP:

- 1. Go to the page of wireless security setup**
- 2. Choose in the encryption : 802.1x/RADIUS**
- 3. Choose the 802.1xAuthentication encryption as WEP64bit or WEP128 bit**
- 4. Then key in the RADIUS Authentication server IP and port,**
- 5. RADIUS accounting server IP and port.**
- 6. Apply the change and if reboot device if necessary. You can use the authentication with your RADIUS server.**

