


## How to configure 5460APv2 x 3 to work in point to multipoint mode?

You can configure 3x5460APv2 in WDS bridge mode

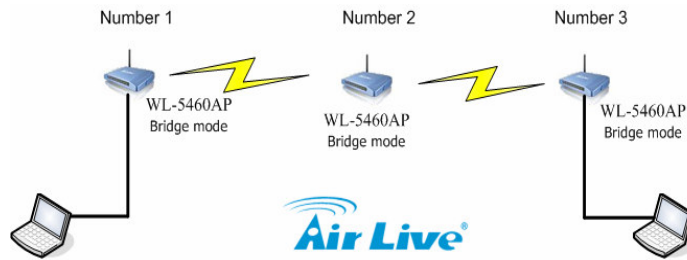

No.1 WL-5460AP connectd to No.2 WL-5460AP , and to enter into each other's mac address connected .

No.2 WL-5460AP connectd to No.1 and No.3 WL-5460AP , No.2 WL-5460AP must enter both No.1 and No.3 WL-5460AP mac address into mac table.

No.3 WL-5460AP enter into No.2's mac address , and behind No.1 WL-5460AP PC can connected to the PC under No.3 WL-5460AP