

How to install Print Server in Windows Vista/7?


Windows Add Printer Procedure

After adding a "Network Port" of the print server to your PC by Administrator or Client Installation Program, you can follow the procedure described below to add printer to the Windows. Note that following "Add Printer" steps are running in Windows XP, the steps in other Operating Systems are similar.

Windows Vista


The following "Add Printer" steps are running in Windows Vista.

1. Click "Start", select "Settings\Printers".
2. Click "Add a Printer".
3. The "Add Printer" wizard is displayed. Select "Add a local printer".

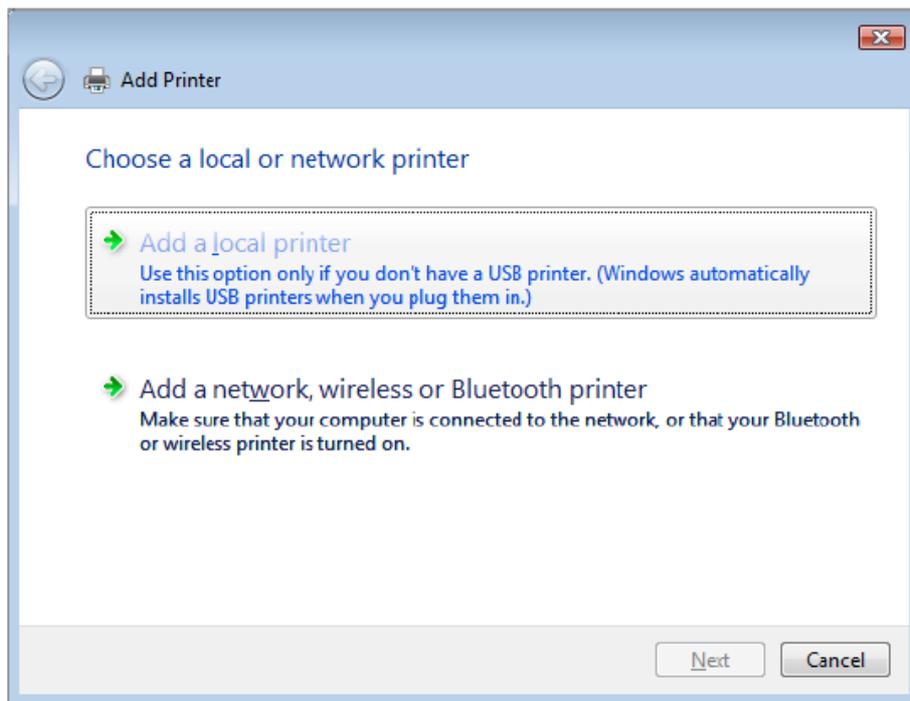


4. Choose the suitable printer port which was created by the installation process and click "Next".

How to install Print Server in Windows Vista/7?

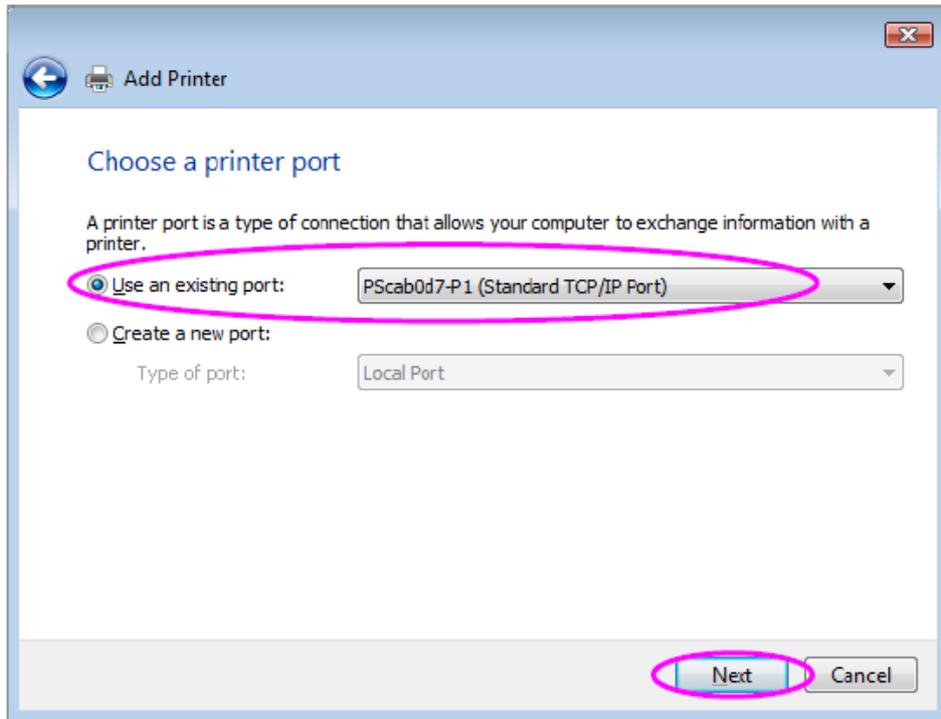


5. Select the printer manufacturer and the printer model and click "Next". If your printer is not in the list, click "Have Disk..." to install the driver of the Printer. After installation, the printer model will be added to the list.

How to install Print Server in Windows Vista/7?

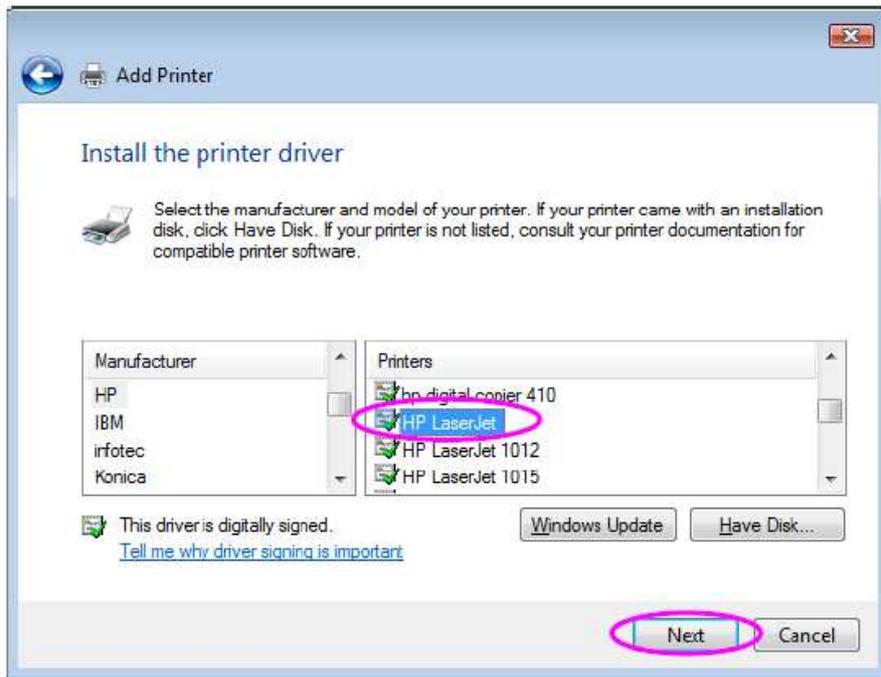


6. Name your printer and set the default printer, click "Next".

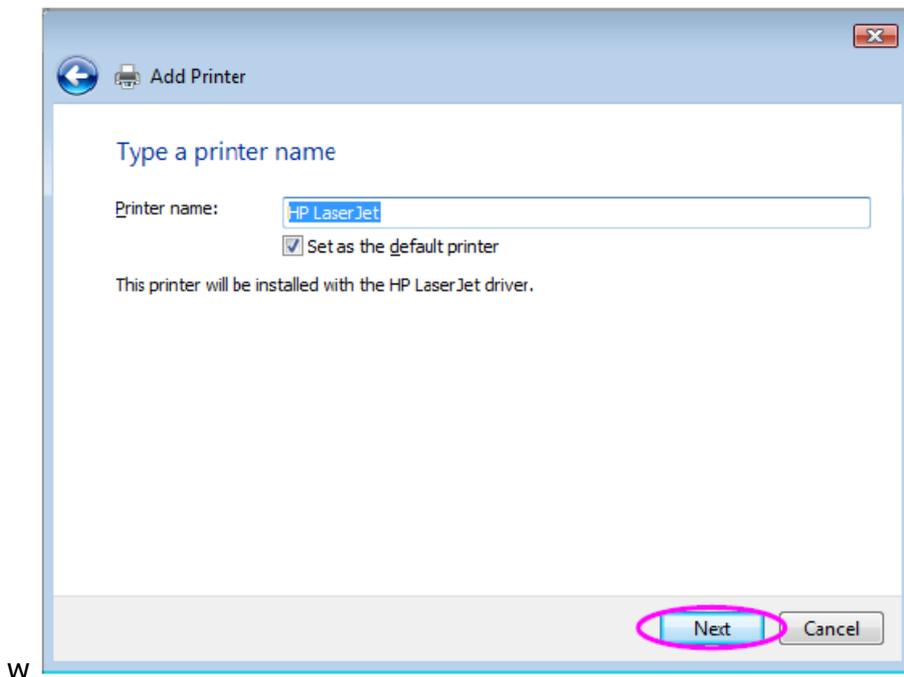


7. The printer drivers are being installed.

How to install Print Server in Windows Vista/7?

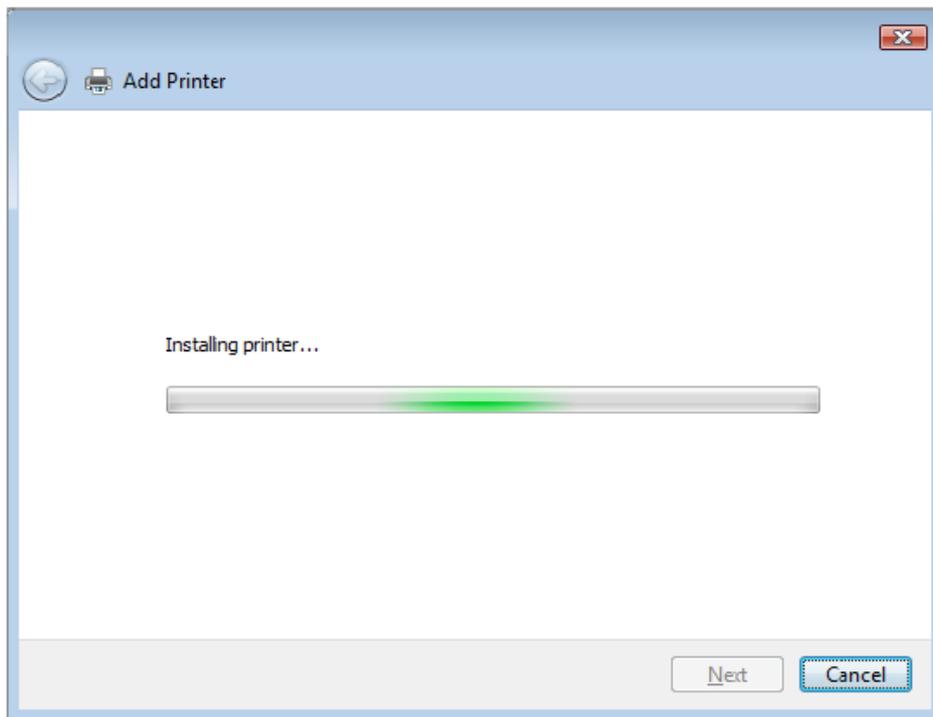

8. It is recommended to print a test page. Click "Finish".

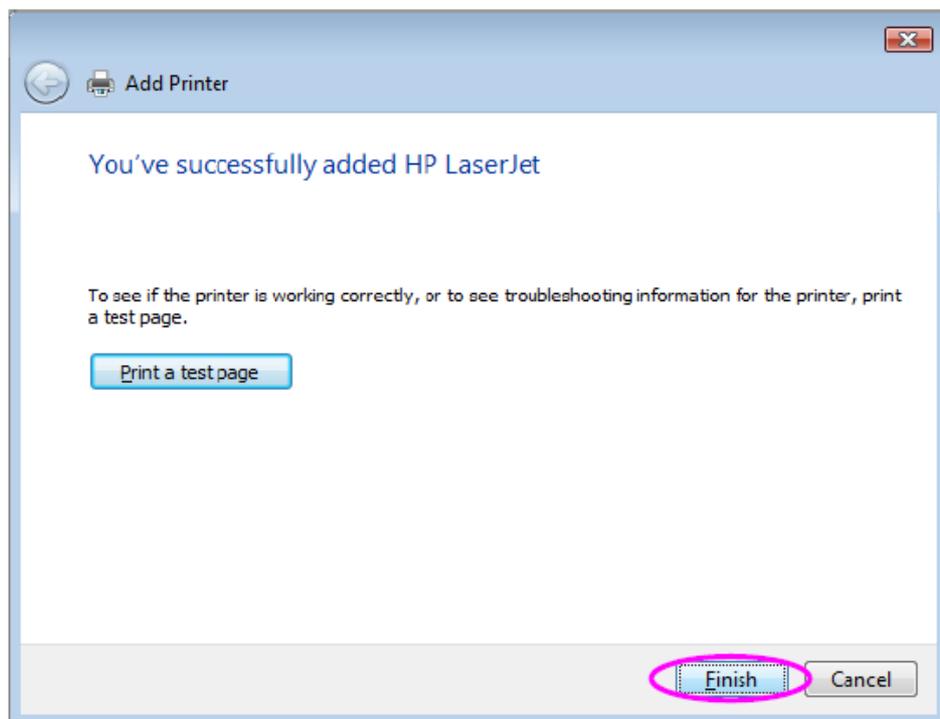

How to install Print Server in Windows Vista/7?

9. The printer is added to "Printers" page, you have added the printer to your computer successfully. Now you can start to print from your computer to the print server.

