

# How to setting motion detection function in IP cameras?

**Ans:**


1. Select motion detection area that you needs.



2. Setting SMTP server

ex: Authentication E-mail address: wayne.wu@airlive.com

Receiver E-Mail address: airtest@yahoo.com

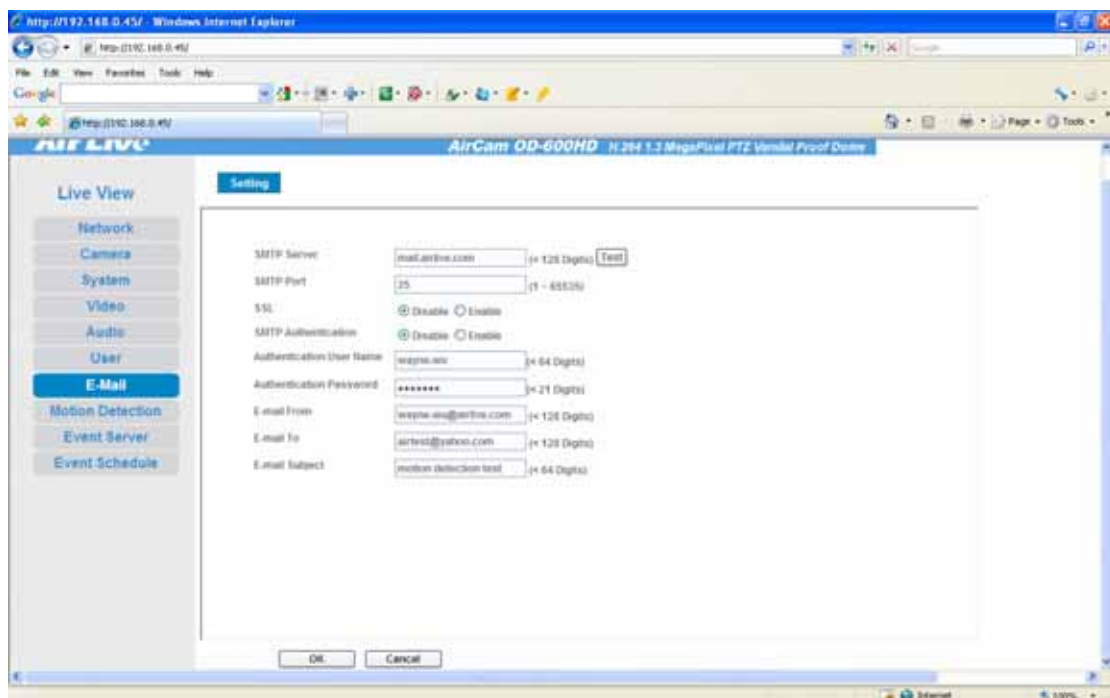

### 3. Setting Event Schedule

Type: Select **Event Trigger**

Enable Time: Choosing time that you want.

Trigger by: Select **Motion Area** and Area that you want.

Action: Select **Send to Mail**

The screenshot displays the 'Event Schedule' configuration page. On the left is a sidebar with menu items: Live View, Network, Camera, System, Video, Audio, User, E-Mail, Motion Detection, Event Server, and Event Schedule. The main content area has tabs for 'Setting' and 'Record'. The form includes the following fields and options:

- Name: test1
- Enable:  Yes  No
- Type:  Event Trigger  Schedule Trigger, Interval: 60 (Seconds)
- Enable Time:  Sun  Mon  Tue  Wed  Thu  Fri  Sat. Start from: 0:00, Duration: 24:00 (max 168:00 hours)
- Trigger by:  Sensor Active  Motion Area Default/Nozod
- Record File Prefix: 10 - 20 Digits
- Action:  Send E-Mail. To email address: ar1est@yahoo.com, Subject: motion detection, Message: motion detection,  Attached file,  Send Smbaj

Buttons at the bottom: Add, Modify, Delete.