






**Question:** How to use two-way audio function in NVR?

**Answer:**

You can retrieve audio from a particular camera. Simply click the  button.

The button will show in different color once the audio is turned on ().

 : This function allows user to speak from a PC through a micro-phone and the audio can be played at the camera side if it has a speaker connected to it.

You can click the  and  button, the two-way audio will enable.

