

Please refer to the user manual at page 13 to configure the N.Power. After Configuration, please enter the N.Power Web UI Console. Select Wireless Setting >> WPS Setting. In the WPS Progress, select "PIN" then "Apply." You will get a PIN Code.

