## How to use tour function

First, log-in IP Camera WEB UI. We setting 8 preset point, each point's wait time is 10 second, Tour time is 80 second( $8 \times 10=80$ )

Step 1.Preset point Setting:

ex: Set 8 preset point (P1~P8)



Step 2. Tour Setting ex: add a tour name (gogoya), Running: Select <u>Enable</u>

						(www.airlive.com)
AIT LIVE			AirCam	OD-600HD	H.264 1.3 MegaPix	el PTZ Vandal Proof Dome
Live View	Picture Preset S	etting Tour Set	ting			
Network						
Camera	Tour Number	Tour Name	Running St	beed Seque	nce Preset Name	Wait Time
System	1	gogoya	yes	29 1	p1	10
Video				3	p2 p3	10
Audio				4 5	р4 р5	10
User				6 7	рб р7	10 10
E-Mail				8	p8	10
Motion Detection						
Event Server						
Event Schedule						
	Tour Name	gogoya				
	Running	Enable O Disab	le			
	Speed		29			
		Add Modify D	elete		Modi	fy

Step 3.Event Schedule Setting

Enable: click on <u>YES</u>

Type: select Schedule Trigger, interval(interval time longer than 60 second) Action: select your setting tour name.

	Name	Enable	Type	Weekday	Start	Duration	Trigger by Prefix	Action				
Network	yahoo	yes	Schedule	1111111	0:0	24:0	x,	GUARDTOUR				
Camera												
System												
Video								Interval time longer than 60 second				
Audio	Name	vah	00									
User	Enable	90	Yes O No									
E-Mail	Туре	0	© Event Trigger Schedule Trigger, Interval 85 (Seconds)									
lotion Detection	Fueble Time		✓ Sun ♥ Mon ♥ Tue ♥ Wed ♥ Thu ♥ Fri ♥ Sat									
Event Server	Enable Time	Star	Start from 0 9 , Duration 24 9 0 9 ((max 168:00 hours) )									
Event Schedule	Trigger by		Sensor Active Motion Area									
	Record File Prefix		(0 ~ 20 Digits)									
		Voice Alert, Duration (Seconds )										

## Note:

1.Interval time should be longer than the Tour time. (ex:If your tour time is 80 second, Interval time must to set 90 second.)

2.Firmware version:5.0.2.5152 or above