Step 1: Go to WebUI of VoIP-210RS (default IP of VoIP-210RS is 192.168.1.1)

<u>Step 2</u>: Choose **HTTP Download method** to upgrade firmware, please choose correct path to use VoIP210RS.r0 (downloaded from AirLive Website) for upgrading. **Please do not use any third party firmware on device, it may cause device crash.**

Step3: Click "START HTTP Download" to start upgrading

Smart VOIP IAD Web Co	onfiguration Pages - Mic	rosoft Internet Explorer			
檔案(P) 編輯(E) 後親(Y) 我的局景(A) 工具(D) 說明(B)					
🕒 1-1 · 🔘 · 🖪	ໄ 😰 🏠 🔎 搜维	章 🤸 我的最爱 🚱 🔗	3• 🔩 🖃 🚳		
網址 🔘 🍓 http://192.168.1.1 /index.htm					✓ → 移至 連結 ※
	1 Iutions			1	Sec.
	Download				
	Download Warning: The download process will reset the unit into the download mode. This will terminate all network connections and reset your browser connection				
System Download Logout Reset	TFTP Download method (Select remote TFTP server IP address and filename) TFTP Server IP: Filename: Start TFTP Download				
	HTTP Download me	thod (Selectfilename on loca 桌面\VoIP210RS.re) (湖覽 Download	Lbzqwser machine)		
2 完成					🥑 網際網路
🔧 開始 🔵 🙆 🚺	💽 命令提示字元	》 網路連線	Smart VOIP IAD Web		🆮 🌏 💕 🖬 😻 上千 12.20

<u>Step4</u>: Choose "**Reset and execute Main Application**" and click "**Reset**" button. After a while, the webpage will refresh automatically.

<u>Step5</u>: please power off the device, and then power on the device

<u>Step6</u>: Go to WebUI of VoIP-210RS again. If the webpage shows up properly, your firmware upgrading is successful.

