How to enable WIAS-1000G remote access function

Before firmware version 1.00:

In System Configuration \rightarrow System Information \rightarrow Remote Management IP, define the remote IP address and press "Apply" to save the modification.

Air Live		Color	ut	
System Configuration A	User uthentication	Network Utilities Status		
	iii System Info	ormation		
Configuration Wizard		System Information		
System Information	System Name	OvisLink WIAS-1000GV2		
WAN Configuration	Administrator Info			
LAN1 & LAN2 Configuration	Device Name	(IT II appear when internet connection fails.) (FQDN for this device)		
LAN3 & LAN4 Configuration		⊙Enable ○Disable		
Wireless Configuration	Home Page	http://www.ovislink.com/ * (e.g. http://www.ovislink.com/)		
	Access History IP	(e.g. 192.168.2.1)	10	
	Remote Manage IP	192.168.3.2 (e.g. 192.168.3.1 or 192.168.3.0/24	Ð	
	SNMP	◯ Enable ④ Disable		
	User Logon SSL	💿 Enable 🔘 Disable		

For specific different LAN subnet user: 192.168.3.2

For all the different LAN subnet users: Enter the IP address as 192.168.3.0/24

Air Live		1	S S OvisLink C	orp, 2 Help	
System Configuration	User Authentication	Network Configuration	Utilities	Status	
	iiii System Info	ormation			
Configuration Wizard	•	System	Information		
System Information	System Name	OvisLink WIAS-100	DGV2		
WAN Configuration	Administrator Info	Sorry! The service is temporarily unavailable.			
		(It'll appear when Intern	iet connection fails.)		
LANT & LANZ COTTINUT AUON	Device Name	1	(FQDN for this d	evice)	
LAN3 & LAN4 Configuration		Enable O Disable			
	Home Page	http://www.ovislink.com/ *			
Wireless Configuration	Access History IP	(e.g. http://www.ovislink.com/) (e.g. 192.168.2.1)			
	Remote Manage IP	(e.g. 192.168.3.0/24 (e.g. 192.168.3.1 or 192.168.3.0/24			
	SNMP	◯ Enable			
	User Logon SSL	- 📀 Enable 🔿 Disable			

Air Live	User	Retwork	OvisLink C www.ovislink.co	orp m.tw Status
Configuration A	uthentication	Configuration	Utilities	Jacus
	🧱 System Info	rmation		
Configuration Wizard		System In	formation	
System Information	System Name	OvisLink WIAS-10000	∂ V2	
WAN Configuration	Administrator Info			
	0	(It'll appear when Internet	t connection fails.)	
LAN1 & LAN2 Configuration	Device Name		(FQDN for this de	evice)
LAN3 & LAN4 Configuration		📀 Enable 🔘 Disable		
	Home Page	http://www.ovislink.com/ *		
Wireless Configuration		(e.g. http://www.ovislink.com/)		
	Access History IP		(e.g. 192.168.2.1)	
	Remote Manage IP	60.250.158.64	(e.g. 192.168.3.	1 or 192.168.3.0/24)
	SNMP	O Enable 💿 Disable		
	User Logon SSL	- 💿 Enable 🔿 Disable		

For specific WAN user: Enter the IP address as 60.250.158.64

For all the Internet users: Enter the IP address as 0.0.0/0.0.0.0

Air Live	User	Image: Network Image: Network Image: Network Image: Network Image: Network Image: Network			
Configuration	Authentication	Configuration			
	💼 System Info	ormation			
Configuration Wizard		System Information			
System Information	System Name	OvisLink WIAS-1000GV2			
WAN Configuration	Administrator Info	Sorry! The service is temporarily unavailable.			
		(It'll appear when Internet connection fails.)			
LAN1 & LAN2 Configuration	Device Name	(FQDN for this device)			
LAN3 & LAN4 Configuration		📀 Enable 🔘 Disable			
	Home Page	http://www.ovislink.com/			
Wireless Configuration		(e.g. http://www.ovislink.com/)			
	Access History IP	(e.g. 192.168.2.1)			
	Remote Manage IP	0.0.0.0/0.0.0.0 (e.g. 192.168.3.1 or 192.168.3.0/24)			
	SNMP	◯ Enable ⊙ Disable			
	User Logon SSL	💿 Enable 🔿 Disable			

After firmware version 1.10:

In System Configuration → System Information → Remote Management IP, select "Enable" and press "Apply" to save the modification. Then click "Configure" to define the remote IP address in Remote Management IP List column.

Air Live		Constant Corp. Constant Corp. Constant Corp. Constant Corp. Constant Corp. Constant Corp. Constant Con			
System Configuration A	User Authentication C	Network Utilities Status			
	iiii System Info	ormation			
Configuration Wizard		System Information			
System Information	System Name	OvisLink WIAS-1000GV2			
WAN Configuration	Administrator Info	Sorry! The service is temporarily unavailable.			
	(It'll appear when Internet connection fails.)				
LAN1 & LAN2 Configuration	Device Name (FQDN for this device)				
LAN3 & LAN4 Configuration		💿 Enable 🔘 Disable			
	Home Page	http://www.ovislink.com/			
Wireless Configuration		(e.g. http://www.ovislink.com/)			
	Access History IP	(e.g. 192.168.2.1)			
	Remote Management IP				
	SNMP	O Enable 💿 Disable			
	User Logon SSL	⊙ Enable ○ Disable			

For specific different LAN subnet user: 192.168.3.2

Air Live		6	s (*)	isLink Corp. wovislink.com.tw
System Configuration	User Authentication	Network Configuration	Utilities	Status
Configuration Wizard	iii Remo	te Management IP Li Remote Ma	<mark>st</mark> magement IP List	
System Information	Item	IP Address/Segment	Item	IP Address/Segment
WAN Configuration	1 🕻	192.168.3.2	2	
LAN1 & LAN2 Configuration	3		4	
LAN3 & LAN4 Configuration	5		6	
Enno d'Enno configuration	7		8	
Wireless Configuration	9] 10	

Air Live			s 🔊	visLink Corp. w.ovislink.com.iw
System Configuration	User Authentication	Network Configuration	Utilities	Status
Configuration Wizard	Ren	note Management IP Lis Remote Ma	st nagement IP Lis	t
System Information	Item	IP Address/Segment	Item	IP Address/Segment
WAN Configuration	1	192.168.3.0/24	2	
LAN1 & LAN2 Configuration	3		4	
	5		6	
LAN3 & LAN4 Configuration	7		8	
Wireless Configuration	g		10	

For all the different LAN subnet users: Enter the IP address as 192.168.3.0/24

For specific WAN user: Enter the IP address as 60.250.158.64

Air Live		e 🖗	s (*	visLink Corp. wovislink.com.tw
System Configuration	User Authentication	Network Configuration	Utilities	Status
Configuration Wizard	Ren	note Management IP Lis Remote Ma	<mark>st</mark> nagement IP List	t
System Information	Item	IP Address/Segment	Item	IP Address/Segment
WAN Configuration	1	60.250.158.64	2	
LAN1 & LAN2 Configuration	3		4	
LAN3 & LAN4 Configuration	5		6	
	7		8	
Wireless Configuration	9		10	

Air Live		🔗 💮	s) 📀 🖓	risLink Corp. w.ovislink.com.tw
System Configuration	User Authentication	Network Configuration	Utilities	Status
Configuration Wizard	Remo	ote Management IP Lis Remote Ma	<mark>st</mark> nagement IP List	1
System Information	Item	IP Address/Segment	ltem	IP Address/Segment
WAN Configuration	1	0.0.0/0.0.0.0	2	
LAN1 & LAN2 Configuration	3		4	
LAN3 & LAN4 Configuration	5		6	
Lens a Lene comgaration	7		8	
Wireless Configuration	9		10	

For all the Internet users: Enter the IP address as 0.0.0/0.0.0.0