

### Important Information

- The AP mode's default IP address is **192.168.100.252**
- The default Subnet Mask is **255.255.255.0**
- The default SSID is **802\_11b-SSID**
- The default Channel is **11**
- The default DHCP client is **Disabled**
- The default is set to AP mode
- This Wireless Access Point can support four modes AP, Client, Bridge, Repeater (WDS)
- If you want to change to **Repeater** mode, please go to **Wireless/ WDS** Setting to enable the WDS function
- Under Bridge Mode, you can set WEP Key or WPA in order to prevent unrelated people to eavesdrop.

### LED Indicators

LED Indicator	Color	Status	
		Solid	Flashing
Power	● Green	Turns solid green when power is applied to this device.	N/A.
ErrStatus	● RED	Turns solid red when the device is not working properly.	When power on self-test failure occurs.
Link/Act.	● Green	Connected and associated to at least a client station.	Receiving/ Sending data
WEP	● RED	When this function is enabled.	N/A
MAC Ctrl	● RED	When this function is enabled.	N/A
Bridge	● RED	Turn solid when the device is running in the WDS function.	N/A
LAN 1	● Green	Turns green when linked to a local network.	Receiving/ Sending data
LAN 2			

### Installation Steps

- Please install your network cards first before the AP
- Screw-in the antenna (clockwise) into the Antenna connector
- Connect the power and LAN cable to the back
- Use your wireless card to do a site survey, the default SSID is "802\_11b-SSID" and Channel is "11"
- If you need to change AP's configuration, please follow the procedure below:
  - The AP's default IP address is 192.168.100.252. Please make sure your computer IP is in the same subnet as the AP (i.e. 192.168.100.x)
  - Open the web browser and enter 192.168.100.252. When asked for Login and Password, just press Enter.

### Repeater, Bridge, Client, and WDS Mode

#### Wireless: Basic Setting

This page includes all primary and major parameters. Any parameter change will cause the device to reboot for the new settings to take effect.

**Mode:** This Wireless Access Point can support three modes AP, Client, and Bridge.

The default is set to AP mode. Click the pull down arrow ▼ you can change it to Client mode.

To change to Repeater mode, you will have to go to Wireless/WDS setting to enable WDS.

**Network Type:** When in Client mode, you can select between Ad-Hoc and Infrastructure.

#### Wireless: WDS Setting

In order to set "WDS", you need to check on the Enable Wireless Access Control's check box.



### Repeater, Bridge, and Client Setup

#### Repeater Mode

Device A:  
**Mode:** AP  
**WDS:** Enable  
**Mac Address:** Device B's AP  
**Mac Address**  
Device B:  
**Mode:** AP  
**WDS:** Enable  
**Mac Address:** Device A's AP  
**Mac Address**



Please make sure both A and B are set to the same ESSID and Channel.

#### Bridge Mode

Device A:  
**Mode:** Client  
**Network Type:** Ad-Hoc  
Device B:  
**Mode:** Client  
**Network Type:** Ad-Hoc



Please make sure both A and B are set to the same ESSID and channel. To enhance security, you can disable the "Broadcast SSID" function under "Wireless->Advance Settings". Then turn on WEP or WPA.

#### Client Mode

Device A:  
**Mode:** Client  
**Network Type:** Infrastructure  
Device B:  
**Mode:** AP



Please make sure both A and B are set to the same ESSID and Channel.