
- Q: My ISP disconnect the ADSL connection frequently, how can I make my router to reconnect automatically?
- A: You need to turn on the "Automatic Reconnect" option on the router. Please follow the steps below:
 - 1. Open your web browser and type in the router's IP address (for example, 10.0.0.2)
 - 2. When asked for Login and Password, Enter:
 - Login: admin
 - Password: epicrouter
 - 3. Under "Configuration -> WAN". Check the "Automatic Reconnect" box under the PPP option.

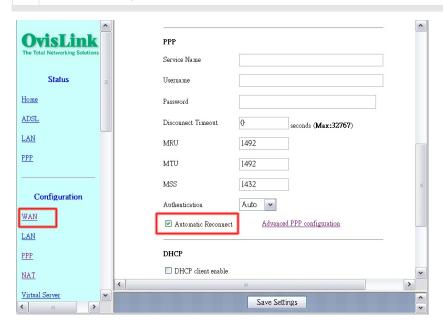

4. Press the "Submit" button first (all the way on the bottom), then press "Save Settings". The router should reboot to the new configuration.

