

How to Configure DMZ in WL1500R

Please follow the step and try again

check your DMZ host ip address

On your DMZ server

1. use start -> run
2. key in **cmd** and press enter
3. key in **ipconfig** and press start

```
Connection-specific DNS Suffix . :  
IP Address . . . . . : 192.168.1.100  
Subnet Mask . . . . . : 255.255.255.0  
Default Gateway . . . . . : 192.168.1.254
```

4. show your ip address
(like 192.168.1.100)

On your WL-1500R

1. Go to Access control page -> DMZ
2. click "Enable" button and keyin ip address(like 192.168.1.100) and press apply button

3.

DMZ

Enabled : Enabled Disabled

DMZ Host IP :

4. wait restart

5. Try again DMZ function