

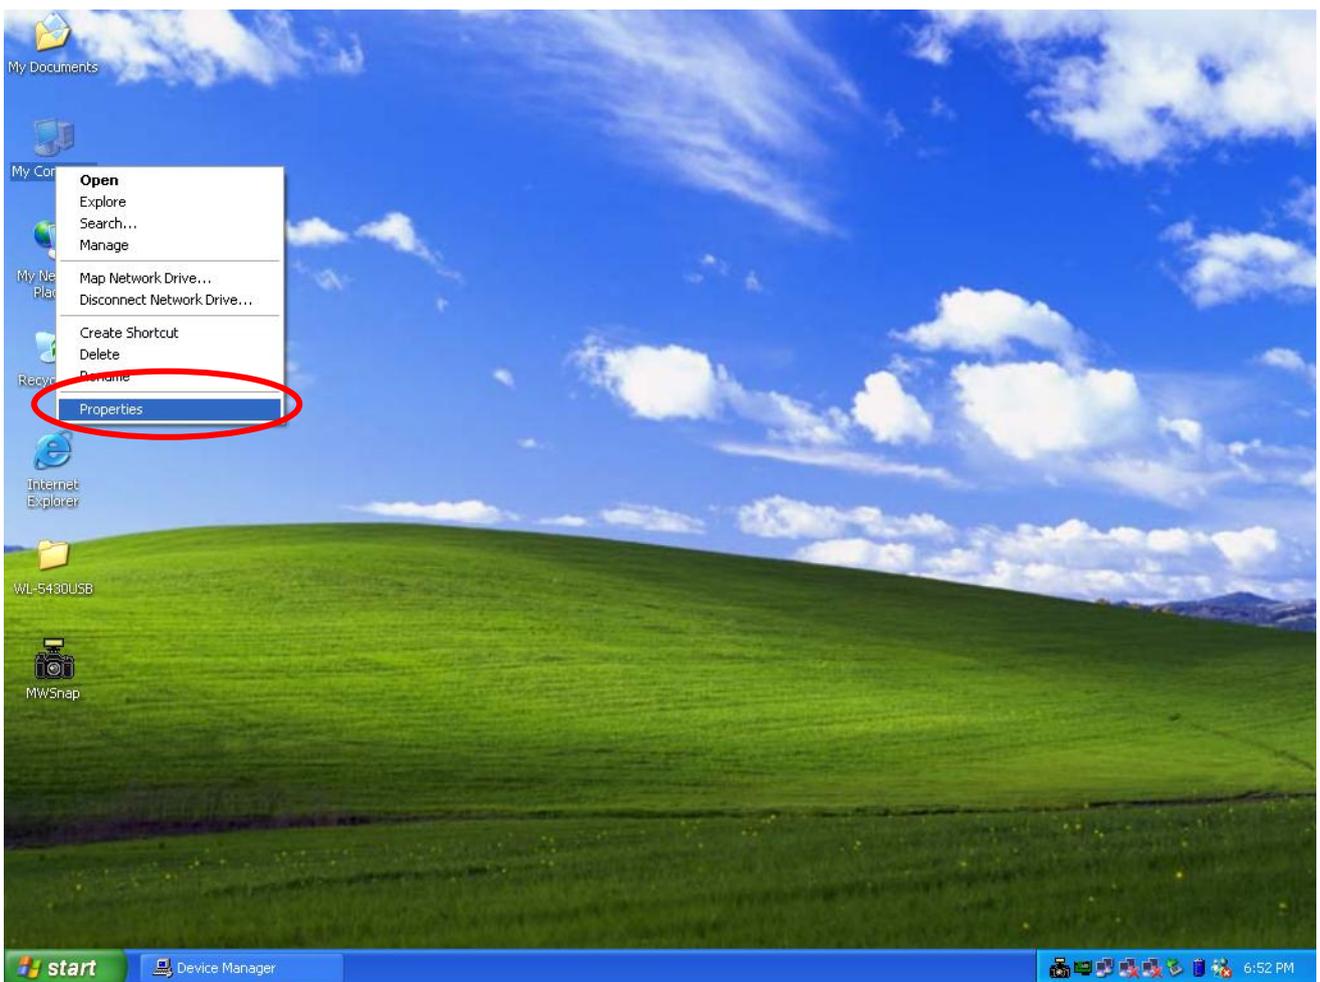



# WL-5430USB Channel Changing Guide


Domain	Channels
USA (FCC)	1-11
Canada (IC)	1-11
Europe (ETSI)	1-13
SPAIN	10-11
FRANCE	10-13
JAPAN – 11b	1-14
JAPAN - 11g	1-13

1. Right Click on “My Computer” and Select “property”

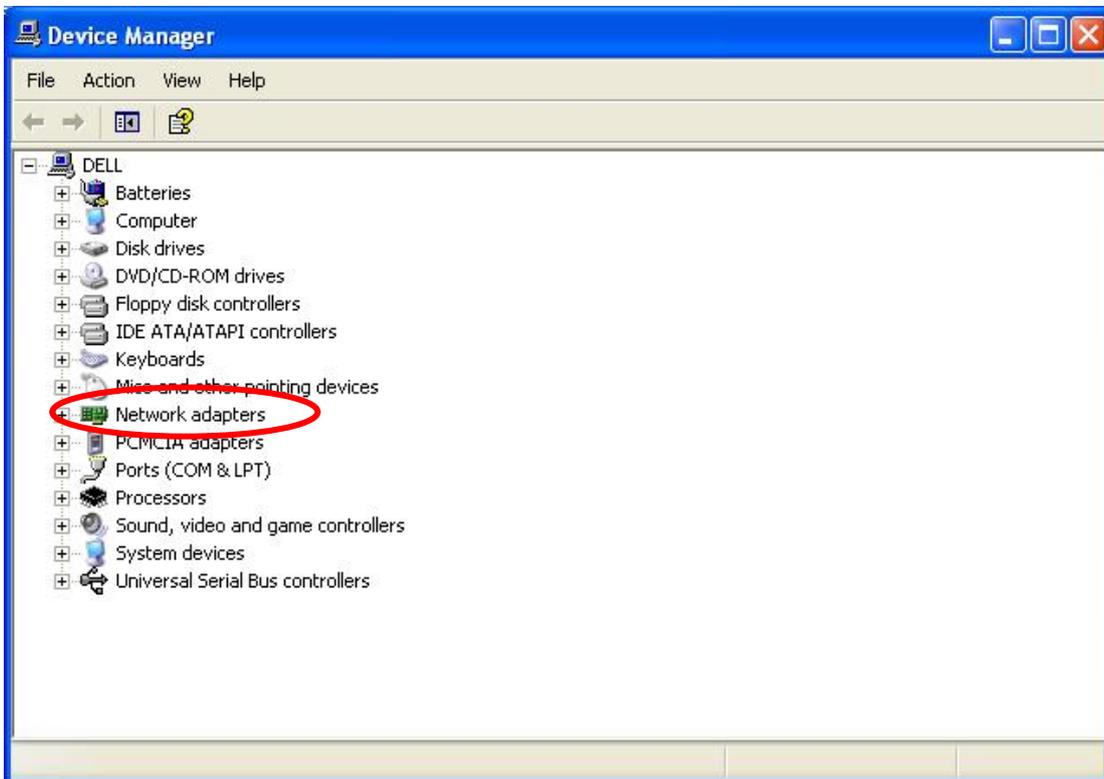

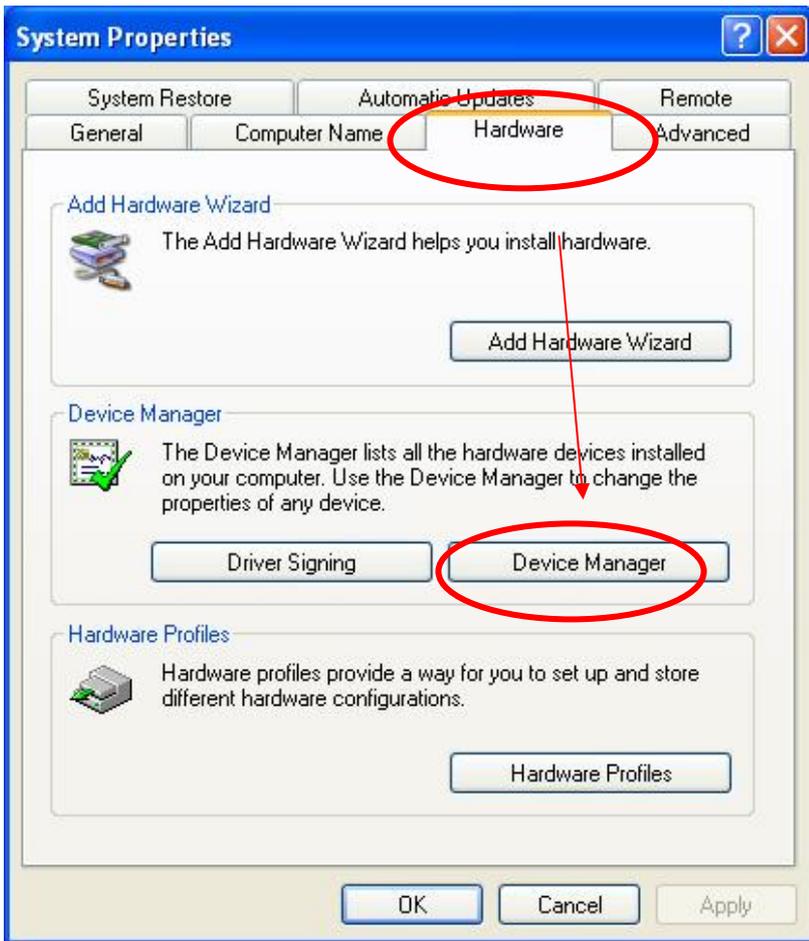

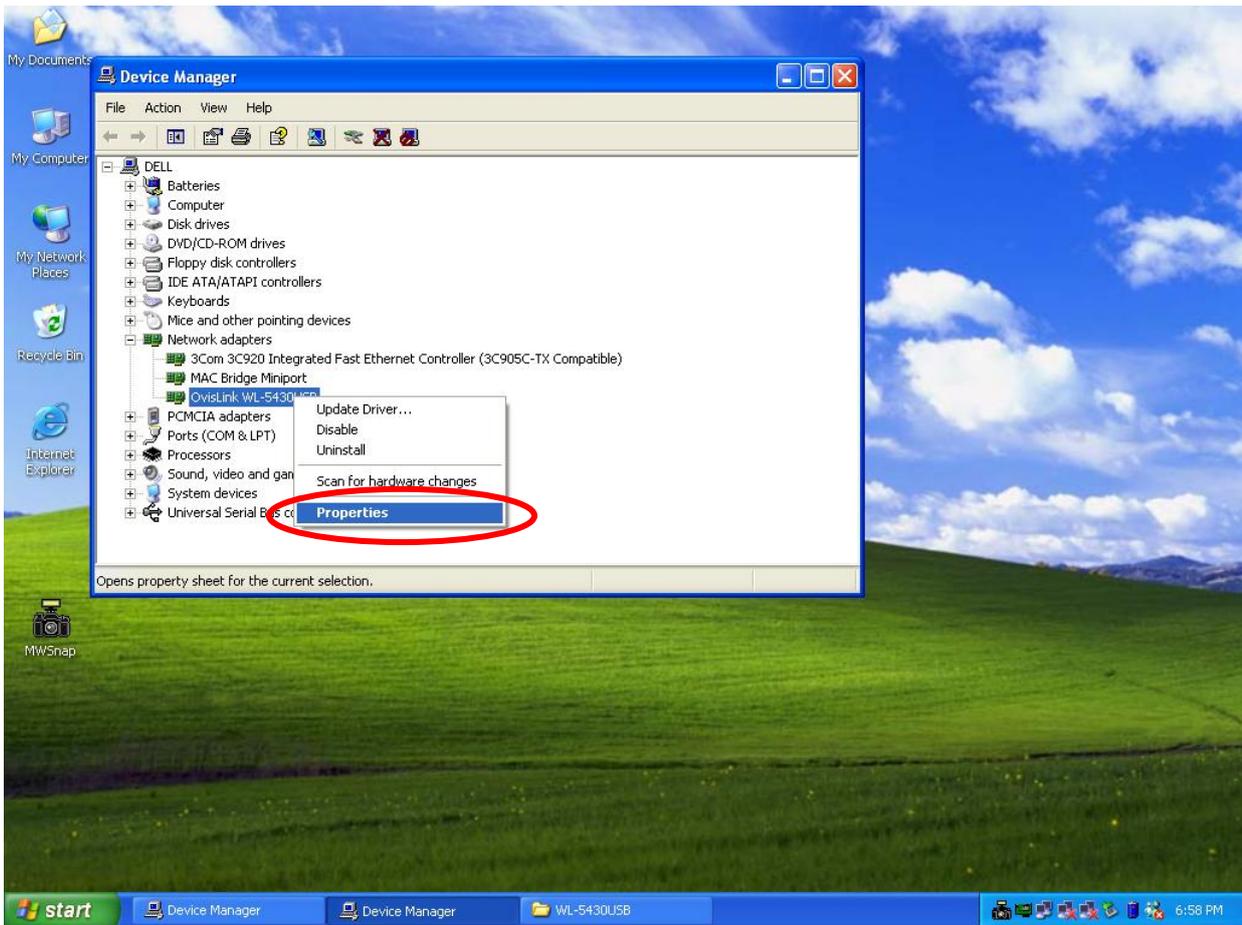

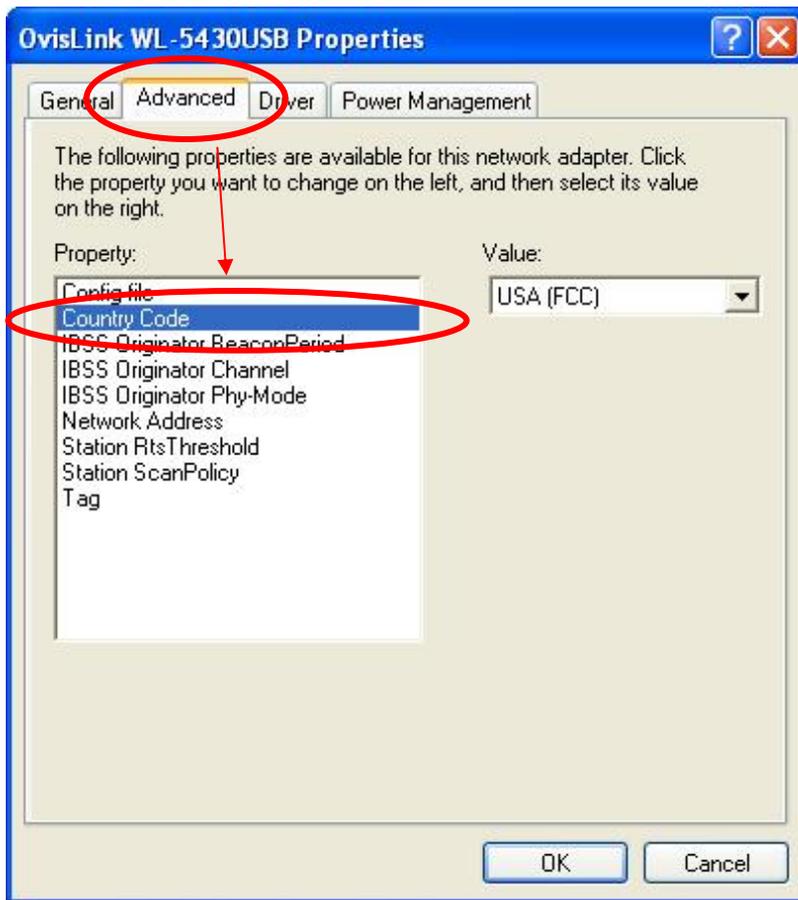

**Select your country code, and your available channel will change accordingly.**

