



This is an example for using WL-5460AP WISP function

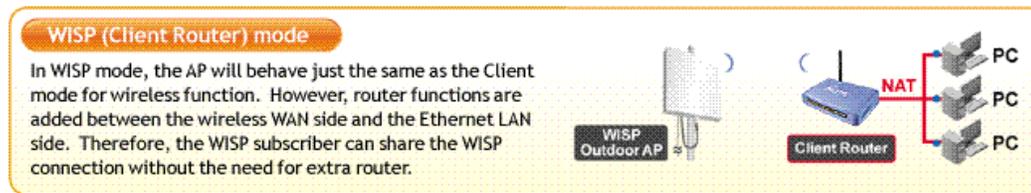

WL-5460AP is a client for WISP AP in WISP mode, and PC connects to WL-5460AP from LAN side.

So WL-5460AP can not broadcast SSID in WISP mode.

And this is an example for using WL-5460AP WISP + universal repeater function

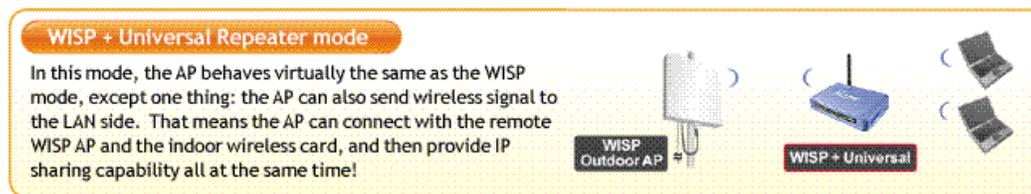

WL-5460AP is a client for WISP AP in WISP + Universal mode , and PC connect to WL-5460AP from wireless .

WL-5460AP can broadcast repeater SSID after connected to WISP AP.

So you must connect to WISP AP first.