

1. Please check the WL-5460CAM is use original setting

HOME | BASIC | ADVANCED | MAINTENANCE | LOGOUT | HELP

---

ADVANCED>>

Enable UPnP Control Point  
 None UPnP

Web Port	80
AV Control Port	5000
AV Streaming Port	5001
IP View Lite Port	5100

2. Check your router remote manger is not use port 80,if is 80 change it to another port like 8080
3. Use the port forwarding or virtual server function to open port 80 5000 5001 and 5100 let IPCAM can through router .

## Port Forwarding

behind the NAT firewall. These settings are only necessary if you wish to host some sort of server like a web server or mail server on the private local network behind your Gateway's NAT firewall.

**Enable Port Forwarding**

IP Address:  Protocol:  Port Range:  -  Comment:

Current Port Forwarding Table:

Local IP Address	Protocol	Port Range	Comment	Select
192.168.0.228	TCP+UDP	80	WEB	<input type="checkbox"/>
192.168.0.228	TCP+UDP	5000	AV control	<input type="checkbox"/>
192.168.0.228	TCP+UDP	5001	AV stream	<input type="checkbox"/>
192.168.0.228	TCP+UDP	5100	IP View	<input type="checkbox"/>