## HOW TO INSTALL OPENWRT to the AirLive WLA 5000AP

Your WLA-5000AP's warranty is void when using third party firmware. Install and use at your own risk. If your AP crashed as a result of installation, please refer to the **HOW TO Restore TO AirLive FIRMWARE** section in the very end of this guide.

## 1. Download the kernel + rootfs image at

http://openwrt.dlabac.net/Archiv/openwrt-ar531x-2.4-jffs2-4MB-zImage.www.bin 2. In the WLA-5000AP's web interface, choose Firmware Upgrade

<b>State</b>	Air Live         Multi-Function AP         www.airlive.com
	Setup Wizard     Device Status     Advanced Settings     System Tools     Logout
System Tools     Firmware Upgrade	츕 Firmware Upgrade
Configuration Save and Restore	Select the firmware file by clicking Browse, then click UPGRADE.
<ul> <li>Factory Default</li> <li>Reboot System</li> </ul>	瀏覽
	UPGRADE
	NOTE: 1. Do not power off the router while upgrading the firmware. 2. Some browsers would fail to locate the firmware file when there is any localized character in the firmware file path. Provide the firmware file path.

3. Select the firmware image file: openwrt-ar531x-2.4-jffs2-4MB-zImage.www.bin

- 4. flash
- 5. after the firmware is flashed, reboot

If at point 4 the device reports that the file is bad, follow these steps to avoid that "file signature check":

- a. Telnet into the WLA-5000AP (AP: telnet 192.168.1.1 CLIENT: telnet 192.168.1.2)
- b. enter " z\_debug signature disable" at the WLA-5000AP command prompt



- c. confirm the following prompt by typing "y"
- d. if you get a message saying "Signature check is now DISABLED!!!", that's precisely what you wanted to achieve
- e. return to point 2 and continue from there

After a successful firmware upgrade and a reboot, telnet into the re-flashed WLA-5000AP. The default IP Address is 192.168.1.1 mask 255.255.255.0

## HOW TO Restore to AirLive Firmware

- 1. cd /tmp
- 2. wget http://www.airlive.com/support/WLA-5000APv2/wla-5000ap-v2.00e23a.bin
- 3. restore wla-5000ap-v2.00e23a.bin
- 4. wait until the device flashes itself and reboots.