

1. Driver 0v51x:

Manufacturer Model

Aiptek HyperVcam Home
Aiptek HyperVcam Mobile
Alpha Vision Tech. AlphaCam SE (model AC-520)
Amitech AWK-300
Avaks AvCam USB-600
AVerMedia Intercam Elite
BestBuy EasyCam U
Chicony Twinklecam Pro
Creative Labs WebCam 3
Creative Labs WebCam Plus
Creative Labs WebCam Pro (model PD1030)
Dick Smith Electronics DSE Internet Camera & Microphone
D-Link DSB-C310
Elecom UCAM-C1C30
Elta WEBCam 8211 PCC
Ezonics EZ USB Cam II (OV6620)
GE (Target) EasyCam PC Camera Pro HO98064
Genius (OV518+)
Genius VideoCam Express (v1)
Hawking Tech. UC-110
Hawking Tech. UC-300
Hawking Tech. UC-310
Hawking Tech. UC-311
I-View NetView NV300M
Intel Me2Cam
Interbiometrics Securecam
LG Electronics LPC-UM10
Lifetec LT 9388
Lifeview RoboCam
LinkAV LV-C100
Maxell Maxcam (MPCC-1)
Maxxtro CAM22U
MediaForte MV300
MediaForte PC Vision 300

Medion MD9388
Mtekvision Zeca MV402
Mustek WCam 3X
NGS Show WebCam Plus
OmniVision OV7110 Eval Board
OmniVision OV511+/OV7620 Eval Board
OmniVision OV518+/OV7620 Eval Board("AVCAM REV 1.0 OCT 2000")
Oregon Scientific NC-100
Philips ToUCam XS (Model PCVC720K, old version)
Philips ToUCam II (Model PCVC820K/00)
Plustek OptiCam 300U
Prochips PCA-3100
Prochips PCC-2200K/W
Puretek H52PT-6007
Samsung Anycam MPC-M10
Suma eON
Swann SmartCAM Deluxe
Terratec TerraCam PRO
TEVion MD 9308
TRENDNet TV-PC301
Trust SpaceC@m USB
Trust SpaceC@m 150
Trust SpaceC@m 200
Trust SpaceC@m 300
Trust SpaceC@m 320 (OV519)
Typhoon WebShot 350
Waytech I-Pac VIC-30
Webeye 2000B

////////////////////////////////////

2. Philips and OEM webcams

- * Philips PCA645
- * Philips PCA646
- * Philips PCVC675
- * Philips PCVC680
- * Philips PCVC690
- * Philips PCVC720/40

- * Philips PCVC730
- * Philips PCVC740
- * Philips PCVC750
- * Askey VC010
- * Creative Labs Webcam 5
- * Creative Labs Webcam Pro Ex
- * Logitech QuickCam 3000 Pro
- * Logitech QuickCam 4000 Pro
- * Logitech QuickCam Notebook Pro
- * Logitech QuickCam Zoom
- * Logitech QuickCam Orbit
- * Logitech QuickCam Sphere
- * Samsung MPC-C10
- * Samsung MPC-C30
- * Sotec Afina Eye
- * AME CU-001
- * Visionite VCS-UM100
- * Visionite VCS-UC300

////////////////////////////////////

3.Driver SN9C10x

Vendor ID	Product ID	
-----	-----	
0x0c45	0x6001	/*Genius Videocam NB*/
0x0c45	0x6005	/*IC-Gear (IC Intracom) Travel Cam*/
0x0c45	0x6009	/*OneZero pcc-st3, SWEEEX WEBCAM*/
0x0c45	0x600d	/*Chicony Twinkle Cam Pro,Twinkle Cam*/
0x0c45	0x6024	
0x0c45	0x6025	/*Sangha X cam sangha*/
0x0c45	0x6028	/*Sitecom VP-001 Easycam*/
0x0c45	0x6029	/*Triplex Corporation i-mini PC camera, sweex webcam*/
0x0c45	0x602a	/*View-Cam M6215, GE EasyCam Plus HO98066, ????*/*
0x0c45	0x602b	/*Genius Webcam NB 300*/
0x0c45	0x602c	

0x0c45 0x6030
0x0c45 0x6080
0x0c45 0x6082
0x0c45 0x6083
0x0c45 0x6088
0x0c45 0x608a
0x0c45 0x608b
0x0c45 0x608c
0x0c45 0x608e
0x0c45 0x608f
0x0c45 0x60a0
0x0c45 0x60a2
0x0c45 0x60a3
0x0c45 0x60a8
0x0c45 0x60aa
0x0c45 0x60ab
0x0c45 0x60ac
0x0c45 0x60ae
0x0c45 0x60af
0x0c45 0x60b0
0x0c45 0x60b2
0x0c45 0x60b3
0x0c45 0x60b8
0x0c45 0x60ba
0x0c45 0x60bb
0x0c45 0x60bc
0x0c45 0x60be

////////////////////////////////////

4.Driver SPCA50X

Vendor ID Device ID Support Summary

{USB_DEVICE (0x0733, 0x0430)}, /* Intel PC Camera Pro */
{USB_DEVICE (0x0733, 0x0401)}, /* Intel Create and Share */
{USB_DEVICE (0x99FA, 0x8988)}, /* Grandtec V.cap */
{USB_DEVICE (0x0733, 0x0402)}, /* ViewQuest M318B */

```
{USB_DEVICE (0x0733, 0x0110)}, /* ViewQuest VQ110 */
{USB_DEVICE (0x040A, 0x0002)}, /* Kodak DVC-325 */
{USB_DEVICE (0x055f, 0xc420)}, /* Mustek gSmart Mini 2 */
{USB_DEVICE (0x055f, 0xc520)}, /* Mustek gSmart Mini 3 */
{USB_DEVICE (0x041E, 0x400A)}, /* Creative PC-CAM 300 */
{USB_DEVICE (0x084D, 0x0003)}, /* D-Link DSC-350 */
{USB_DEVICE (0x041E, 0x400B)}, /* Creative PC-CAM 600 */
{USB_DEVICE (0x8086, 0x0630)}, /* Intel Pocket PC Camera */
{USB_DEVICE (0x8086, 0x0110)}, /* Intel Easy PC Camera */
{USB_DEVICE (0x0506, 0x00df)}, /* 3Com HomeConnect Lite */
{USB_DEVICE (0x040a, 0x0300)}, /* Kodak EZ200 */
{USB_DEVICE (0x04fc, 0x504b)}, /* Maxell MaxPocket LE 1.3 */
{USB_DEVICE (0x08ca, 0x2008)}, /* Aiptek Mini PenCam 2 M */
{USB_DEVICE (0x08ca, 0x0104)}, /* Aiptek PocketDVII 1.3 */
{USB_DEVICE (0x08ca, 0x2018)}, /* Aiptek Pencam SD 2M */
{USB_DEVICE (0x04fc, 0x504a)}, /* Aiptek Mini PenCam 1.3 */
{USB_DEVICE (0x055f, 0xc530)}, /* Mustek Gsmart LCD 3 */
{USB_DEVICE (0x055f, 0xc650)}, /* Mustek MDC5500Z */
{USB_DEVICE (0x052b, 0x1513)}, /* Megapix V4 */
{USB_DEVICE (0x08ca, 0x0103)}, /* Aiptek PocketDV */
{USB_DEVICE (0x0af9, 0x0010)}, /* Hama USB Sightcam 100 */
{USB_DEVICE (0x1776, 0x501c)}, /* Arowana 300K CMOS Camera */
{USB_DEVICE (0x08ca, 0x0106)}, /* Aiptek Pocket DV3100+ */
{USB_DEVICE (0x08ca, 0x2010)}, /* Aiptek PocketCam 3M */
{USB_DEVICE (0x0458, 0x7004)}, /* Genius VideoCAM Express V2 */
{USB_DEVICE (0x04fc, 0x0561)}, /* Flexcam 100 */
{USB_DEVICE (0x055f, 0xc430)}, /* Mustek Gsmart LCD 2 */
{USB_DEVICE (0x04fc, 0xffff)}, /* Pure DigitalDakota */
{USB_DEVICE (0xabcd, 0xcdee)}, /* Petcam */
{USB_DEVICE (0x04a5, 0x3008)}, /* Benq DC 1500 */
{USB_DEVICE (0x046d, 0x0960)}, /* Logitech Inc. ClickSmart 420 */
{USB_DEVICE (0x046d, 0x0901)}, /* Logitech Inc. ClickSmart 510 */
{USB_DEVICE (0x04a5, 0x3003)}, /* Benq DC 1300 */
{USB_DEVICE (0x0af9, 0x0011)}, /* Hama USB Sightcam 100 */
{USB_DEVICE (0x055f, 0xc440)}, /* Mustek DV 3000 */
{USB_DEVICE (0x041e, 0x4013)}, /* Creative Pccam750 */
{USB_DEVICE (0x060b, 0xa001)}, /* Maxell Compact Pc PM3 */
{USB_DEVICE (0x04a5, 0x300a)}, /* Benq DC3410 */
```

```

{USB_DEVICE (0x04a5, 0x300c)}, /* Benq DC1016 */
{USB_DEVICE (0x0461, 0x0815)}, /* Micro Innovation IC200 */
{USB_DEVICE (0x046d, 0x0890)}, /* Logitech QuickCam traveler */
{USB_DEVICE (0x10fd, 0x7e50)}, /* FlyCam Usb 100 */
{USB_DEVICE (0x06e1, 0xa190)}, /* ADS Instant VCD */
{USB_DEVICE (0x055f, 0xc220)}, /* Gsmart Mini */
{USB_DEVICE (0x0733, 0x2211)}, /* Jenoptik jdc 21 LCD */
{USB_DEVICE (0x046d, 0x0900)}, /* Logitech Inc. ClickSmart 310 */
{USB_DEVICE (0x055f, 0xc360)}, /* Mustek DV4000 Mpeg4 */
{USB_DEVICE (0x08ca, 0x2024)}, /* Aiptek DV3500 Mpeg4 */
{USB_DEVICE (0x046d, 0x0905)}, /* Logitech ClickSmart820 */
{USB_DEVICE (0x05da, 0x1018)}, /* Digital Dream Enigma 1.3 */
{USB_DEVICE (0x0c45, 0x6025)}, /* Xcam Shanga */
{USB_DEVICE (0x0733, 0x1311)}, /* Digital Dream Epsilon 1.3 */
{USB_DEVICE (0x041e, 0x401d)}, /* Creative Webcam NX ULTRA */
{USB_DEVICE (0x08ca, 0x2016)}, /* Aiptek PocketCam 2 Mega */
{USB_DEVICE (0x0734, 0x043b)}, /* 3DeMon USB Capture aka */
{USB_DEVICE (0x041E, 0x4018)}, /* Creative Webcam Vista (PD1100)
*/
{USB_DEVICE (0x0546, 0x3273)}, /* Polaroid PDC2030 */
{USB_DEVICE (0x041e, 0x401f)}, /* Creative Webcam Notebook PD1171
*/
{USB_DEVICE (0x041e, 0x4017)}, /* Creative Webcam Mobile PD1090
*/
{USB_DEVICE (0x046d, 0x08a2)}, /* Labtec Webcam Pro */
{USB_DEVICE (0x055f, 0xd003)}, /* Mustek WCam300A */
{USB_DEVICE (0x0458, 0x7007)}, /* Genius VideoCam V2 */
{USB_DEVICE (0x0458, 0x700c)}, /* Genius VideoCam V3 */
{USB_DEVICE (0x0458, 0x700f)}, /* Genius VideoCam Web V2 */
{USB_DEVICE (0x041e, 0x401e)}, /* Creative Nx Pro */
{USB_DEVICE (0x0c45, 0x6029)}, /* spcaCam@150 */
{USB_DEVICE (0x0c45, 0x6009)}, /* spcaCam@120 */
{USB_DEVICE (0x0c45, 0x600d)}, /* spcaCam@120 */
{USB_DEVICE (0x04fc, 0x5330)}, /* Digitrex 2110 */
{USB_DEVICE (0x055f, 0xc540)}, /* Gsmart D30 */
{USB_DEVICE (0x0ac8, 0x301b)}, /* Asam Vimicro */
{USB_DEVICE (0x041e, 0x403a)}, /* Creative Nx Pro 2 */
{USB_DEVICE (0x055f, 0xc211)}, /* Kowa Bs888e Microcamera */

```

```

{USB_DEVICE (0x0ac8, 0x0302)}, /* Z-star Vimicro zc0302 */
{USB_DEVICE (0x0572, 0x0041)}, /* Creative Notebook cx11646 */
{USB_DEVICE (0x08ca, 0x2022)}, /* Aiptek Slim 3200 */
{USB_DEVICE (0x046d, 0x0921)}, /* Labtec Webcam */
{USB_DEVICE (0x046d, 0x0920)}, /* QC Express */
{USB_DEVICE (0x0923, 0x010f)}, /* ICM532 cams */
{USB_DEVICE (0x055f, 0xc200)}, /* Mustek Gsmart 300 */
{USB_DEVICE (0x0733, 0x2221)}, /* Mercury Digital Pro 3.1p */
{USB_DEVICE (0x041e, 0x4036)}, /* Creative Live ! */
{USB_DEVICE (0x055f, 0xc005)}, /* Mustek Wcam300A */
{USB_DEVICE (0x041E, 0x403b)}, /* Creative Webcam Vista (VF0010)
*/
{USB_DEVICE (0x0545, 0x8333)}, /* Veo Stingray */
{USB_DEVICE (0x0545, 0x808b)}, /* Veo Stingray */
{USB_DEVICE (0x10fd, 0x8050)}, /* Typhoon Webshot II USB 300k */
{USB_DEVICE (0x0546, 0x3155)}, /* Polaroid PDC3070 */
{USB_DEVICE (0x046d, 0x0928)}, /* Logitech QC Express Etch2 */
{USB_DEVICE (0x046d, 0x092a)}, /* Logitech QC for Notebook */
{USB_DEVICE (0x046d, 0x08a0)}, /* Logitech QC IM */
{USB_DEVICE (0x0461, 0x0a00)}, /* MicroInnovation WebCam320 */
{USB_DEVICE (0x08ca, 0x2028)}, /* Aiptek PocketCam4M */
{USB_DEVICE (0x08ca, 0x2042)}, /* Aiptek PocketDV5100 */
{USB_DEVICE (0x08ca, 0x2060)}, /* Aiptek PocketDV5300 */
{USB_DEVICE (0x04fc, 0x5360)}, /* Sunplus Generic */
{USB_DEVICE (0x046d, 0x08a1)}, /* Logitech QC IM 0x08A1 +sound*/
{USB_DEVICE (0x046d, 0x08a3)}, /* Logitech QC Chat */
{USB_DEVICE (0x046d, 0x08b9)}, /* Logitech QC IM ??? */
{USB_DEVICE (0x046d, 0x0929)}, /* Labtec Webcam Elch2*/
{USB_DEVICE (0x10fd, 0x0128)}, /* Typhoon Webshot II USB 300k
0x0128 */
{USB_DEVICE (0x102c, 0x6151)}, /* Qcam Sangha CIF */
{USB_DEVICE (0x102c, 0x6251)}, /* Qcam xxxxxx VGA */
{USB_DEVICE (0x04fc, 0x7333)}, /* PalmPixDC85*/
{USB_DEVICE (0x06be, 0x0800)}, /* Optimedia*/
{USB_DEVICE (0x2899, 0x012c)}, /* Toptro Industrial*/
{USB_DEVICE (0x06bd, 0x0404)}, /* Agfa CL20*/
{USB_DEVICE (0x0000, 0x0000)}, /* MystFromOri Unknow Camera */

```