WMU-6500FS FTP Server Setting

WMU6500FS setting

1. Run the WMU-6500FS utility to find it



2. Press "Query" to find 6500FS . Password is "airlive"

AirLive WMU-6500FS Configure	tion		
192.168.0.122		• Query	
Air Live	Wireless H	lard Drive 💮 🕄 🔞 🤇	0
Machine IP Host Name MAC address	192.168.0.122 Airlive_Storage 00-50-18-21-D2-27		
DHCP Mode Wireless Status Wireless Mode	Auto Mode Enable AP only mode ,SSID is	airlive.	
Version Devices	R4.00b4 DISK USB1 USB2	OK Not Ready Not Ready	
You don't have administrati to browse this page, or ac System P	ive rights or you have beer tivate this function. Please Password (defaul	n idle too long, so you are not al login as administrator and try a lt: airlive) Login	llowed gain!

3. Select storage configuration >> File sharing >> FTP service configuration

- - 	Disk Utility	File Sharing	Access Control	File Browser
Air Live'	Basic Setting -			
Status	Computer Name		Airlive_Storage	
\geq	WorkGroup		Mshome	
Network Settings	Server Commer	it	samba server	
Storage Configuration				Save Undo
Advanced Tools				
Misc.				
Download Assistant				
Logout			C	FTP Service Configuration

4. Select FTP Enable

	Disk Utility	File Sharing	Access Control	File Browser	
Air Live'	FTP Setting —				
Status	FTP		🔘 Disable	💿 Enable	
Network Settings	FTP Max Connec	tion per IP	2 🗸		
Network Settings	FTP MAX Clients		5 🗸		
Storage Configuration	Client Support L	ITF8	💿 No (`	res	
	Codepage	LatinI+ Eur	ope(CP850)	*	
Misc.					
Download Assistant					
Logout					Save Undo

5. Go to Storage Configuration>>Access Control page select Authorization mode and save (use Authorization mode must have two partition ,see the last page please)

	Disk Utility	File Sharing	Access Control	File Browser
Air Live'	User Access C	onfiguration —		
Status	Security Level	🔘 Guest m	ode 💿 Authorization	mode
Network Settings	* :	** Quota function	i disable at Guest Moo	le *** Save
Storage Configuration				
Advanced Tools				
Misc.				
Download Assistant				
Logout			User	Configuration

6. Select User Configuration

	Disk Utility	File Sharing	Access Control	File Browser
Air Live'	User Access C	onfiguration —		
Status	Security Level	🔘 Guest m	ode 💿 Authorization	mode Save
Network Settings	Quota Configu	ration ———		
	Quota	📀 Disable	🔘 Enable	
Configuration		Saved	l! Take effective right	now Save
Advanced Tools				
Misc.				
Download Assistant				
Logout			User	Configuration

7. Insert "User Name" and "Password" Quoto 100 MB then Add

	Disk Utility	File Sharing	Access Control	File Browser
Air Live'	User Access C	onfiguration —		
Status	Username	Password	<u>Quota(MBytes</u>	<u>5)</u>
Network Settings				
Storage	User Name 🛛 ai	irlive (M	lax. 20 users)	
Configuration	Password ai	irlive		
	Quota	MBytes [Add Delete C	ancel
Advanced roois	Administrator Setup			
Misc.	Administrator account	None	Save	
Download Assistant				
			Quota	Status Back

Appendix

Authorization mode in WMU6500FS

If you use WNU6500FS first time and just have one partition, when you select authorization mode , system will remind you create private directory



After OK system will auto into Fdisk utility , user can change the Public partition and Private partition size manually

Air Live	FDisk Utility ir Live Total Disk Capacity = 19469 MB Change the partition capability:		
	Partition	Partition Size(MB)	Change Size(MB)
Network Settings	Public	19336	10133
	Private	None	9336
Advanced Tools Misc. Download Assistant Logout	Apply (Jndo) Back ! Change the disk par	tition will cause disk

When apply to change size ,system will into formating

Air Live	Formatting
Status	1st partition is formating41 %
Network Settings	
Storage Configuration	
Advanced Tools	
Misc.	
Download Assistant	
Logout	

When formating 100% the partition is create OK