

WMU-6500FS Wireless Client Mode Setting

1. Open NetworkSettings-Wireless
2. Select Wireless Client mode and select Next

Air Live DHCP Wireless

Basic Settings

☒ Wireless Enabled Save

Advanced Settings

☐ AP only mode
Create a wireless LAN.

☒ **Wireless Client mode**
Connects to any available wireless network.

☐ WDS repeater mode
Connects to other wireless AP devices with AP function.

☐ WDS bridge mode
Connects to other wireless AP devices without AP function.

Undo Next

3. Scan AP and select your AP

Air Live DHCP Wireless

Wireless Client mode - AP List

Connect to [WN5000rv2] Refresh

ID	SSID	Encryption	Quality
1	wireless123	WEP	25
2	CL-WLAN	WPA-AES	15
3	SMC	NONE	10
4	corega	NONE	25
5	CL-GUEST	WPAPSK-TKIP	15
6	WN5000rv2	WEP	100
7	Ocean World Group	WEP	5
8	Free Internet Access	NONE	15

Scan AP Previous Next

Back My Favorite APs...

4. Input your key

Air Live DHCP Wireless

WEP Key setting

WEP KEY

KEY 1

Please make sure the key is valid.
5 or 13 ascii characters eg: passd or thisisapasswd
10 or 26 hexadecimal characters eg: 0123456789 or 01234567890123456789012345

Back Connect

5. Select OK to connect your AP

Status

Network Settings

Storage Configuration

Advanced Tools

Misc.

Download Assistant

Logout

DHCP

Wireless

WEP Key setting

WEP KEY1234567890

KEY1

Please make sure the key is valid.
5 or 13 ascii characters eg: passwd or thisisapasswd
10 or 26 hexadecimal characters eg: 0123456789 or 01234567890123456789012345

Microsoft Internet Explorer

?

Connect to remote AP may reboot the device, because IP may change. Are you sure to change settings?

OK

Cancel

Back

Connect