

WT-2000ARM downgrade firmware process

The screenshot shows the 'Maintenance' tab selected in the top navigation bar. Under the 'Firmware/Romfile Upgrade' section, the 'New Firmware Location' field contains the path 'C:\AirLive_A_2.7.0.28_P2_1.6_ras'. Below the form, a status message indicates 'Upload successfully, Please wait system restart...'.

- Click Maintenance- firmware Push Browser button and select the firmware AirLive_A_2.7.0.28_P2_1.6_ras to upgrade.

The screenshot shows the 'Maintenance' tab selected in the top navigation bar. Under the 'Firmware/Romfile Upgrade' section, the 'New Firmware Location' field contains the path 'C:\AirLive_A_2.7.0.28_P2_1.6_ras'. Below the form, a status message indicates 'Upload successfully, Please wait system restart...'.

- Please wait while till System restart.

AirLive

AirLive WT-2000ARM Turbo-G ADSL Router

Maintenance	Quick Start	Interface Setup	Advanced Setup	Access Management	Maintenance	Status	Help
	Administration	Time Zone	Firmware	SysRestart	Diagnostics		

Firmware Upgrade

Current Firmware Ver : 2.7.0.28(RUE0.C2)3.5.18.0

New Firmware Location :

Status :  It might take several minutes, don't power off it during upgrading. Device will restart after the upgrade.

- Upload the 2.15 firmware back to device. Push Browser button and select the firmware AirLive_A_2.7.0.28_P2_1.5_ras to upgrade.