

Q: My ISP disconnect the ADSL connection frequently, how can I make my router to reconnect automatically?

A: **Free World Dialup(FWD) Setup For Airlive ePhone-1000S**

Freeworld Dialup(FWD) is a free SIP VoIP server provider. If you have an Airlive ePhone-1000S from OvisLink Corp., you can setup the connection easily using the following step:

(Note: OvisLink Corp is not affiliated with FWD. The VoIP phone also works with majority of other SIP proxy service. The following instruction is for your own information only)

1. Click on this link to register with FWD service.

2. After completing the registration. The FWD will assign you with a FWD number (this is your phone number), username, and password.

3.

OvisLink IP-Phone

3.

Network Settings

IP Type	dhcp	PPP ID		PPP PIN	
Local IP	192.168.0.40	Subnet Mask	255.255.255.0	Router IP	192.168.0.254
DNS	192.168.0.254	DNS2	0.0.0		

Protocol settings

5.

Use Service	<input checked="" type="checkbox"/>	Register TTL	15390	Jitter Size	0	6.
Service Type	common	Service Addr	fwdnat.pulver.com:5082	Service ID	fwd.pulver.com	
NAT Traversal	disable	NAT Addr		NAT TTL	30	
Phone Number	784668	Account	784668	PIN	*****	9.

7.

Phone Settings

Use Dialplan	disable	Dial Number		DDD Code	10
IDD Code	86	IDD Prefix	00	DDD Prefix	0
Forward Number		FWD Noanswer	<input type="checkbox"/>	FWD Always	<input type="checkbox"/>
FWD Busy	<input type="checkbox"/>	Answer	30	Call Waiting	<input type="checkbox"/>

Audio Settings

VAD	<input type="checkbox"/>	AGC	<input type="checkbox"/>	AEC	<input checked="" type="checkbox"/>
Codec 1	g729	Codec 2	null	Codec 3	null
Codec 4	null	Codec 5	null	G.723.1 High Rate	<input checked="" type="checkbox"/>

4. After you can connect with Internet, go down to the **Protocol Settings** part.

5. Enter "fwdnat.pulver.com:5082" in the **Server Address** Section

6. Enter "fwd.pulver.com" in the **Service ID** Section

7. Enter the FWD number in the **Phone Number** Section.

	8.	Enter the FWD number in the Account Section
	9.	Enter the password from FWD in the PIN Section
	10.	Now, please press Save/Reboot
	11.	The ePhone-1000S must reboot to make the new settings to take effect.
	12.	After rebooting, the ePhone-1000S will attend to register the FWD SIP server, in the meantime, the status LED is blinking.
	13.	After successfully registered, you can check the phone number on the LCD.