

**Q : No live view in 9 or 16 division setup.**

A : When using the CoreNVR 9/16 and there is live view in 4 channel division, but not when you switch to 9 or 16 division. There are two options to display the live image in 9 and 16 division modes. Either turn the 3th stream on or change the 2th stream from MJPEG to H.264 in your camera.