

Q:How to setup DYNDNS on the CoreNVR 9 and CoreNVR 16?

A: First login to the CoreNVR and go to the “System Settings” page.

1 - Go to “Network”.

2 - Change the port HTTP port number from default 80 to a different number for example 9000


Note: you would need open the port number for the IP address of the CoreNVR in your router
Please see the port forwarding in your routers userguide.

3 - Enable DDNS.

4 - Select “dyndns.org” from the pulldown menu.

5 - Enter your dyndns account information, Hostname, Account and Password.

6 - Press “Test” button to see the remote IP address, this address should be the same as your router is receiving.

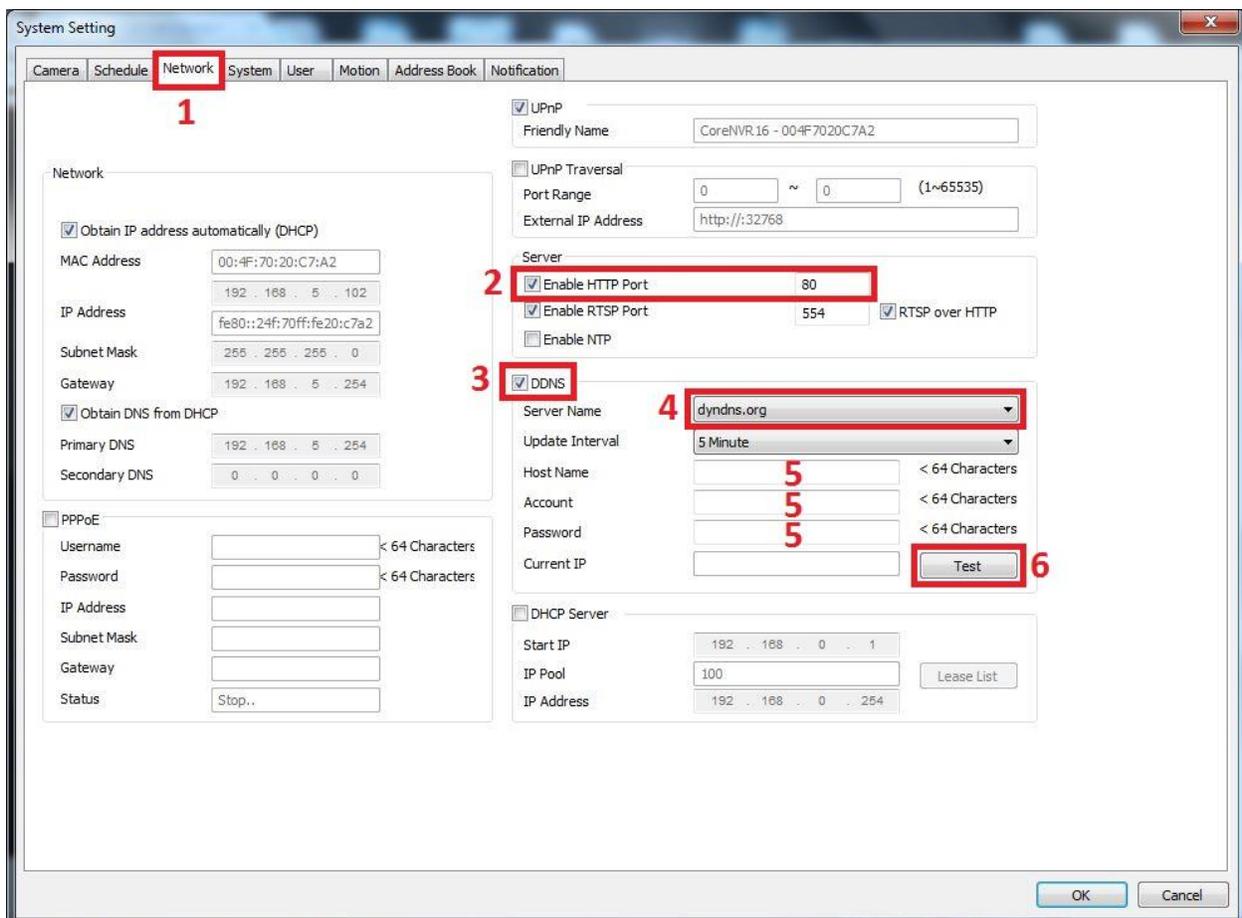

The setup is now complete. Press OK to save the settings