


Q: Firmware upgrading failed, how to recover Air3GII?

A: Please refer the followings to upgrade firmware again


1. Unplug the power of your device.

2. Hold the hardware reset button while plugging the power.

After 10seconds, the Mobile LED will flash very fast, please release the reset button

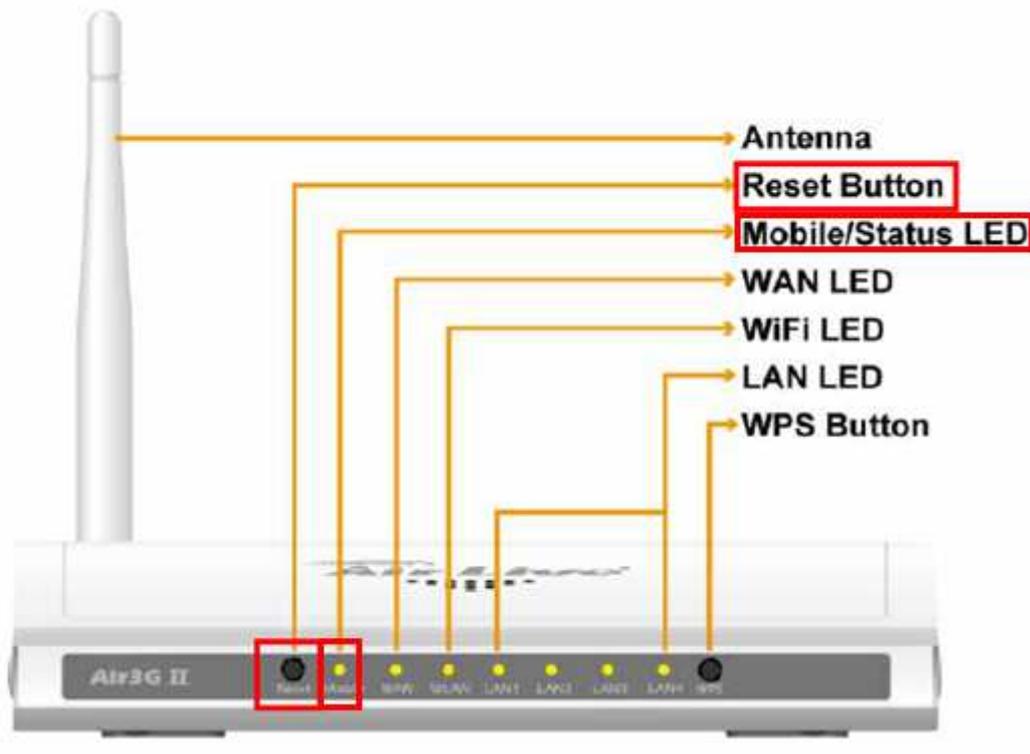

3. Set your PC's IP address to 192.168.123.100. Connect the device's LAN port to your PC.

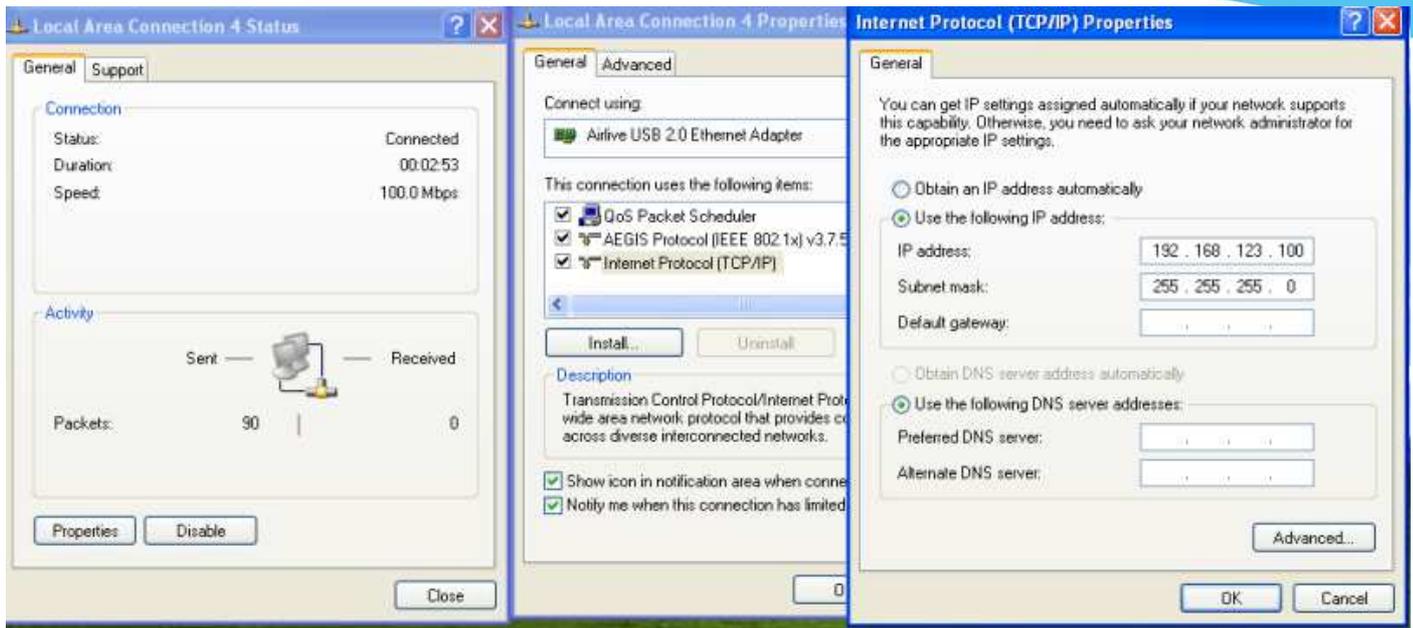


4. Open your web browser (Recommended browser: IE), then type "192.168.123.254". You will see the emergency function page where you can upload your device's firmware.




Firm ware Filename

- The procedure will take about 3 minutes to upgrade firmware.
If it succeeds , the message will show 3 seconds.

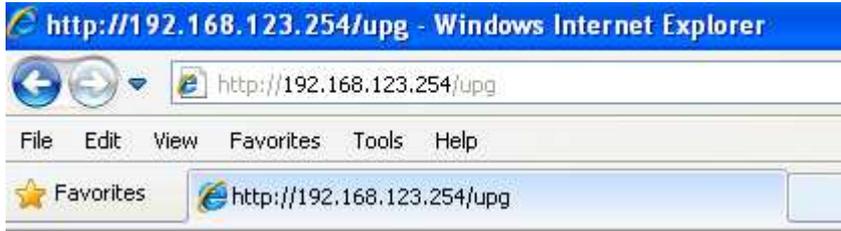

SUCCESS

- Please unplug and re-plug the power of your device manually.
- Please wait a while until it boots up.
Then press the hardware reset button over 10 seconds to restore it to factory default setting. After resetting, the device's IP is 192.168.1.254.
- Set your PC's IP address to "Obtain an IP address Automatically". The device will provide your PC a valid IP address.

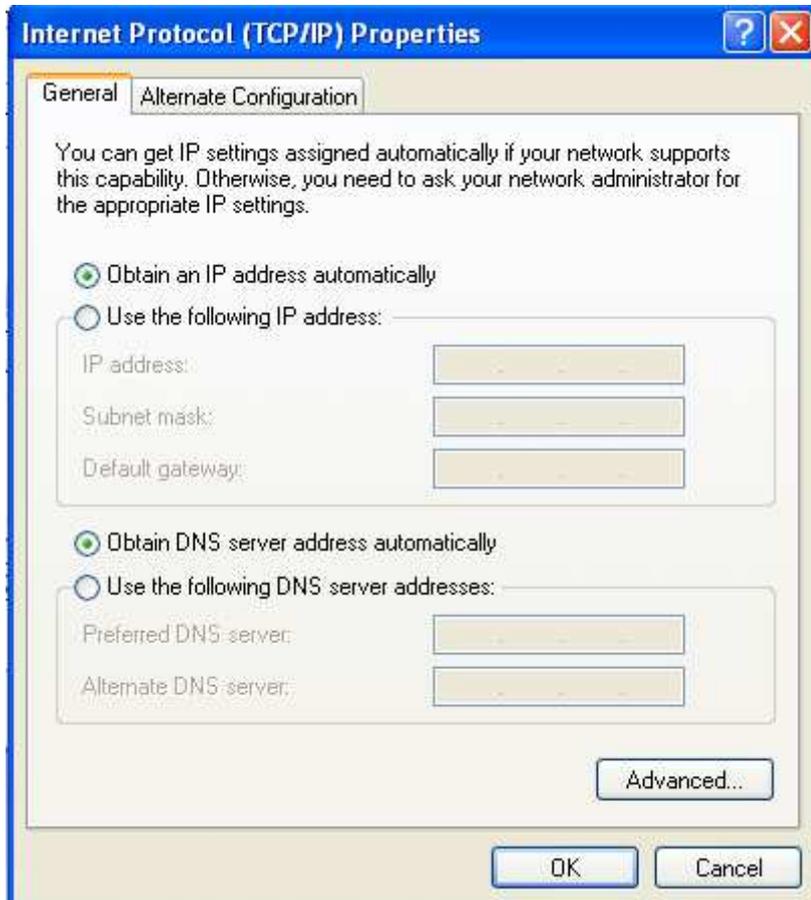

9. Open your web browser, and then type "192.168.1.254".
You will get into the web management.



The screenshot shows the web management interface for an Air Live Air3GII Wireless 11n 150Mbps 3G Broadband Router. The page includes a navigation menu, a system password field, and three main status sections: System Status, Wireless Modem Information, and Wireless Status.

System Status [HELP]

Item	Status	Sidenote
IP Address	0.0.0.0	
Subnet Mask	0.0.0.0	
Gateway	0.0.0.0	
Domain Name Server	0.0.0.0 , 0.0.0.0	
Connection Time	-	

Wireless Modem Information

Item	Status	Sidenote
Card Info	N/A	Supported Cards List
Link Status	Connecting...	
Signal Strength	N/A	
Network Name	N/A	

Wireless Status

Item	WLAN Status	Sidenote