

Camera Day/Night Mode Adjustment





Day light is with visible lights and IR lights. Human eyes cannot see IR lights, but COMS can, so the color of image from COMS is red. In order to let image match to what people see, camera needs IR cut filter for day light.

Day light with IR-Cut filter

Day light without IR-Cut filter





Powered by Ovislink Corp. 1993 - 2014



At night, camera needs IR light to enhance the image. IR-cut filter is between lens and sensor, so the IR light will be blocked. Therefore, IR-cut filter should be on at day time and off at night time.

With IR LED at Night



Without IR LED at Night



Powered by Ovislink Corp. 1993 - 2014



Photo sensor can detect lights but the timing of the day/night mode switch is fixed. If user wants to adjust the timing of the day/night mode, use can adjust the timing manually in the camera web UI.

Photo Sensor




Web UI



Powered by Ovislink Corp. 1993 - 2014



Go to Video=>Exposure=>Others=>IR-Cut

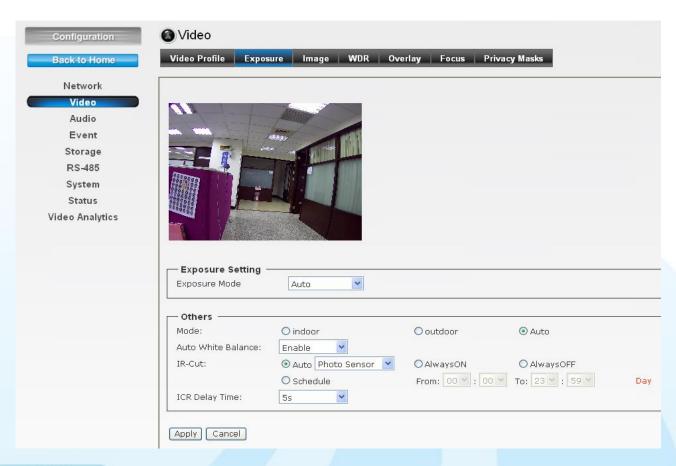




In the IR-Cut, select Manual and click Apply button.

Others			
Mode:	O indoor	Ooutdoor	Auto
Auto White Balance:	Enable 💌		
IR-Cut:	Auto Manual	○AlwaysON	O AlwaysOFF
	O Schedule	From: 00 🕶 : 00 🕶	To: 23 🕶 : 59 🕶
ICR Delay Time:	5s 💌		
—			
Current Value 3176 Default			
Night Mode Threshold 2000 (0 ~ 10000)			
Day Mode Threshold 2700 (0 ~ 10000)			
Apply Cancel			




Please click "Apply" to save the setting to the camera. It needs to be done each adjustment. Otherwise, the setting won't be working.

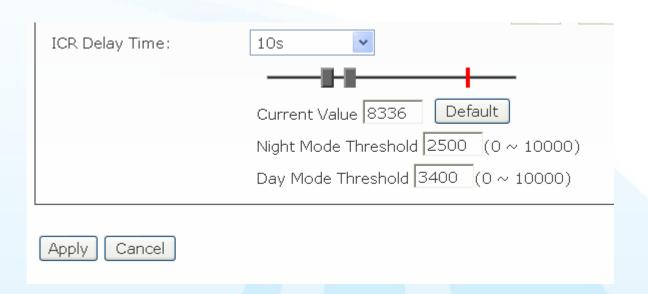



- A. Red bar: the current light value
- B. Night mode threshold: When the red bar is at the left side of night mode threshold, camera will be at the night mode. (Section 3)
- C. Day mode threshold: When the red bar is at the right side of day mode threshold, camera will be at the day mode. (Section 1)

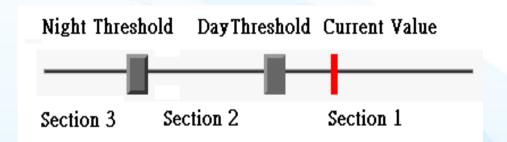

B. Night Mode




C. Day Mode






- A. Red bar: the current light value
- B. Night mode threshold: When the red bar is at the left side of night mode threshold, camera will be at the night mode. (Section 3)
- C. Day mode threshold: When the red bar is at the right side of day mode threshold, camera will be at the day mode. (Section 1)

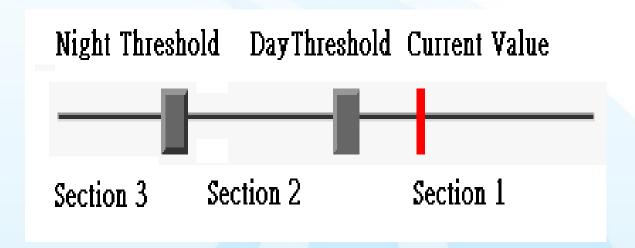




When camera is from day to night, the red bar will go from section 1 to section 3. Section 1 is at day mode. Section 2 is at day mode. Section 3 is at night mode.

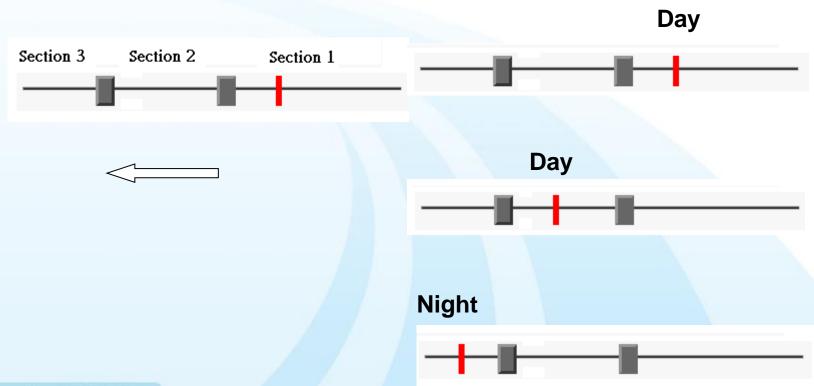



When camera is from night to day, the red bar will go from section 3 to section 1, Section 3 is at night mode. Section 2 is at night mode. Section 1 is at day mode.

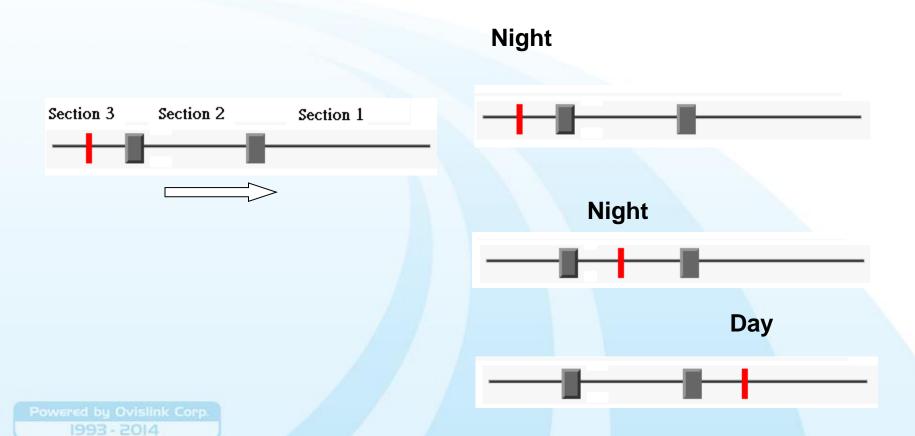






If user wants to postpone the timing of the day mode time, please adjust night mode threshold to the left.







If the camera keeps switching between the day and night mode, please adjust the day mode threshold to the right side of the red bar.

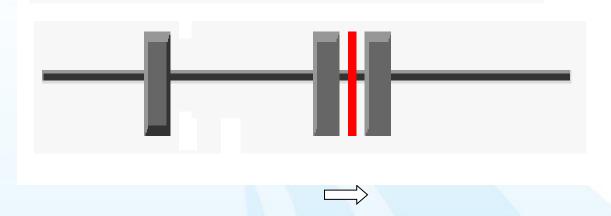





If user wants the current light is at day mode, please adjust the night mode threshold to the left side of the red bar.







If user wants the current light is at night mode, please adjust the night mode threshold to the right side of the red bar.





Powered by Ovislink Corp. 1993 - 2014