


CoreNVR 9/16 New Function – Division Group

1. Go “System Management” in CoreNVR 9/16.



2. Select “Simple”, “Professional” or “Advanced” in “Style”.

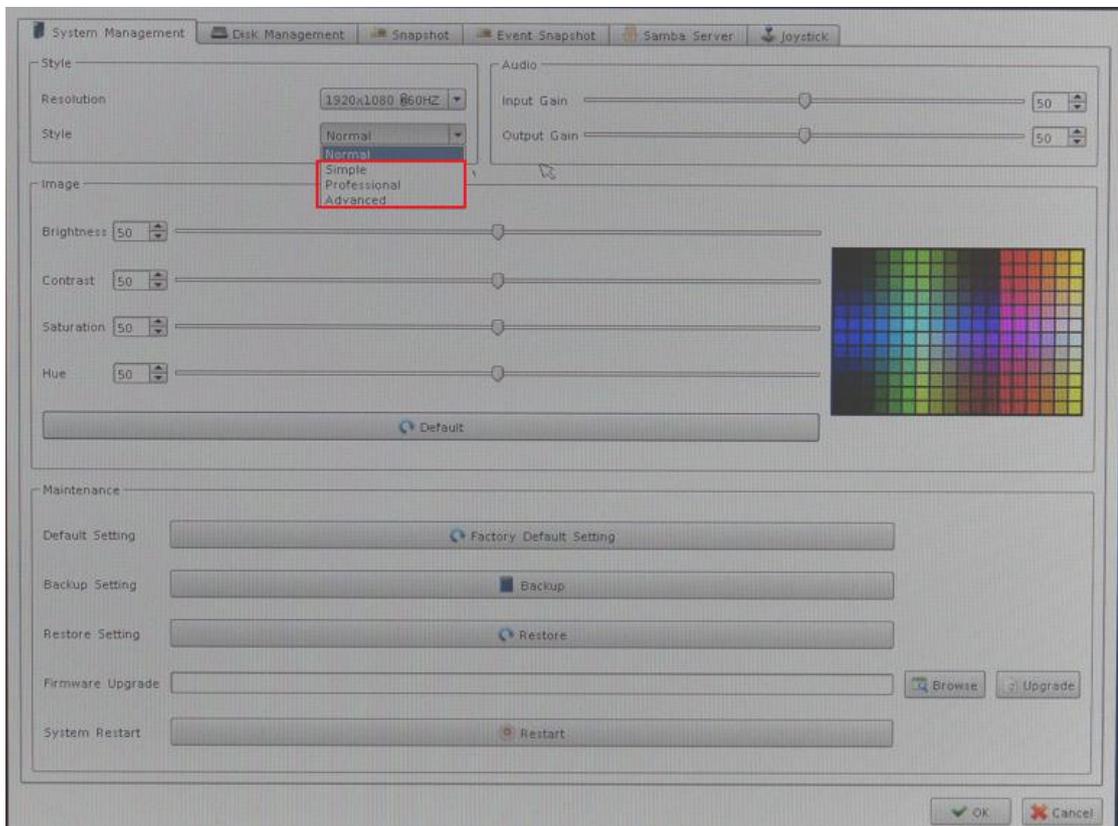

3. Get into the "Setting" of "Division Group".



4. It is allowed to change the Group Name, Division, and Camera in "Group Preview".

