



How to configure AirVideo-100v2 to Change OSD Login Page

Step1: Please insert the supplied CD into your PC, and click “**Install Driver & Utility**”.

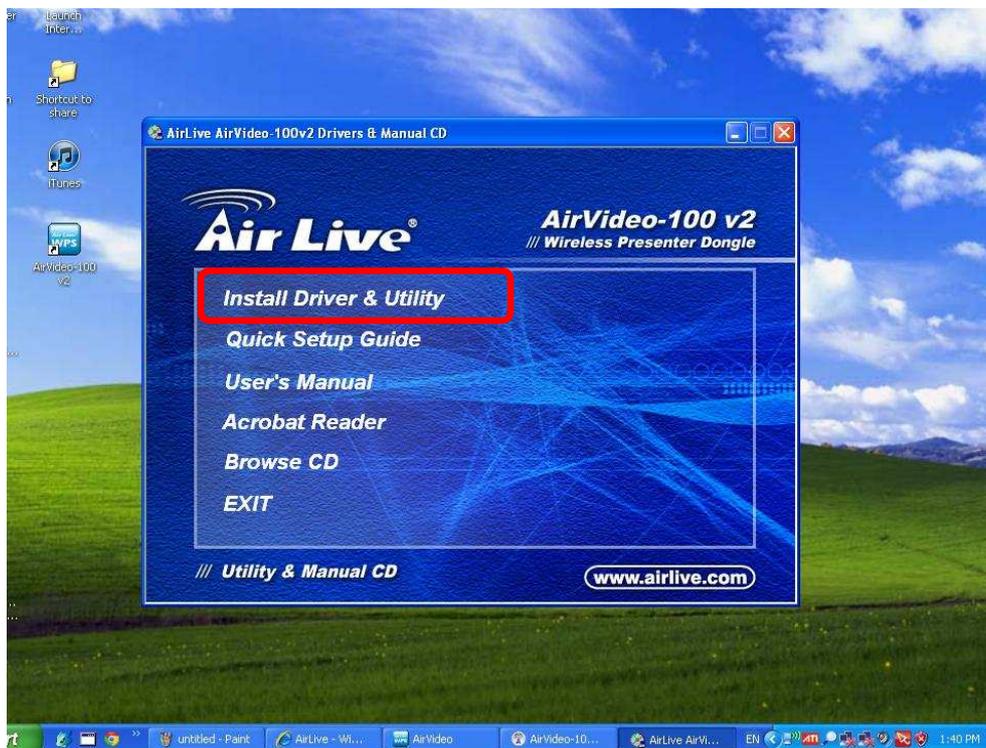


Step2: There are two folders, please click “**Applications**” .

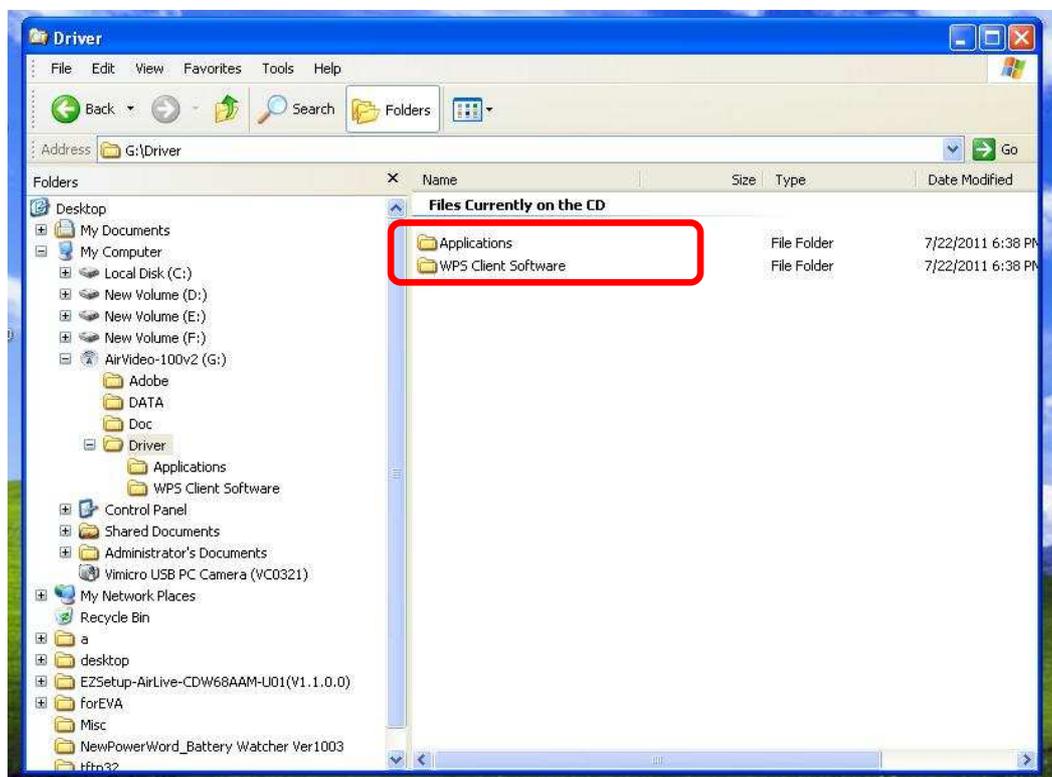


How to configure AirVideo-100v2 to Change OSD Login Page

Step3: Click "IBMaker_565.exe" to start installing.

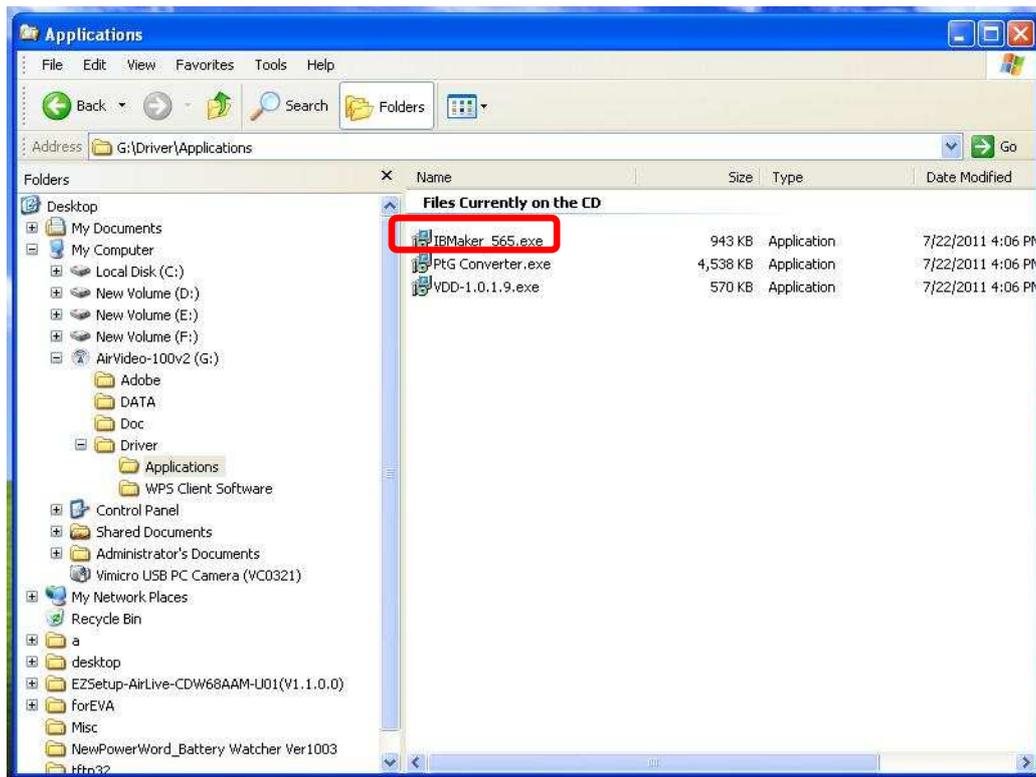

Step3: Select the language to use during the installation.

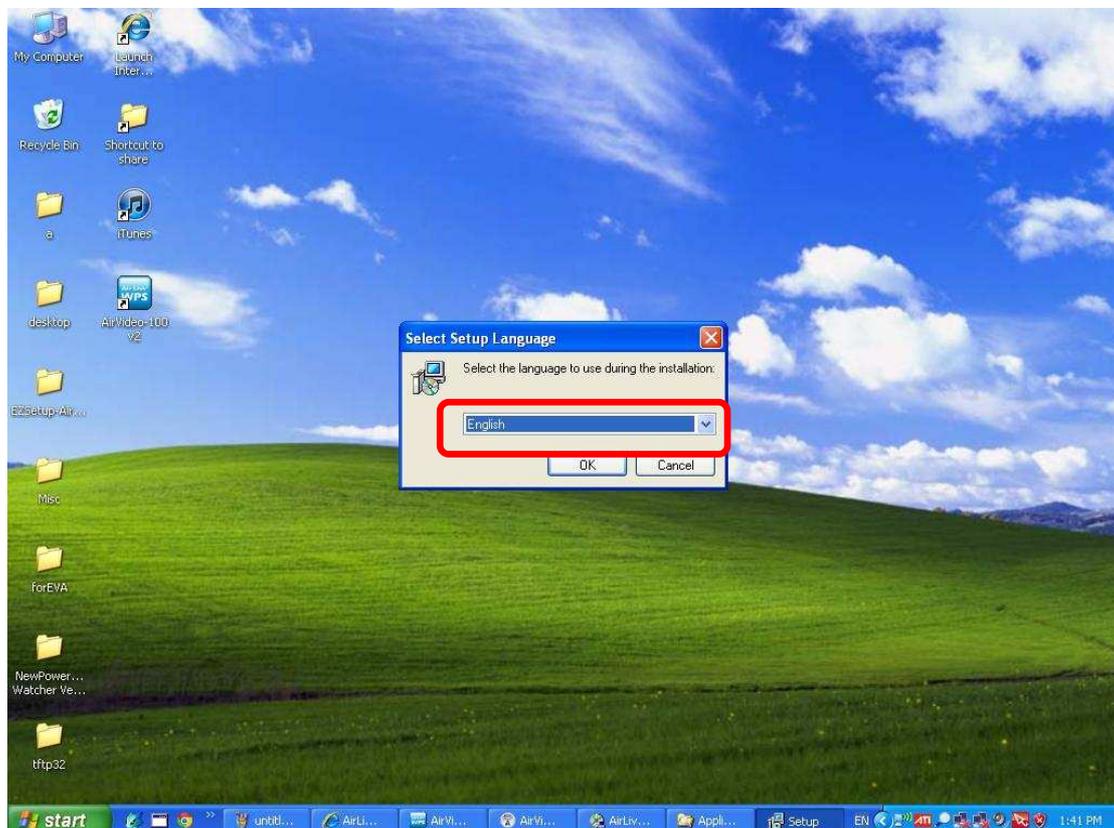


How to configure AirVideo-100v2 to Change OSD Login Page

Step4: Click "Next" to continue.




Step5: IBMaker shortcut will appear on Desktop after finished installing.

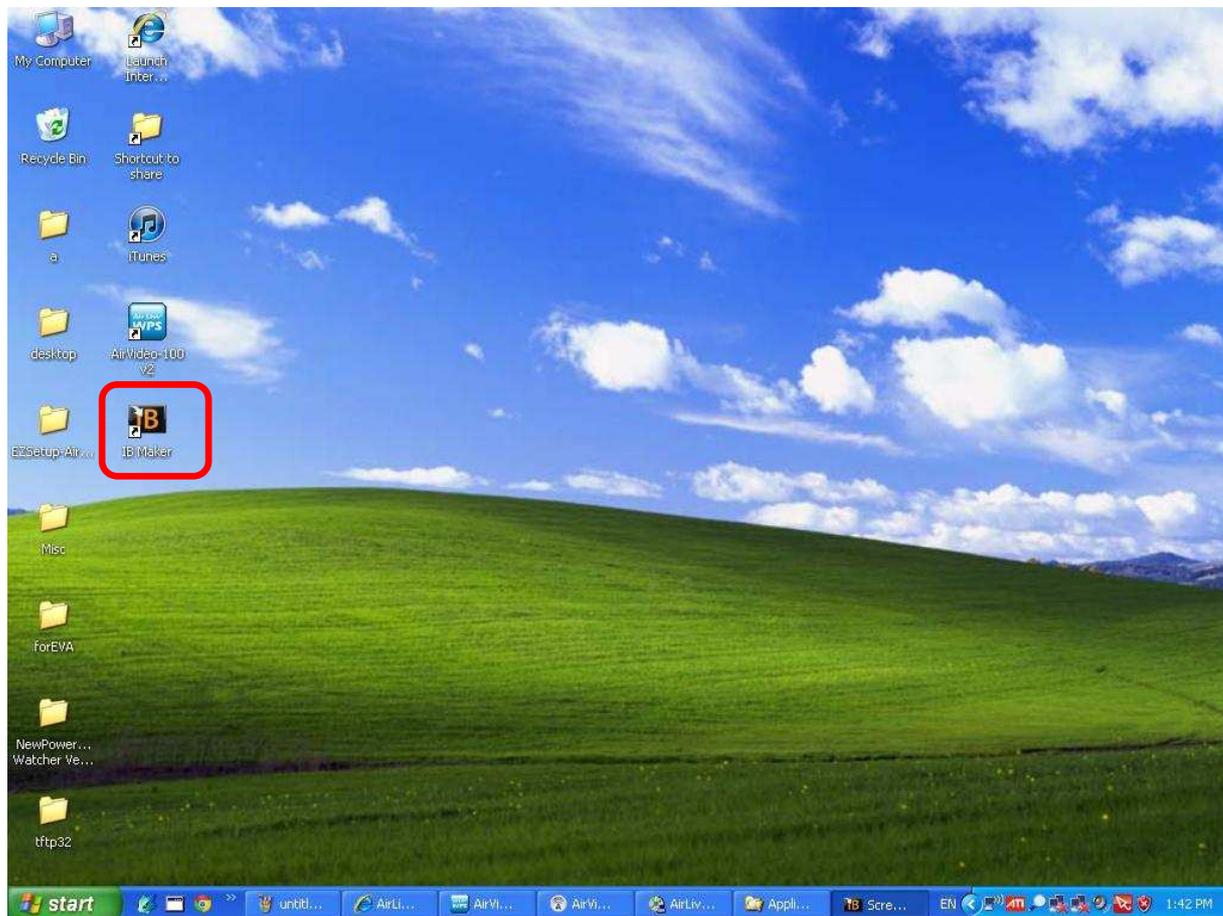


How to configure AirVideo-100v2 to Change OSD Login Page

Step6: Double-click IBMarker, the main screen is shown as below.

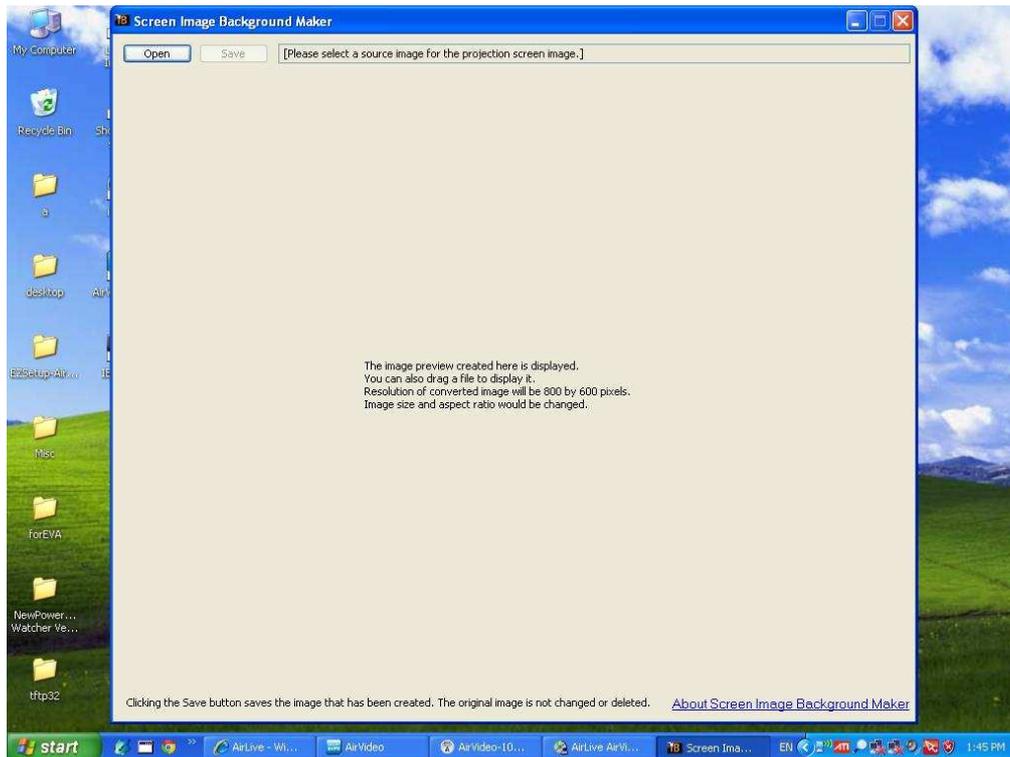


Step7: Click "Open" to open the file which you want to convert.

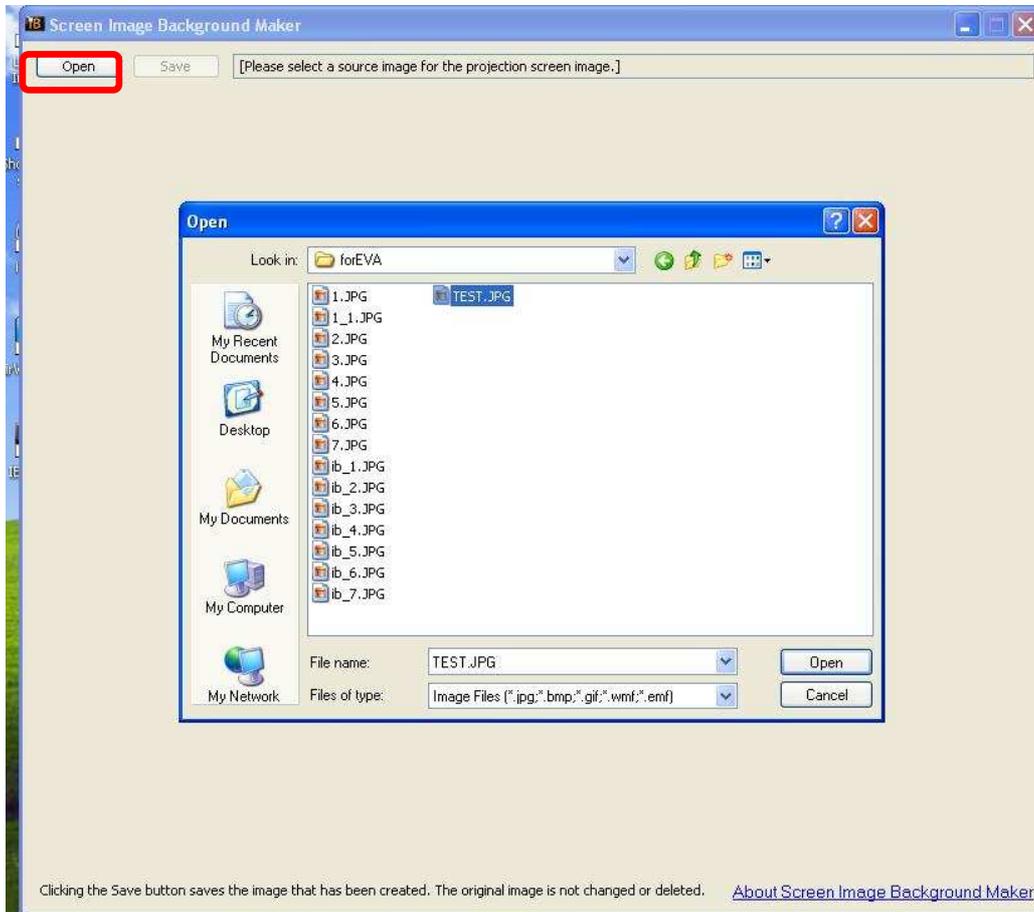


How to configure AirVideo-100v2 to Change OSD Login Page

Step8: Click **“Save”** to save the file.

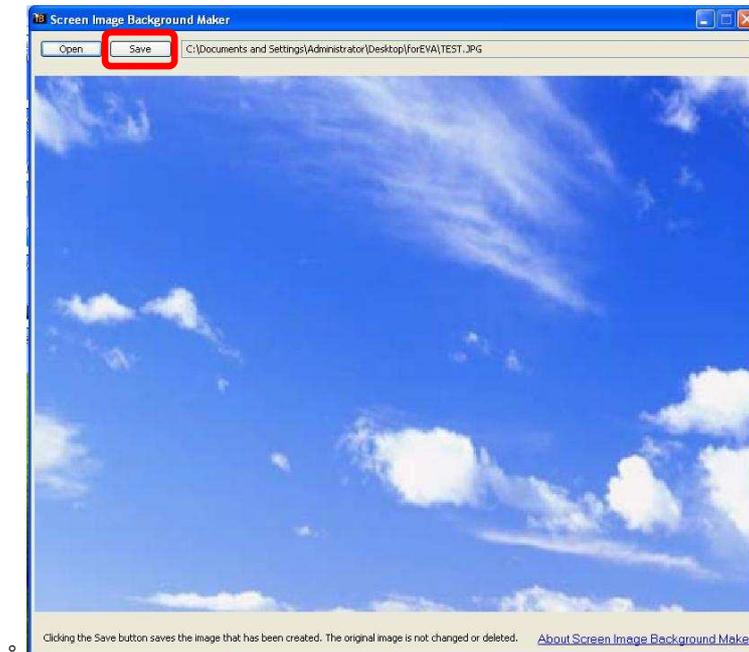


※ **Note** IB file size limit is 120KB.

Step9: Save the file to the desire location and it will automatically save to **“.ib”** format.

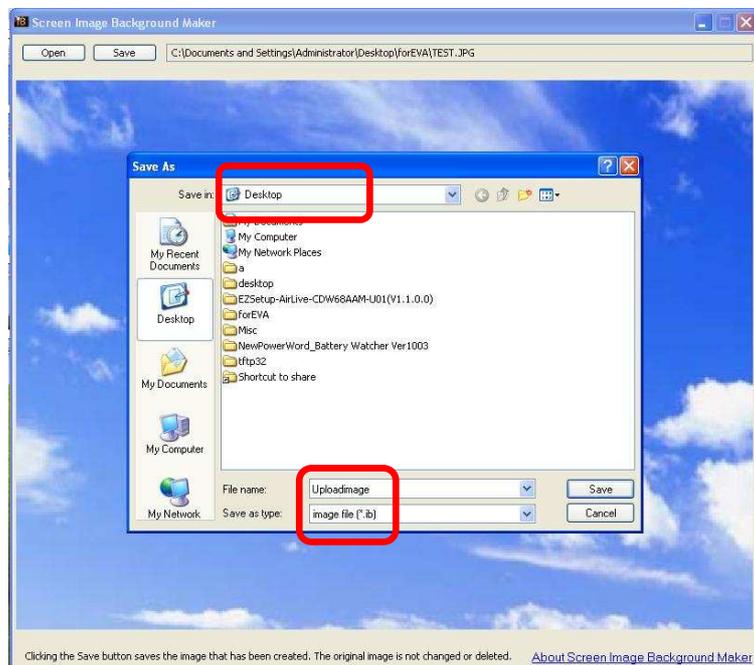


How to configure AirVideo-100v2 to Change OSD Login Page

Step10: Save "OK".

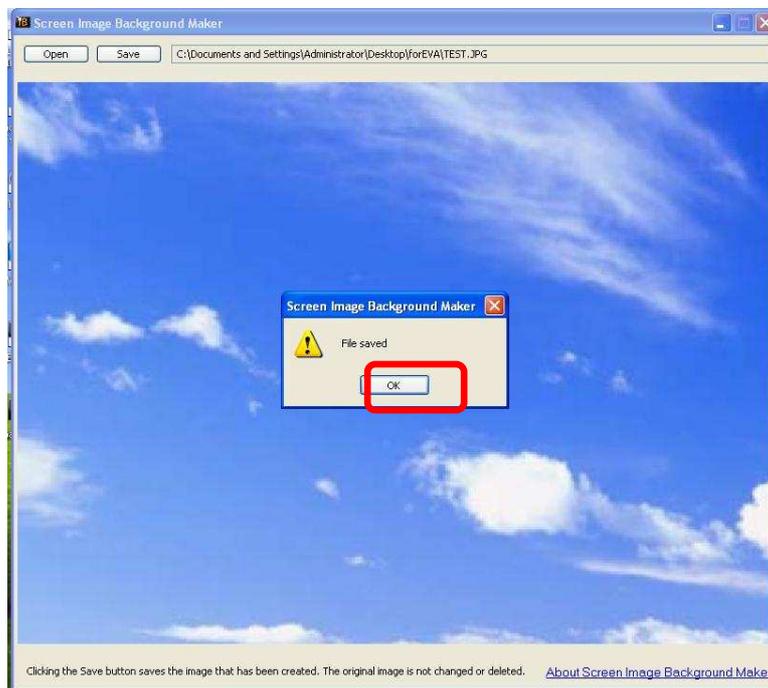


Step11: Login the web management and go to "OSD Setup" page. The Background image is by **default**.

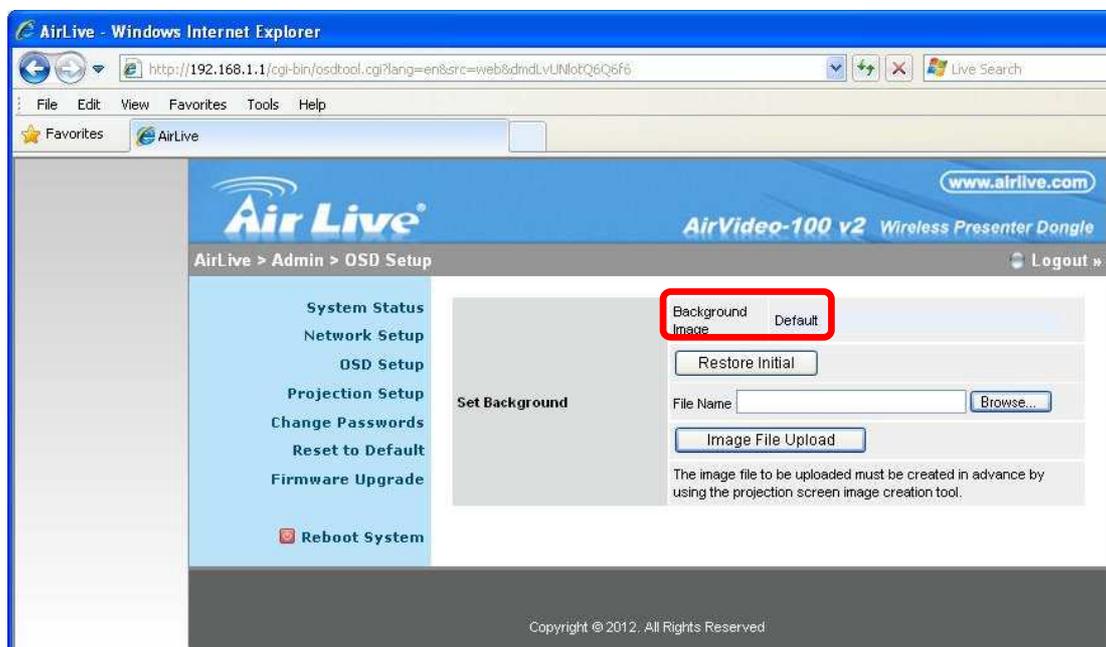


How to configure AirVideo-100v2 to Change OSD Login Page

Step12: Click "Browse" to upload the file.

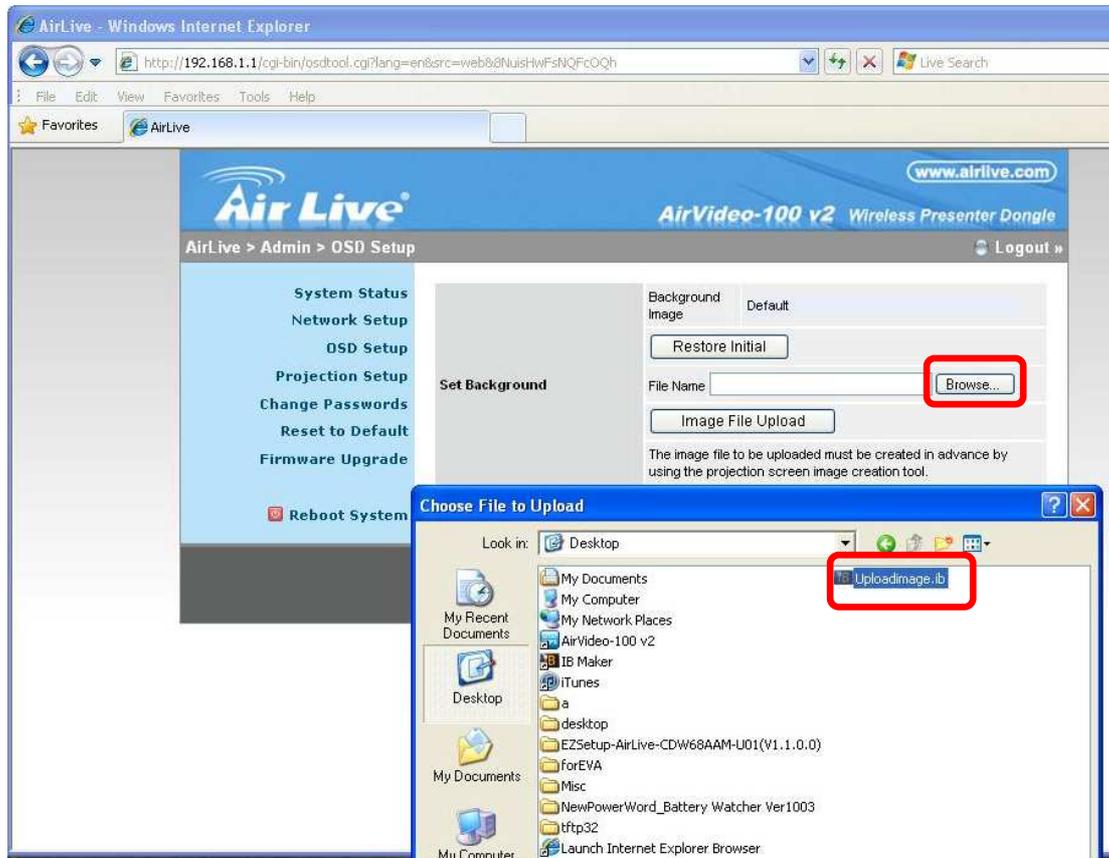


Step13: Click "Image File Upload".

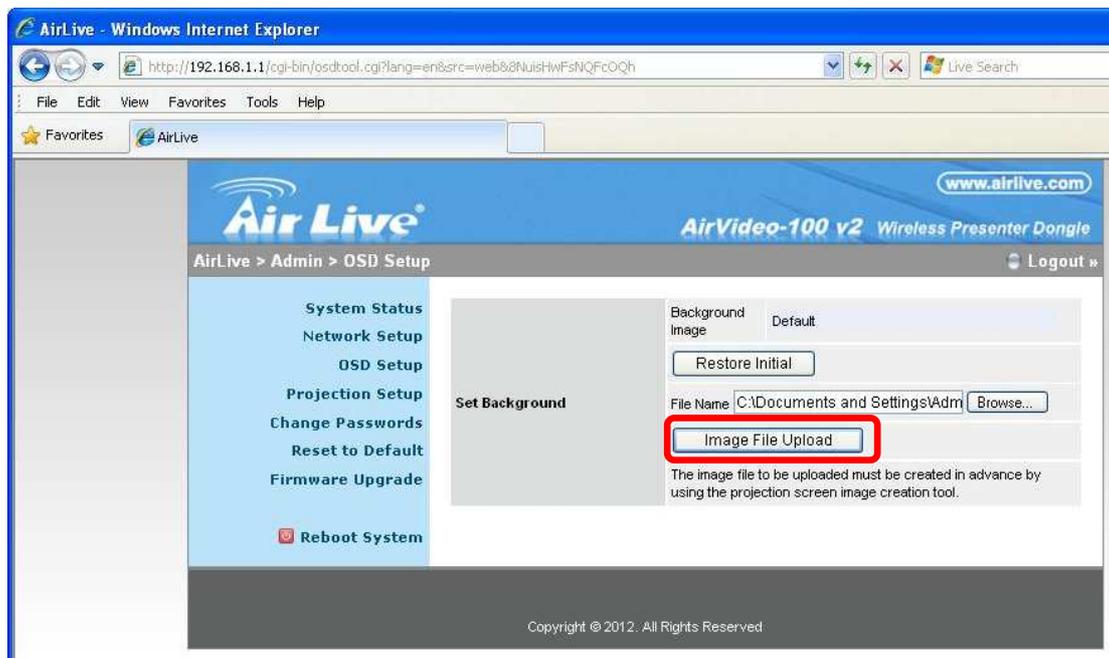


How to configure AirVideo-100v2 to Change OSD Login Page

Step13: Click "OK" to reboot the device.

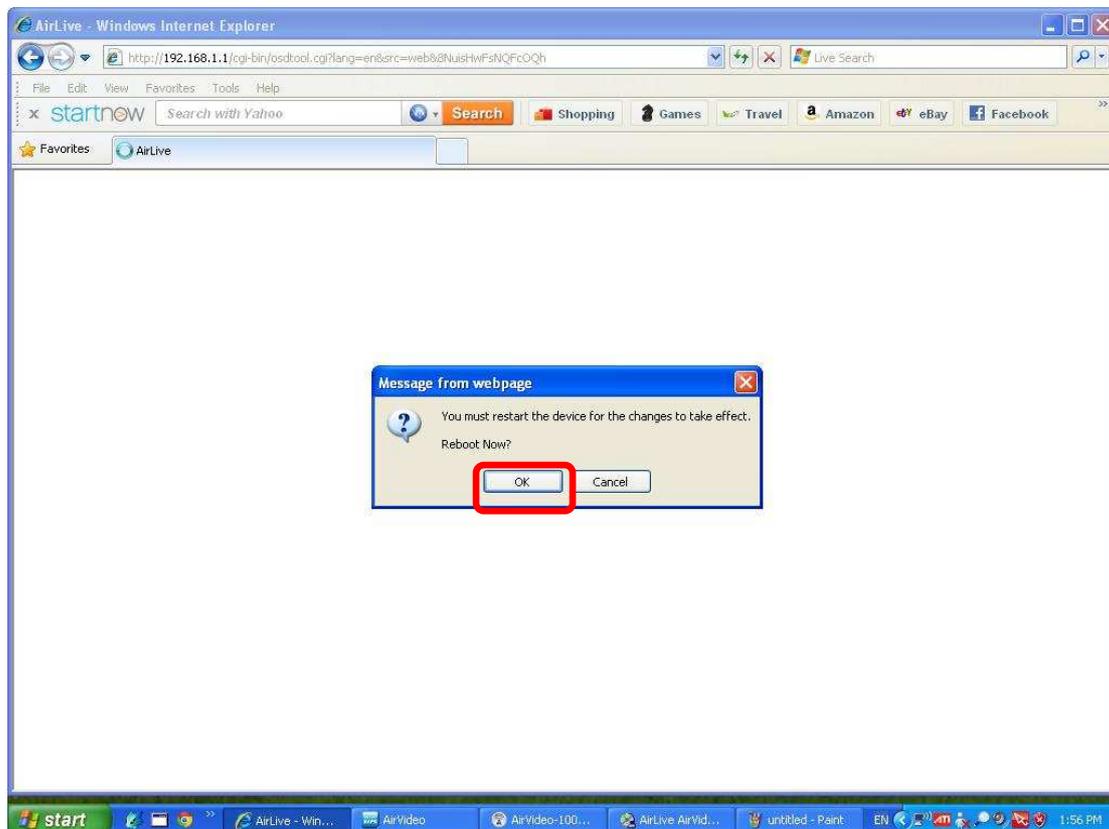

Step14: The Background image has upload success.

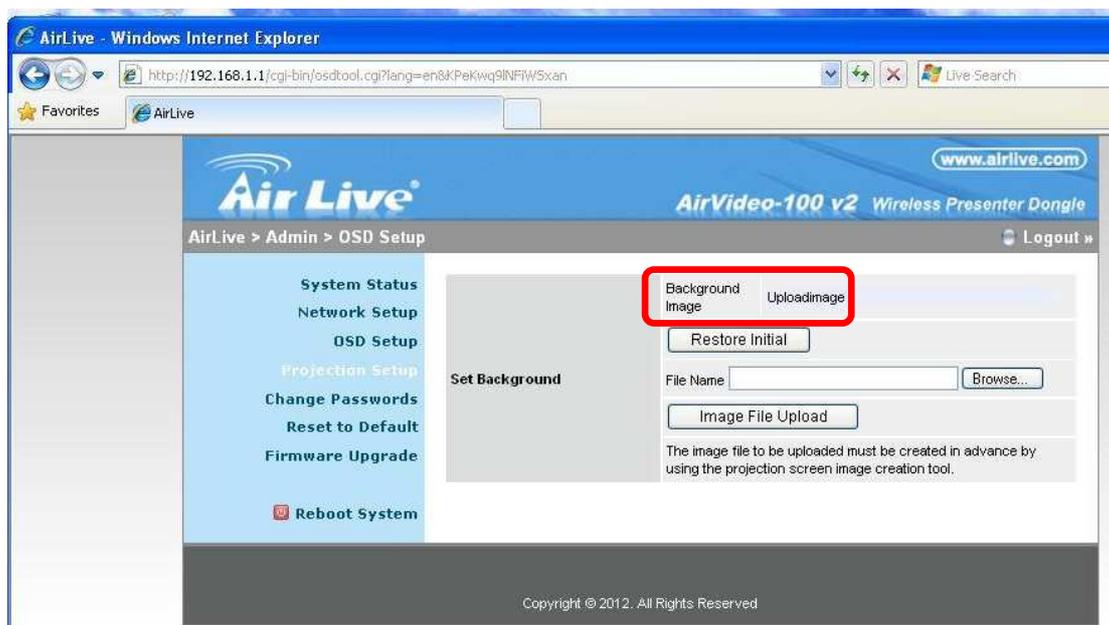

How to configure AirVideo-100v2 to Change OSD Login Page

Step15: The OSD Login Screen will change after device reboot.

