

## How to make a USB Token


AirVideo-100v2 support the USB token can be used to gain access to systems, applications and networks. The USB tokens can easily be carried by users just like key chains.

Users will simply inserting the USB device and get access to the AirVideo-100v2, networks and applications as per the privileges extended to him by the administrator without install WPS software.

This chapter will guide you how to make the USB token on AirVideo-100v 2.

**Step1:** Before configuring USB token, please install WPS software into your PC.

**Step2:** Click WPS shortcut on Desktop, it will appear the main menu. Right-click "Make WPS Token".

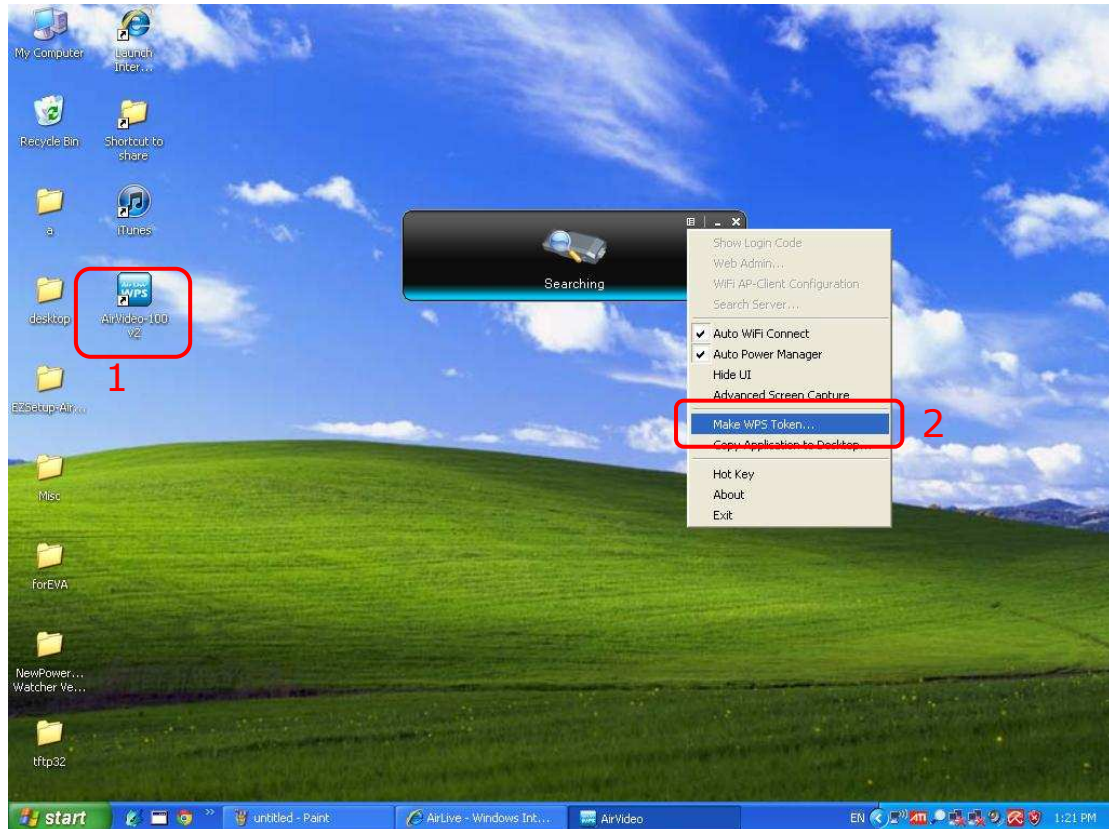

## How to make a USB Token




**Step3:** Click "**Next**" to start a Wizard to setup USB Token.



**Step4:** Plug your USB flash drive into your PC, wait for the drive letter appear, and then click "**Next**" to continue.

## How to make a USB Token

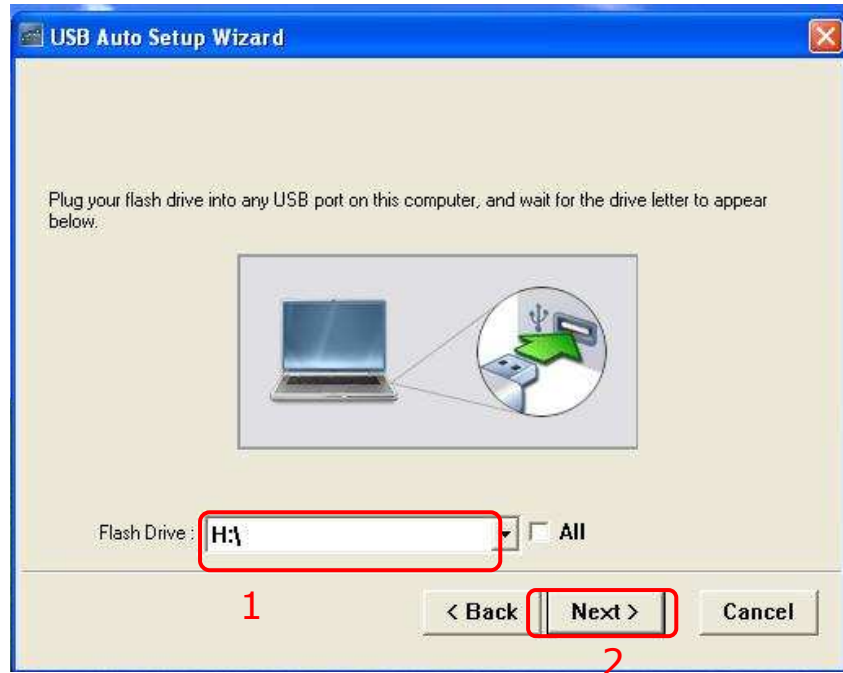


**Step4:** Completed successfully.




**Step5:** After finished, the icon of USB flash drive will change to "PnS Token".

# How to make a USB Token

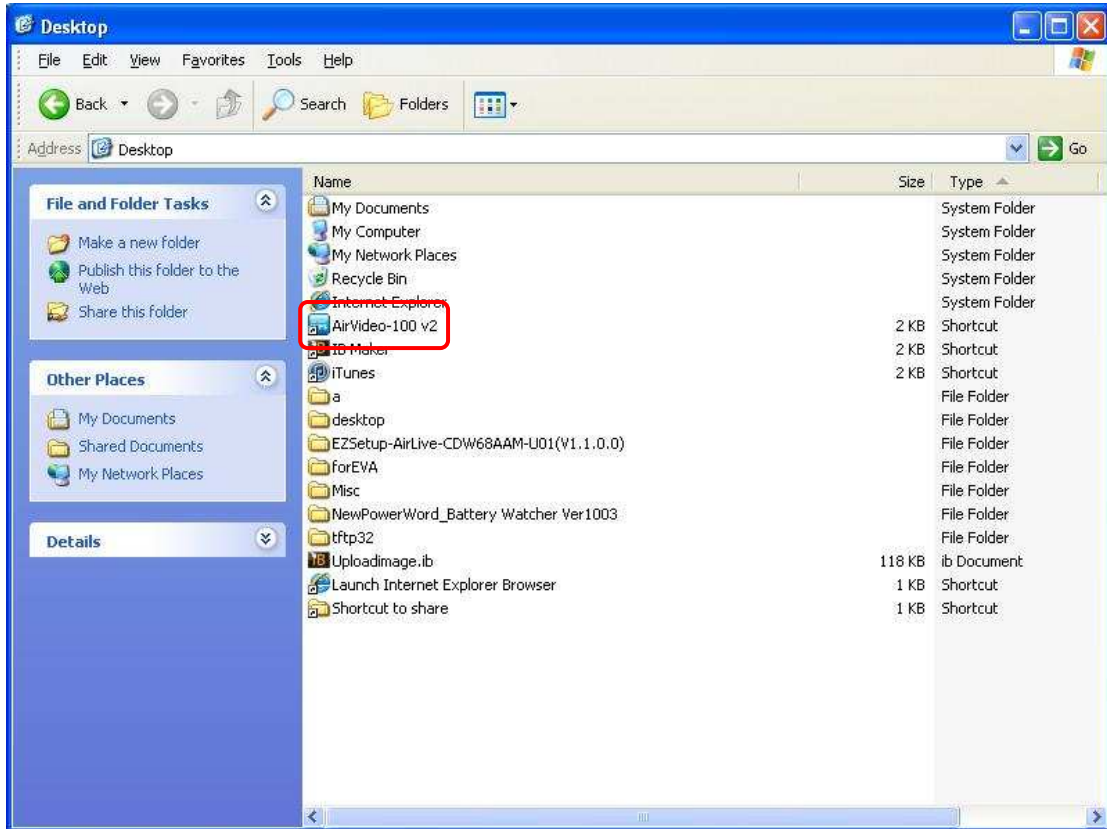


**Step6:** Plug this USB flash disk to other PC.

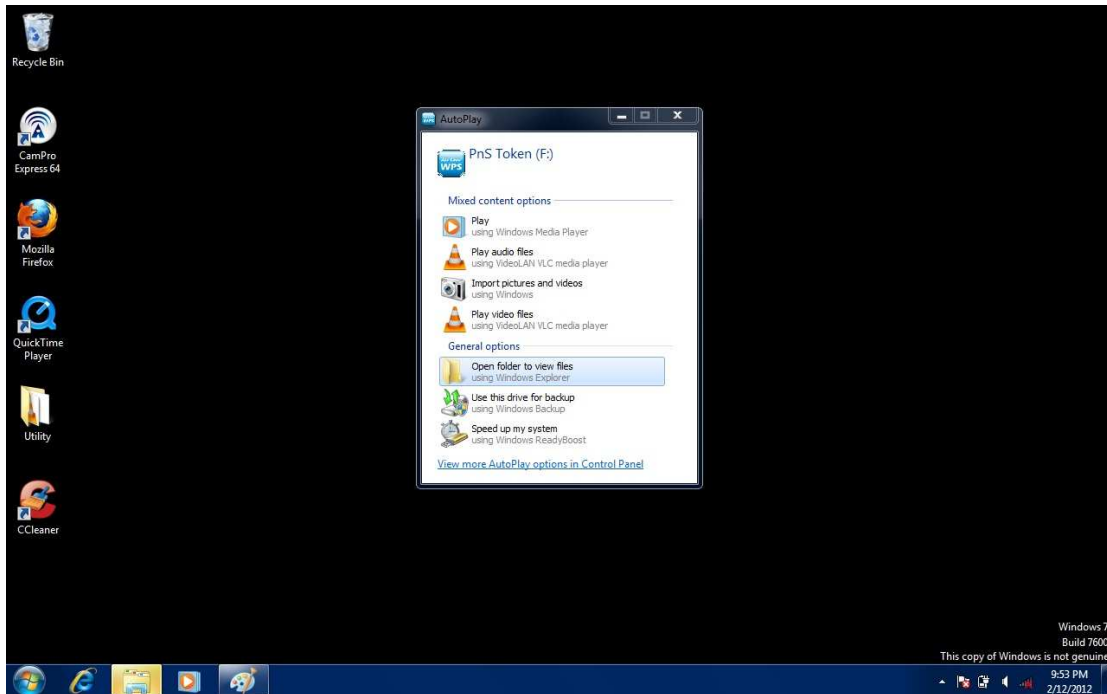


**Step7:** Right-click to open the file.

# How to make a USB Token

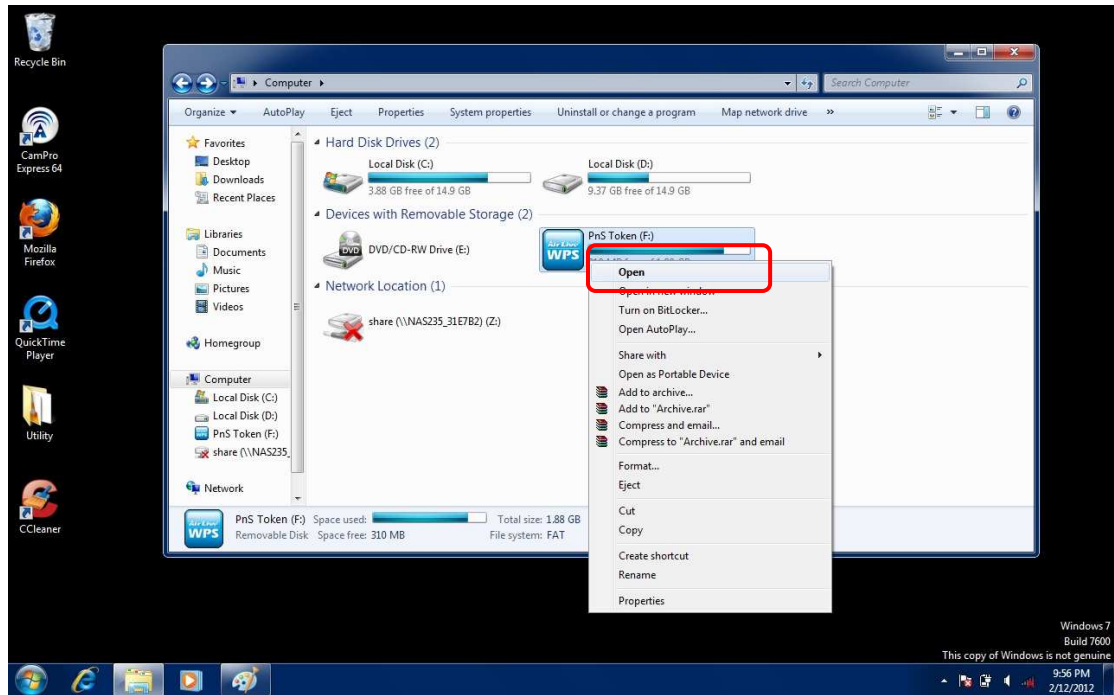

**Step8:** Double-click AirLive WPS shortcut.

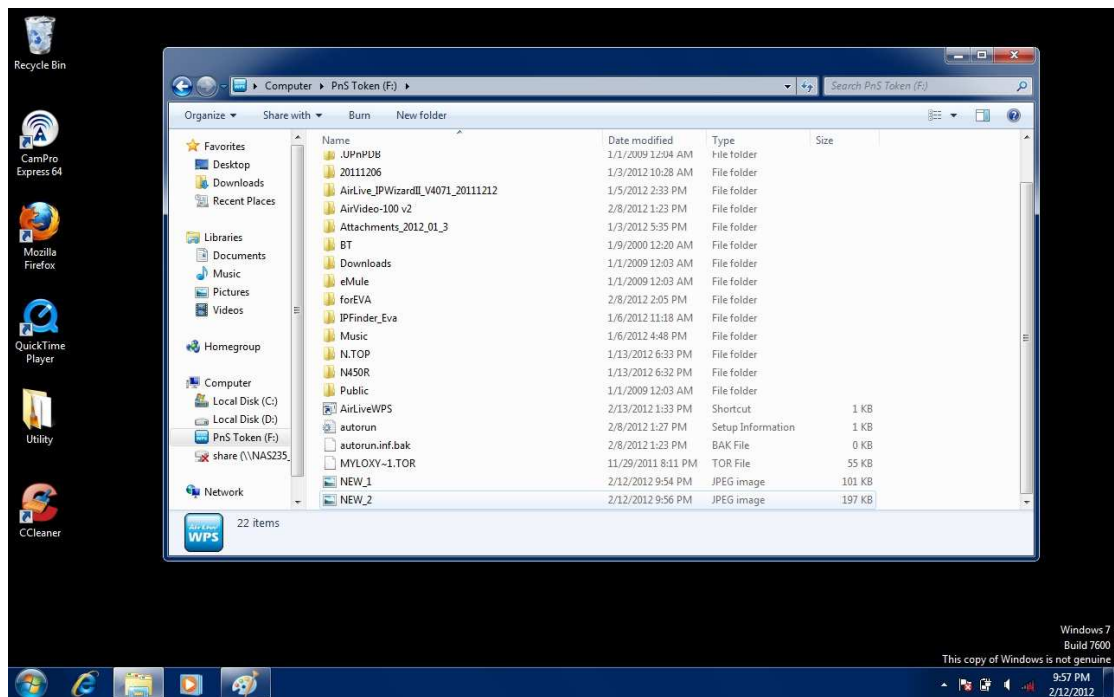

**Step9:** The WPS software will be execute

# How to make a USB Token

