

FAQ


Q: How to upgrade firmware on AirVideo-100v2?

A: Please see the upgrade steps as following.

Step1: Login the Web UI of AirVideo-100v2, type "<http://192.168.1.1>" (192.168.1.1 is the default IP of AirVideo-100v2) into Web browser, and then click on "**Admin**".




Step2: Please type the login password (Default is "**airlive**").

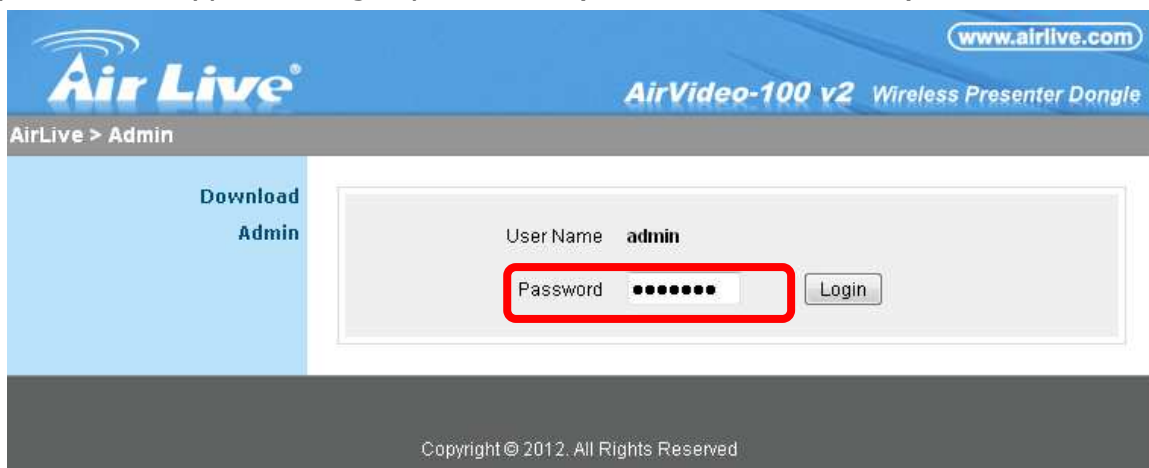

Step3: Click on "**Firmware Upgrade**" page.

FAQ

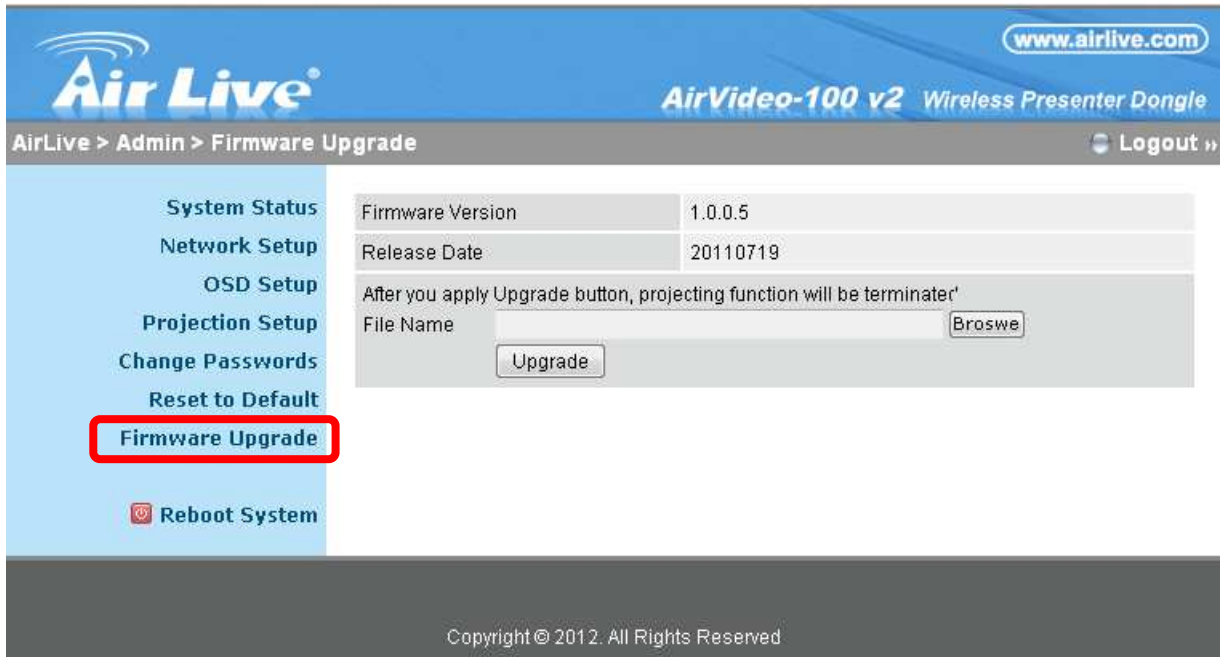

www.airlive.com

Air Live AirVideo-100 v2 Wireless Presenter Dongle

AirLive > Admin > Firmware Upgrade Logout »

System Status
Network Setup
OSD Setup
Projection Setup
Change Passwords
Reset to Default
Firmware Upgrade
Reboot System

Firmware Version	1.0.0.5
Release Date	20110719


After you apply Upgrade button, projecting function will be terminated!

File Name Browse

Upgrade

Copyright © 2012. All Rights Reserved

Step4: Click **Browse** to select the firmware from where the location you save in the computer, and then click **Upgrade** to start upgrading.

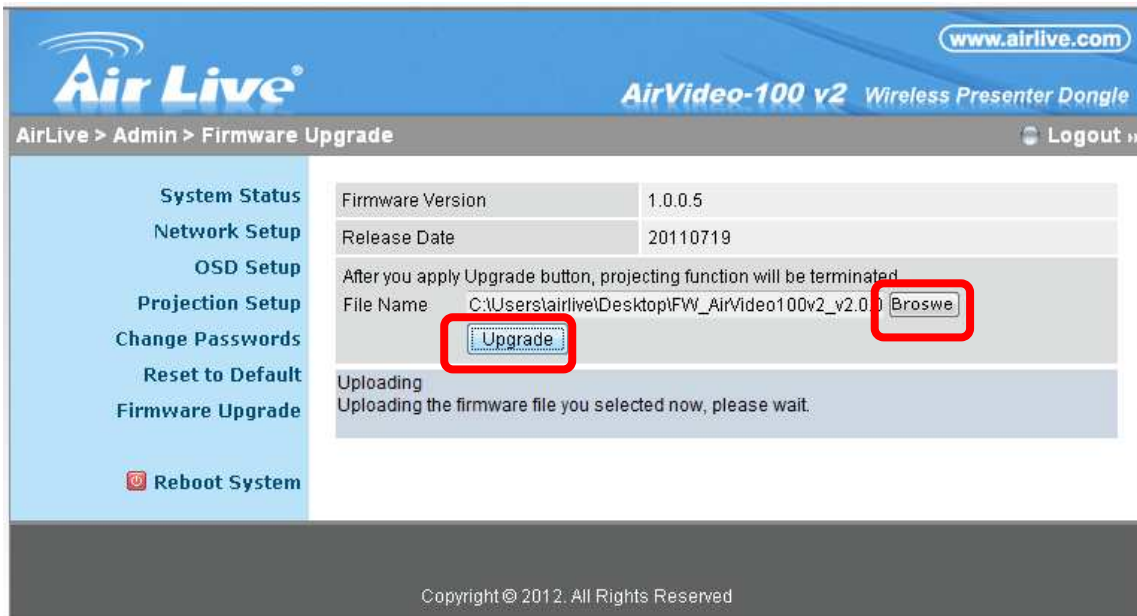

www.airlive.com

Air Live AirVideo-100 v2 Wireless Presenter Dongle

AirLive > Admin > Firmware Upgrade Logout »

System Status
Network Setup
OSD Setup
Projection Setup
Change Passwords
Reset to Default
Firmware Upgrade
Reboot System

Firmware Version	1.0.0.5
Release Date	20110719

After you apply Upgrade button, projecting function will be terminated!

File Name C:\Userstairlive\Desktop\FW_AirVideo100v2_v2.0.0 Browse


Upgrade

Uploading
Uploading the firmware file you selected now, please wait.

Copyright © 2012. All Rights Reserved

Step5: A warning message shown and countdown counter on the screen.


FAQ

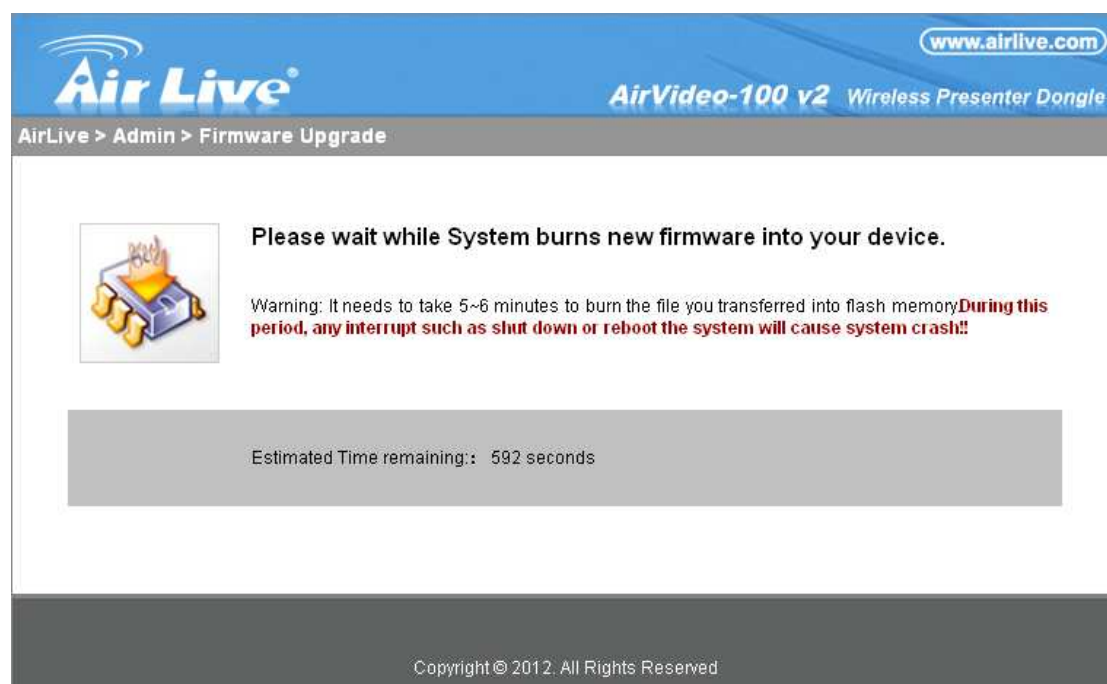

www.airlive.com

AirLive **AirVideo-100 v2 Wireless Presenter Dongle**

AirLive > Admin > Firmware Upgrade

 **Please wait while System burns new firmware into your device.**

Warning: It needs to take 5~6 minutes to burn the file you transferred into flash memory. **During this period, any interrupt such as shut down or reboot the system will cause system crash!!**


Estimated Time remaining.: 592 seconds

Copyright © 2012. All Rights Reserved

- ※ **Warning!** The upgrading needs to take 10 minutes to burn the firmware file into flash memory.
During this period, please DO NOT interrupt the process such refresh the upgrade page, power off or reboot, otherwise it will cause to AirVdieo-100v2malfunction, then you will have to return device for RMA.

Step6: After a few minutes, a complete message shown on the screen, please click on "OK" to finished.

FAQ

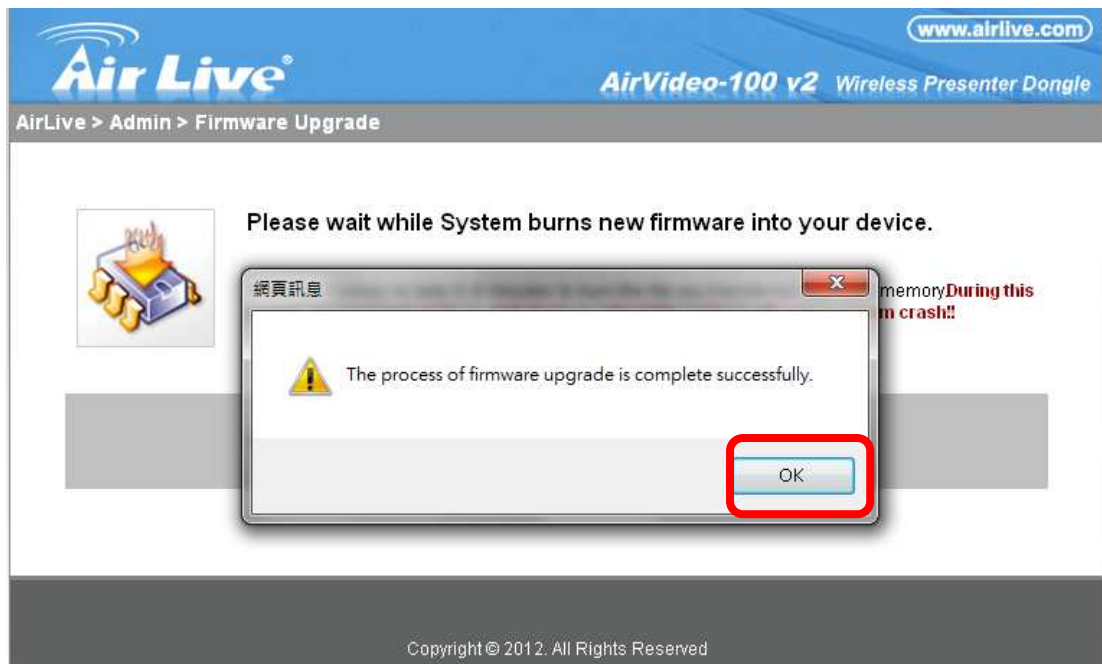

Step7: When projector shows the default menu on the screen, it indicates the AirVideo-100v2 is ready now, also you can see the firmware version has upgraded to 2.0.0.0.

