

Q: I insert my SIM card to Traveler 3GM. Then connect my PC to Traveler 3GM, but the PC could not get internet access.

A: Please check whether Traveler 3GM get public IP address at the Status page.

If not ,

please refer the items:

- If you activate PIN code check feature in SIM card, making sure the PIN code you fill in dial-up page is correct
- Checking with your ISP to see all dial-up settings are correct
- Make sure 3G signal from your ISP is available in your environment

If yes,

please set the DHCP Server function of Traveler 3GM as enable. (**Advanced>>Basic Setting>>DHCP Server**)

Then please set your PC's IP address as "Obtain an IP address Automatically" and set DNS Server as "Obtain DNS Server address Automatically".

Your PC might get IP address from Traveler 3GM and connect to internet.