



How to Access AirLive IP Camera on IE 11?

1. Login IPCAM by IE 11 first, then directly go “Compatibility View settings”.

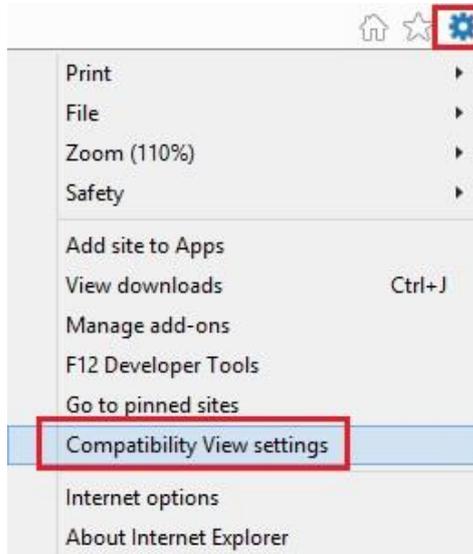

2. **Add** IPCAM IP address to Compatibility View, and click on ‘Close’.

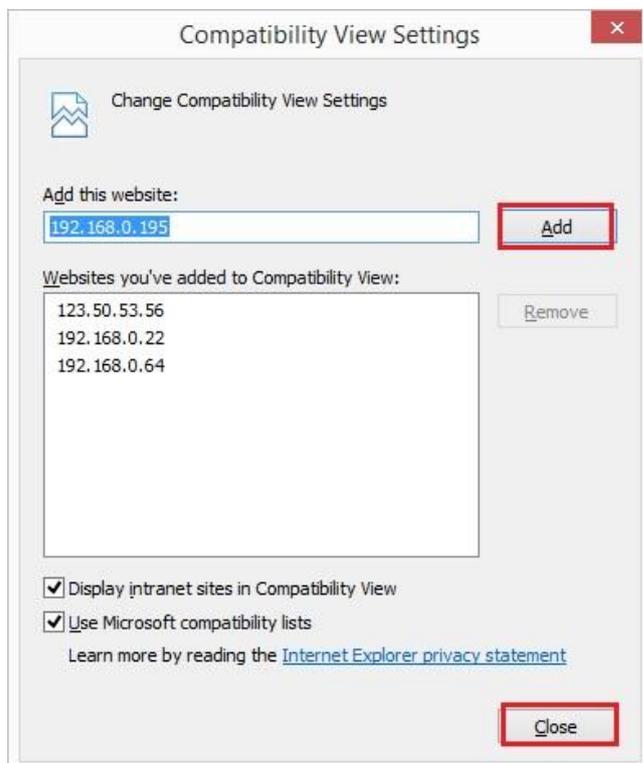

3. After closing Compatibility View Settings, then you should be able to access the IP Camera and view the live image normally.

HOME



Push to Talk

Protocol
RTSP over UDP

Configuration

View Options

Language
English
Digital Output
OFF

Please double click on the video image to go into Full Screen mode



F12

Emulation



Mode

- Document mode: 10
- Browser profile: Desktop
- User agent string: Default

Display

- Orientation: Landscape
- Resolution: Default

Geolocation

- Simulate GPS
- Latitude
- Longitude