

## How to Control FE-201DM/ FE-501DM/ FE-501OD Display Mode / E-PTZ?

1. Please make sure the CoreNVR Version is at or above **2.0.0.1492**.


<http://www.airlive.com/support/firmware/CoreNVR-16>

<http://www.airlive.com/support/firmware/CoreNVR-9>

1. Enter “System Management” .



2. Change the UI Style to “Professional” or “Advanced”.

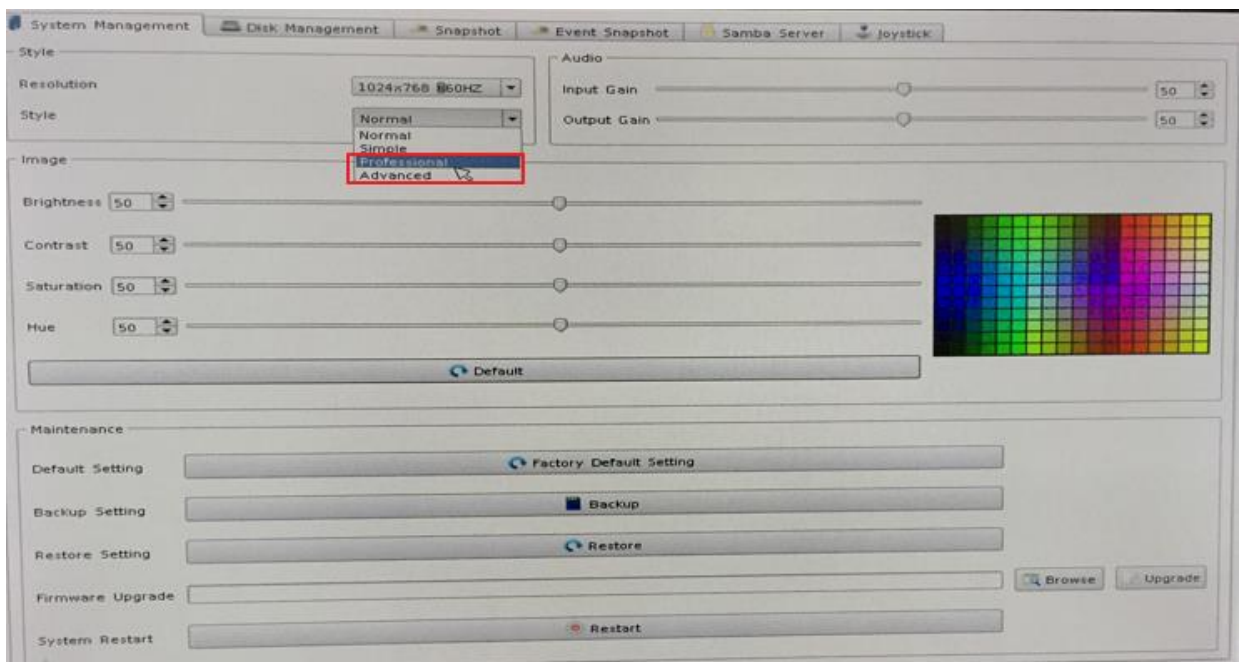

3. Fish Eye control will show up after you changed the Style.

