 
 


## How to improve the performance of BC-5010/BC-5010-IVS, MD-3025/MD-3025-IVS, BU-3026/BU-3026-IVS with CoreNVR 9/16?

 
1. Delete these cameras from CoreNVR 9/16, first.
2. Upgrade the **CoreNVR 9/16** F/W above **2.0.0.1492**.  
<http://www.airlive.com/support/firmware/CoreNVR-9>  
<http://www.airlive.com/support/firmware/CoreNVR-16>
3. It is recommend to **reset the NVR to factory default**, after upgrade.
4. Upgrade the **BC-5010** F/W above **2.28**.  
<http://www.airlive.com/support/firmware/BC-5010>
5. Upgrade the **BC-5010-IVS** F/W above **2.28**.  
<http://www.airlive.com/support/firmware/BC-5010-IVS>
6. Upgrade the **MD-3025/MD-3025-IVS** F/W above **2.25**.  
<http://www.airlive.com/support/firmware/MD-3025-IVS>
7. Upgrade the **BU-3026/BU-3026-IVS** F/W above **2.26**.  
<http://www.airlive.com/support/firmware/BU-3026-IVS>
8. Please make sure the Cameras **reset factory default**, after upgrade.
9. Login CoreNVR 9/16

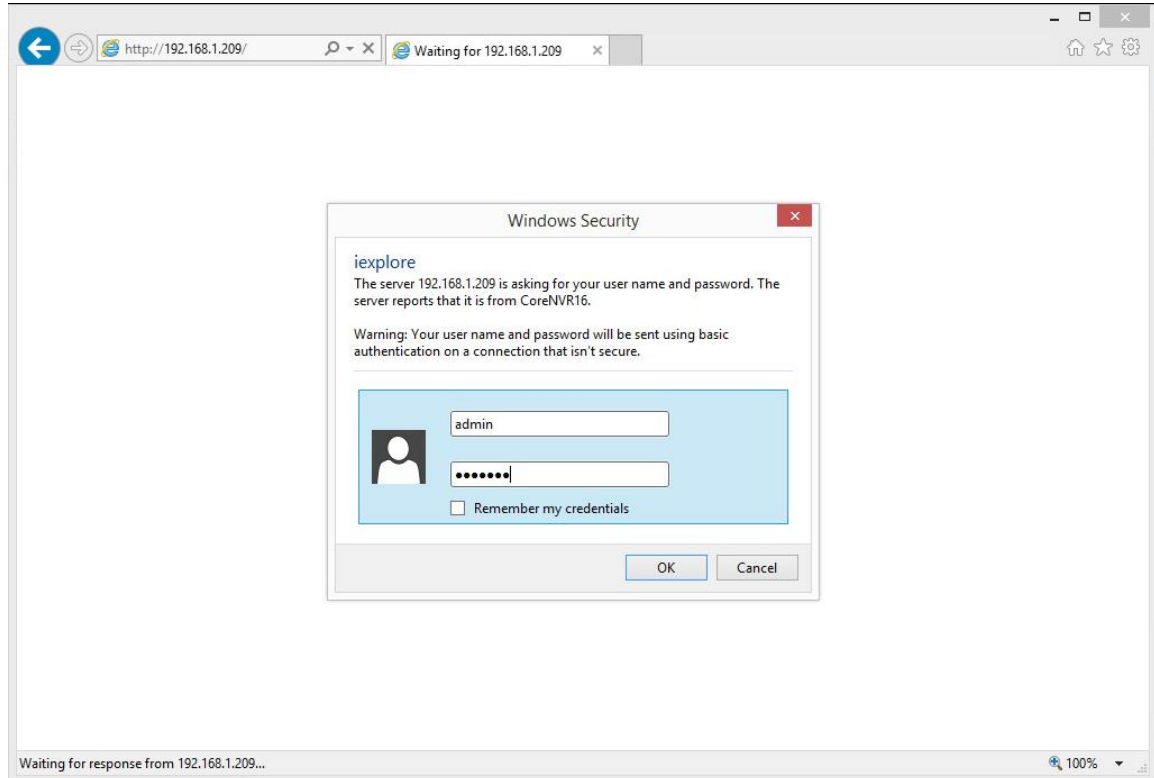


10. Enter **System setting**.

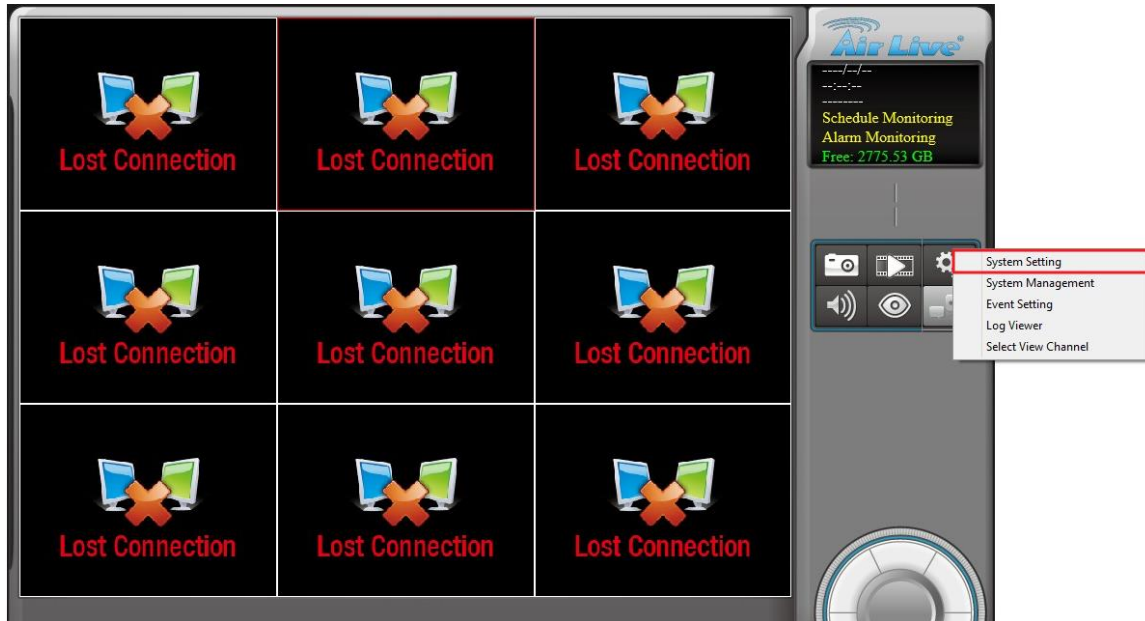

11. Press **Search** and **Add** cameras in **System setting**, then press **OK**.

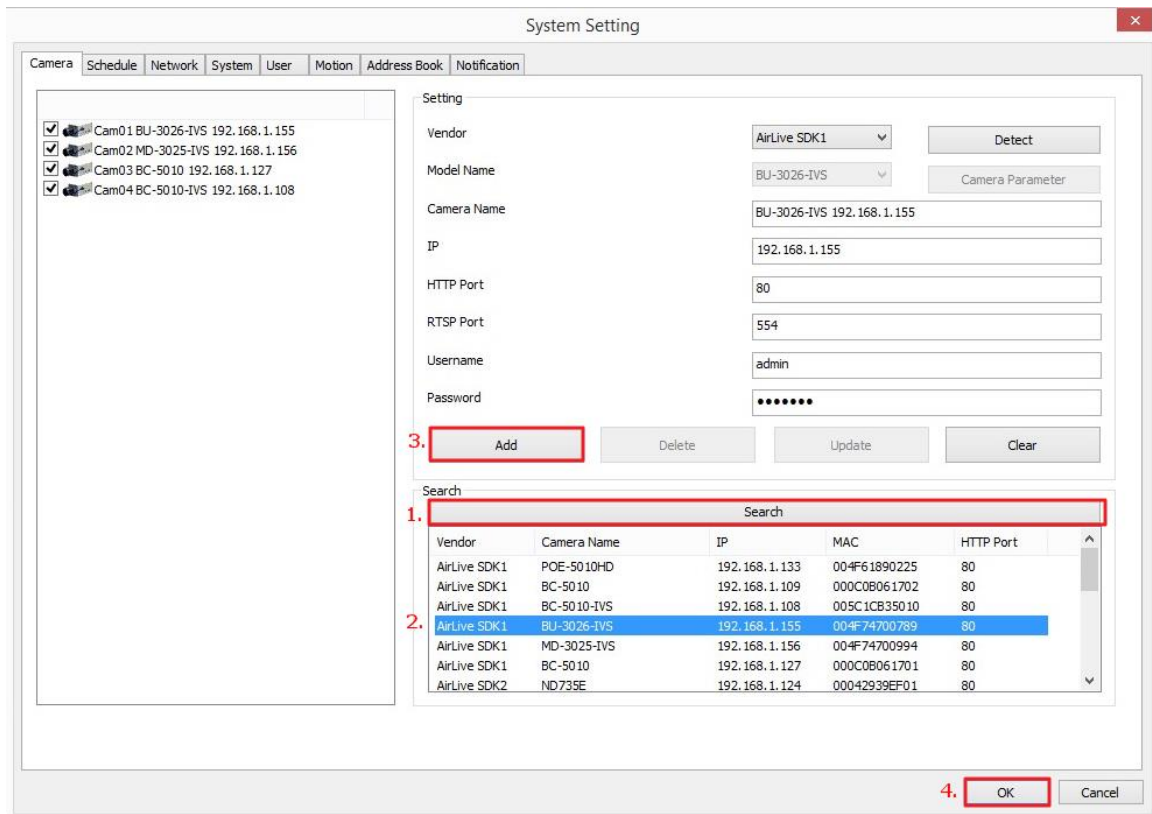

 12. Select View Channel, then press OK.

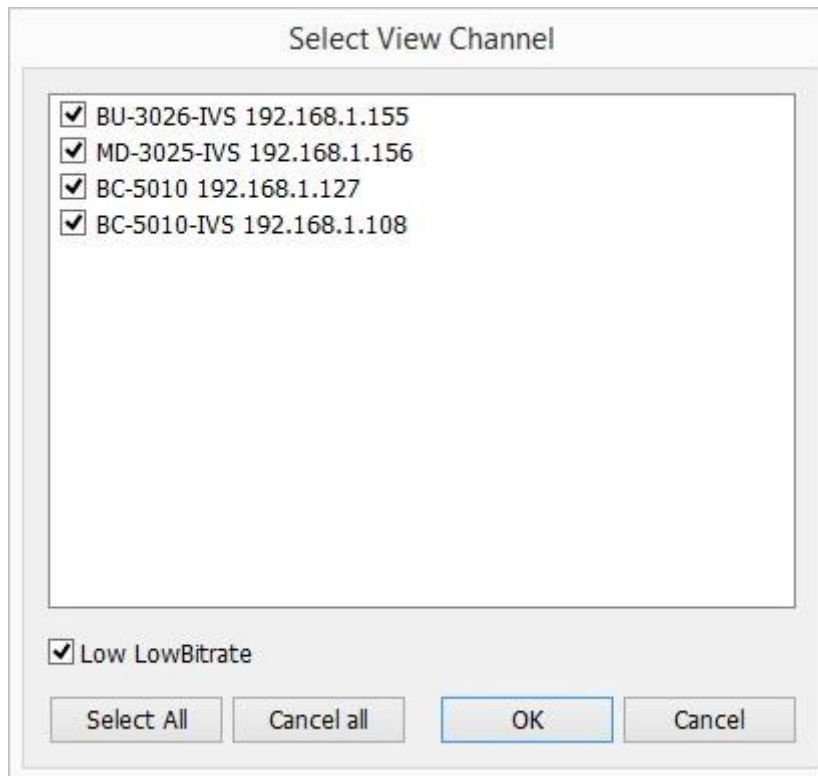

13. Finished.

