

How to install WL-1700USB driver on Win8

1. Check the Realtek Website as below link:
2. <http://www.realtek.com.tw/downloads/downloadsView.aspx?Langid=1&PNid=1&PFid=1&Level=6&Conn=5&DownTypeID=3&GetDown=false&Downloads=true#RTL8187L>&PNid=1&PFid=1&Level=6&Conn=5&DownTypeID=3&GetDown=false&Downloads=true#RTL8187L>
3. Download the file: RTL8187L-> UI and Driver auto installation package(support XP/Vista/Win7)(Beta)-> Version: 1316 (Beta)

RTL8187L


| Windows | Unix (Linux) | Others |

Windows


Description	Version	Update Time	File Size	Download					
				Site 1	Site 2	Site 3	Site 4	Site 5	Site 6
UI and Driver auto installation package(support XP/Vista/Win7)(Beta)	1316(Beta)	2011/2/23	25694k	CN	US2	HK1	US1	UK1	US3
Windows7 InstallPackage (Beta)	1316(Beta)	2010/10/6	17953k	CN	US2	HK1	US1	UK1	US3
UI Package and driver (support WinXP/Vista)	1313	2010/1/25	10214k	CN	US2	HK1	US1	UK1	US3

4. Please follow the steps 5~8, go to the device manager, install the driver manually, by select the folder you where you had unpacked; do not install the driver by auto setup.


5. Go to the device manager

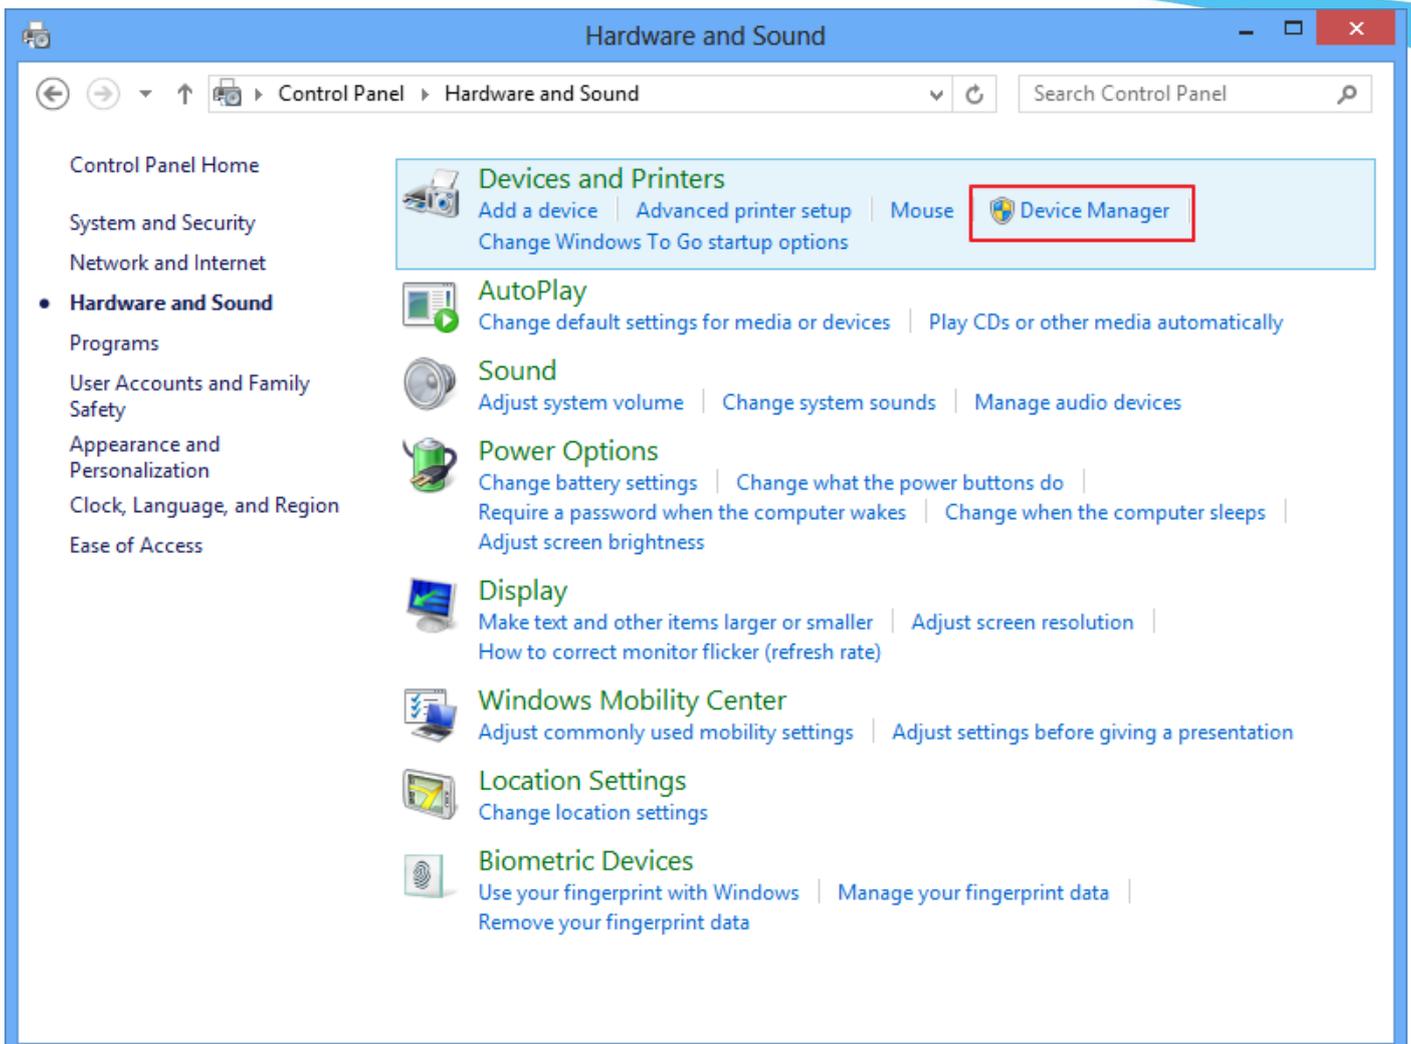


6. Right click RTL8187 Wireless Adapter, select “Update Driver Software”.

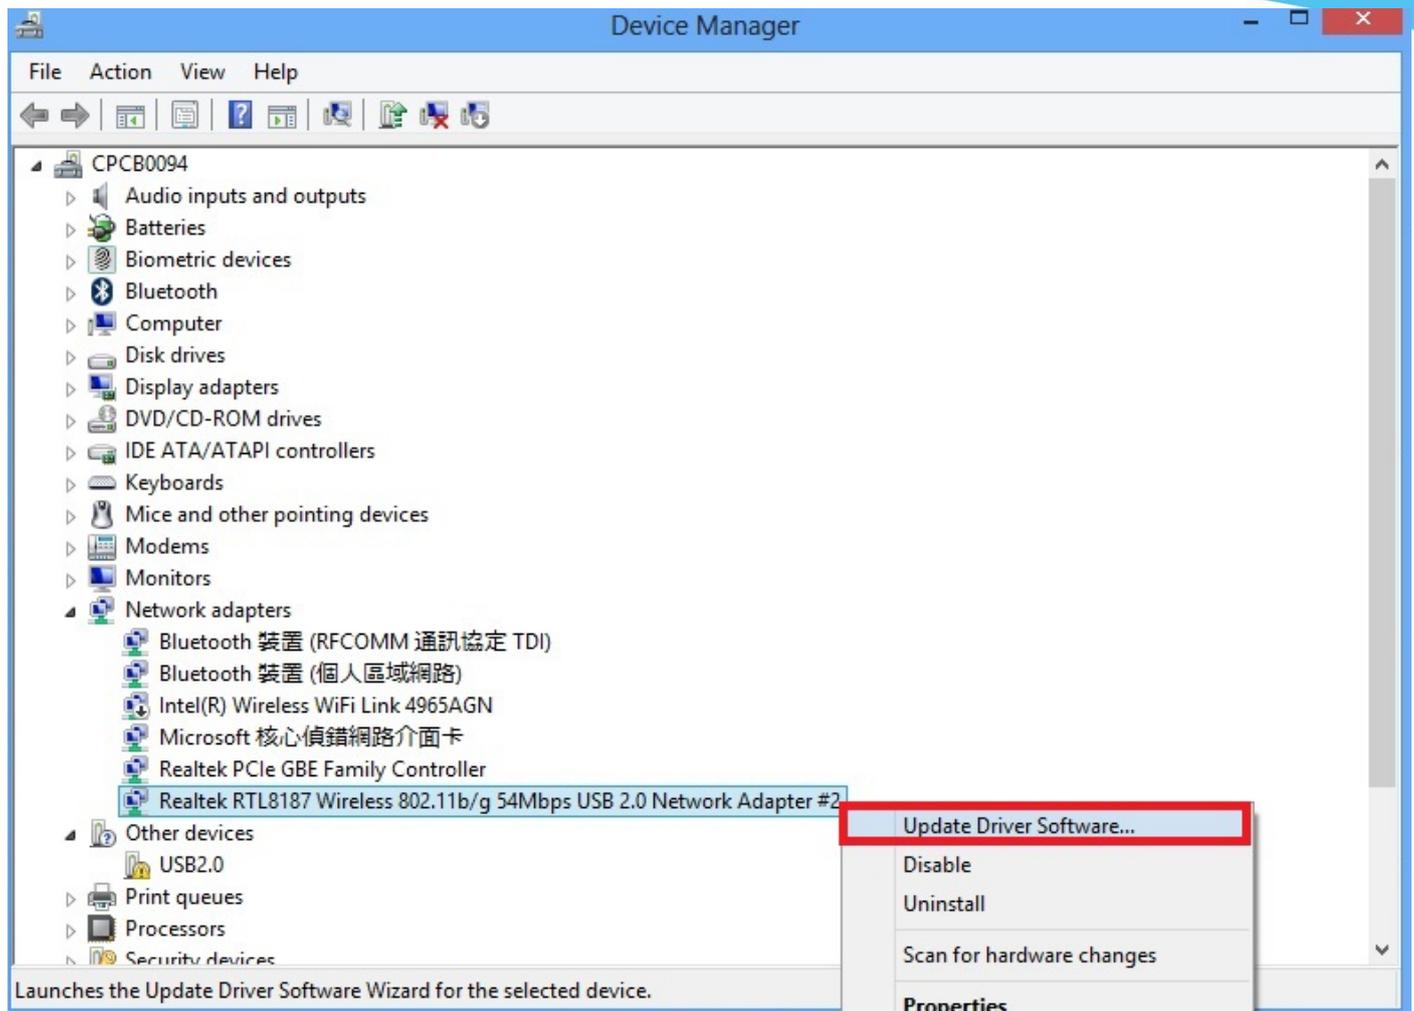


7. Install the driver manually, by select the folder you where you had unpacked.

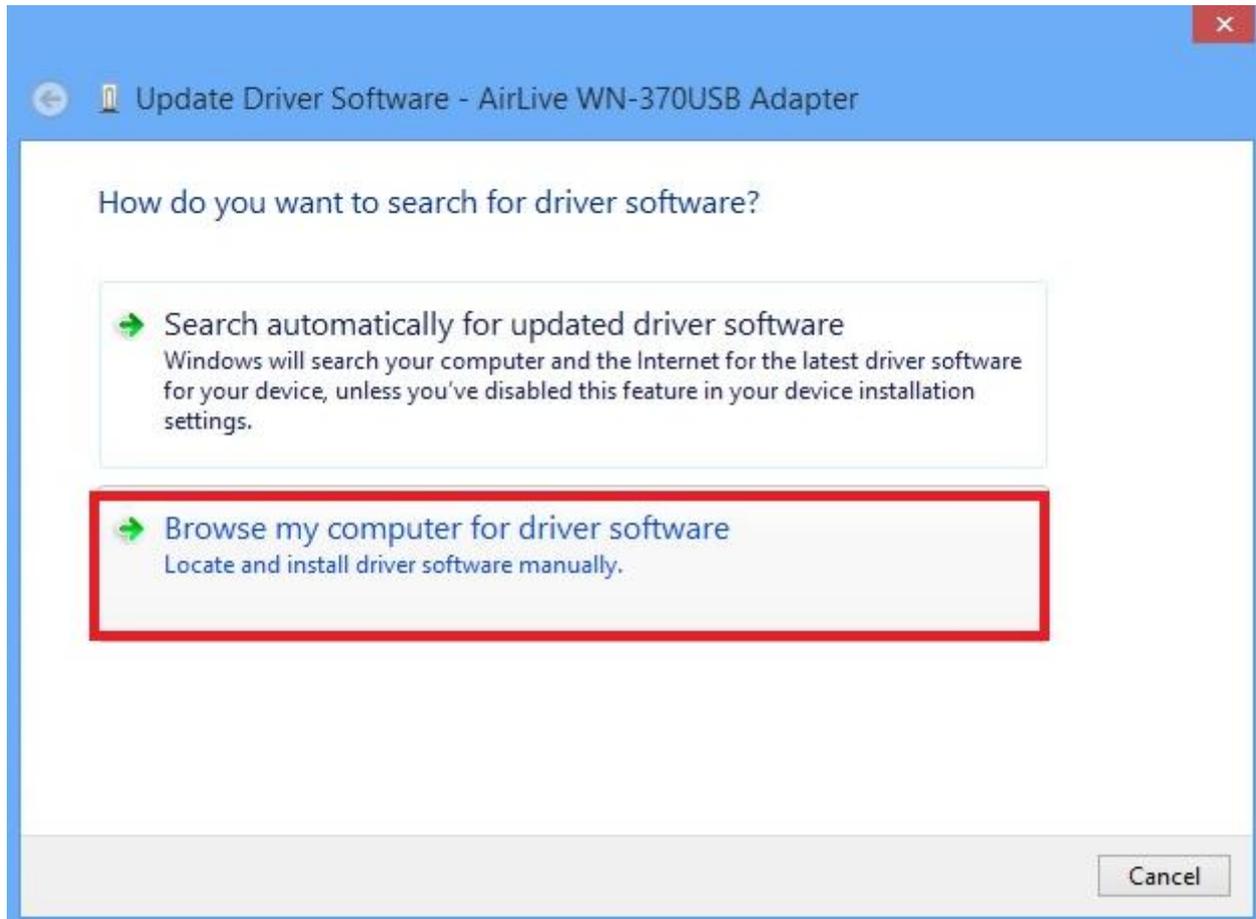

8. Select the folder you where you had unpacked.

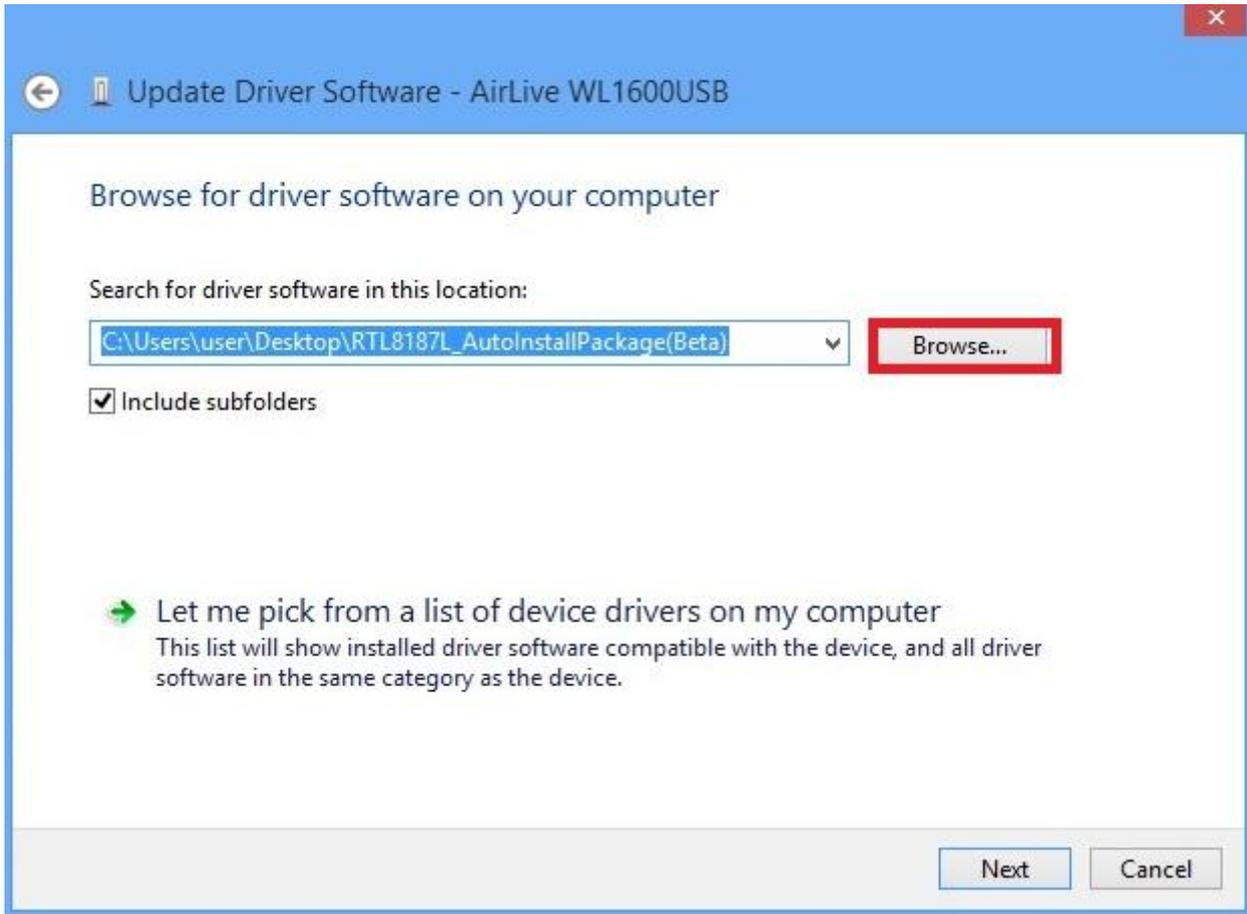

9. Driver install correctly.

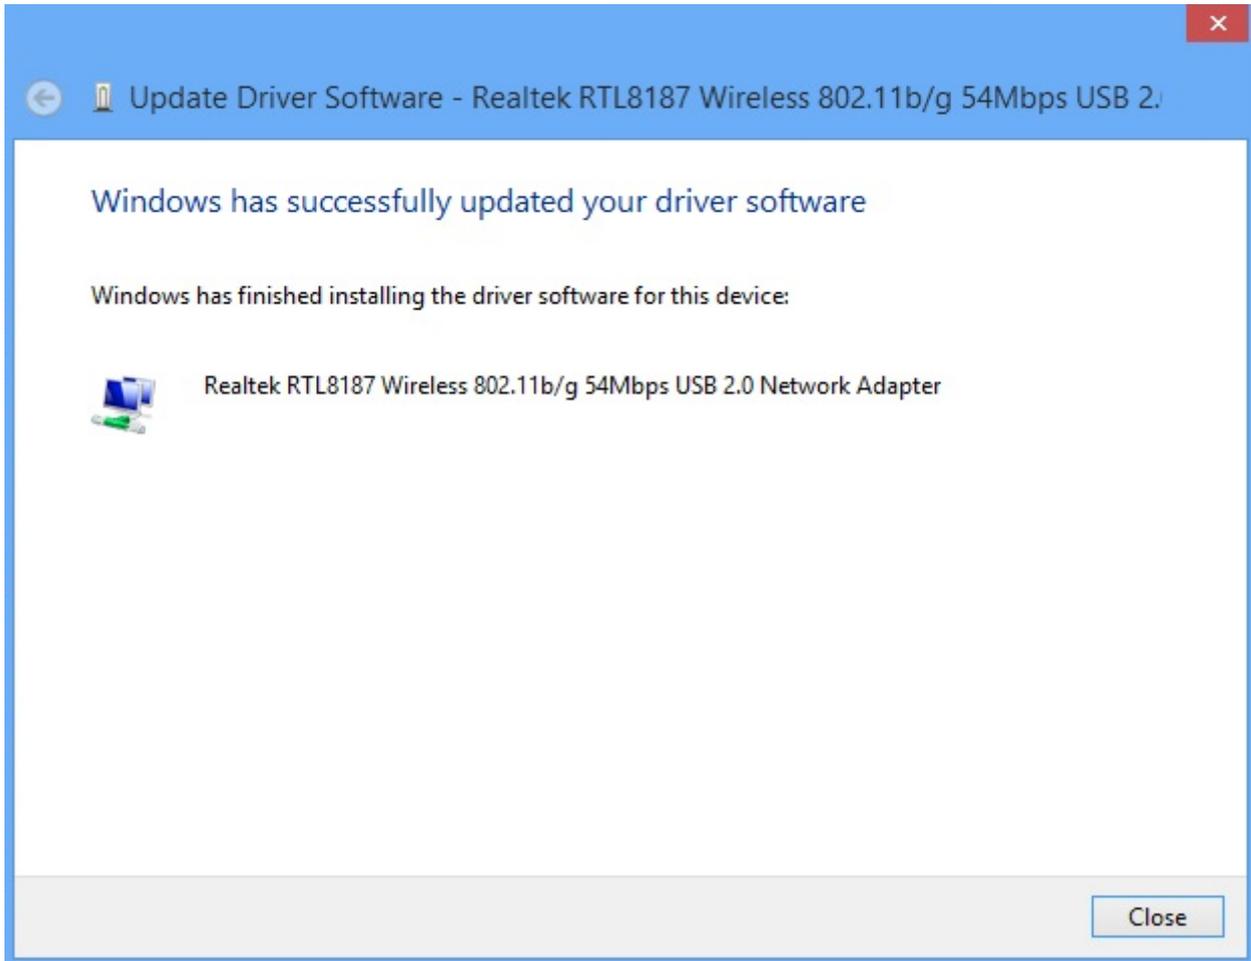

10. Airlive wireless card can work on win8 as well.

