

Q : How to upgrade the latest firmware of NVR 8/16 ?

A :

1.> Download the latest F/W of NVR 8/16 as below links:


(Note: don't decompress the F/W after download)

NVR 8 F/W: <http://fs.airlive.com/firmware/Airlive108v172A30053251.tar.tar>

NVR 16 F/W: <http://fs.airlive.com/firmware/Airlive116v172A30053251.tar.tar>

2.>Login the Web-server of NVR 8/16 , Click on "System Option" >> "Maintenance" .

3.>Select the F/W to be upgraded by clicking the "Browse" button.

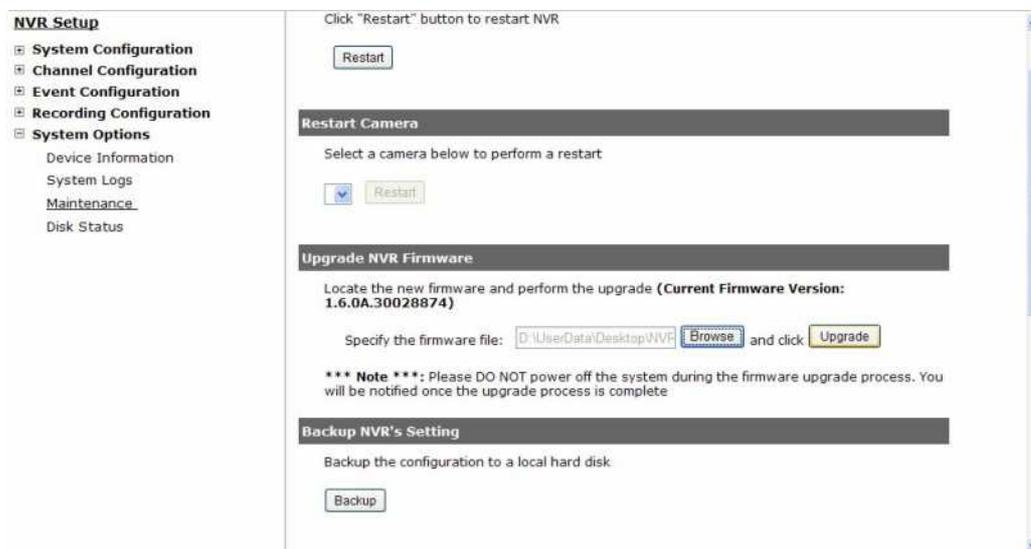

4.>Click the "Upgrade" button to execute the firmware upgrade.

5.>The system will be restarted after the upgrade procedure was completed.

### Note :

Since the EventDB structure of this F/W was improved, in order to improve the system performance, you are suggested to re-format the hard drives after the NVR8/16 was upgraded with this latest F/W.

### Bugs Fixed

- EventDB has wrong data after a long time processing.
- IE8 update firmware fail problem
- Increases stack size of memory to avoid System crash. (disconnecting issue).