


How to achieve 2-way audio with CoreNVR 9/16?


1. Check the IPCAM's Audio is enable, Audio mode is in Full duplex.



2. Enable 2-Way audio in CoreNVR 9/16

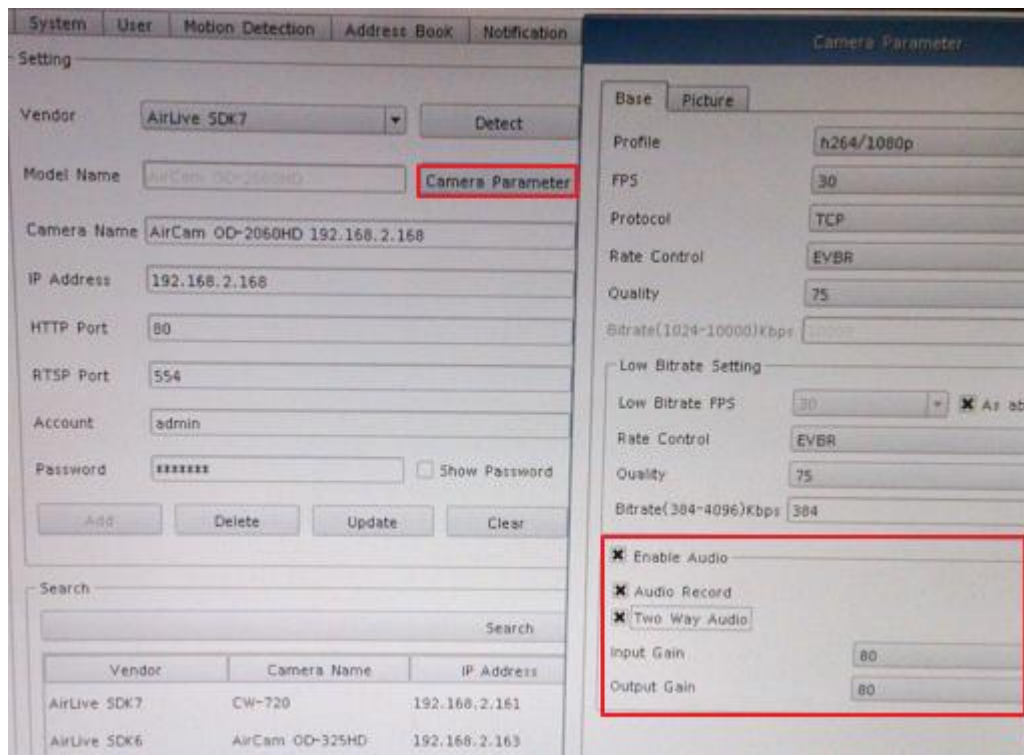

3. Press the 2-Way Audio button on CoreNVR 9/16.

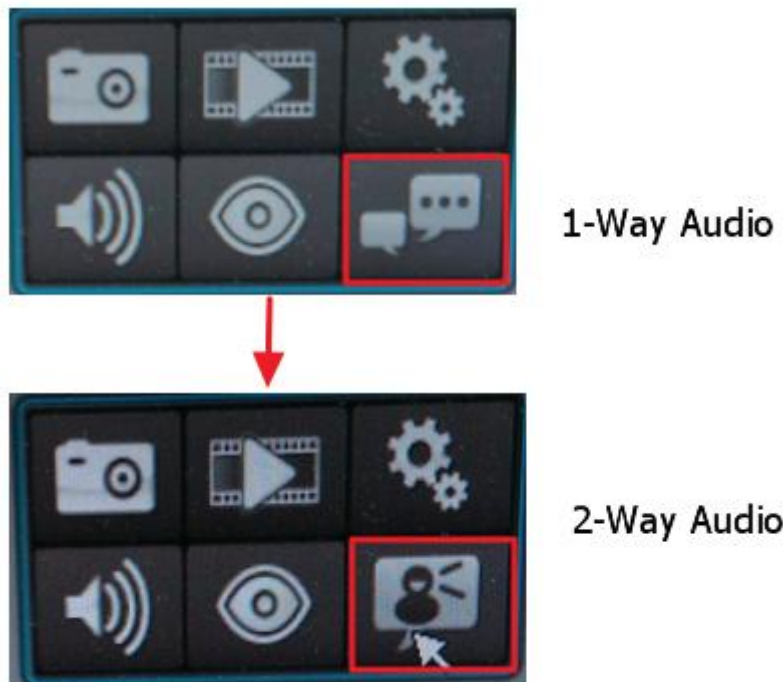

4. Finished.