## How does the ICR function work in cameras?

Ans:

You can choosing the ICR mode in your Camera.

Live View	Picture PTZ Setting	Preset Setting Tour Setting	
Network	Maximum Exposure Tin	1/30 S 💌	A WARK
Camera	Color Level	70 (0 ~ 100)	
System	Brightness	50 (0 ~ 100)	
Video	Contrast	50 (0 ~ 100)	1 20
Audio			
User	Sharpness	50 (0 ~ 100)	
E-Mail	De-Noise	None 👻	
Motion Detection	ICR	Day mode	
Event Server		Night Mode Day mode	
Event Schedule		Auto Schedule 19 Refresh	
		Night Mode Threshold 2000 (0 ~ 10000)	
		Day Mode Threshold 4800 (0 ~ 10000)	
		Delay Time 10 (0 ~ 86400)	
	Default Settings	Default Settings	

\*Night mode: IR always open (grayscale mode).

\*Day mode: IR always close.

\*Auto mode:

Detect the light of environment automatically.

You can adjust the Left gray button & Right gray button.(red button is "the light current value of environment")

when red button < Left gray button -->IR open(grayscale mode). when red button > Rightgray button -->IR close(Day mode).

ICR	Auto
	Current Value 4804 Refresh
	Night Mode Threshold 2000 (0 ~ 10000)
	Day Mode Threshold 6750 (0 ~ 10000)
	Delay Time 10 (0 ~ 86400)

\*Schedule: IR open or close by schedule.