


Please show me how to setup a Virtual Server with WL-5460AP .

- 1.> Connect your PC to LAN1 of WL-5460AP via Ethernet cable.
- 2.> Please make sure your PC's IP is in the same subnet as the AP
(i.e.192.168.100.100 subnet mask : 255.255.255.0).
- 3.> Open the web browser and enter <http://192.168.100.252/>.
- 4.> Choose the gateway mode as shown below :

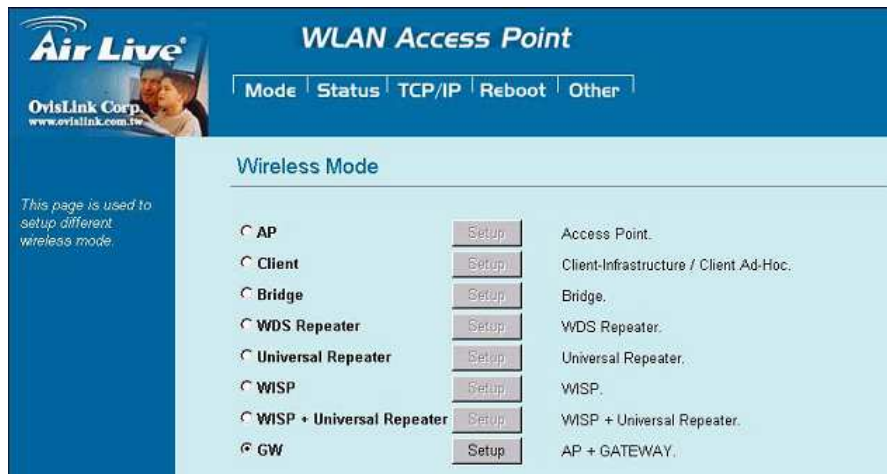

- 5.> Press the Setup button for detail setting.



6.> Press the Setup button of Virtual Server.

Virtual Servers

Enable Virtual Servers

Servers:

Local IP Address:

Protocol:

Port Range:

Description:

Current Virtual Servers Table:

Local IP Address	Protocol	Port Range	Description	Select
------------------	----------	------------	-------------	--------

7.> Input your Server's IP address

8.> Input the Port Range

9.> Press Save button & Reboot the system .