


How to use Plug and Play function with IP Camera

After you plug AirLive IP Camera into PnP Router, please log in the Router's web UI and click "Advanced -> FORWARDING RULES -> IP CAM"

There will be a table, **IP CAM List**, to show the camera's information as below.

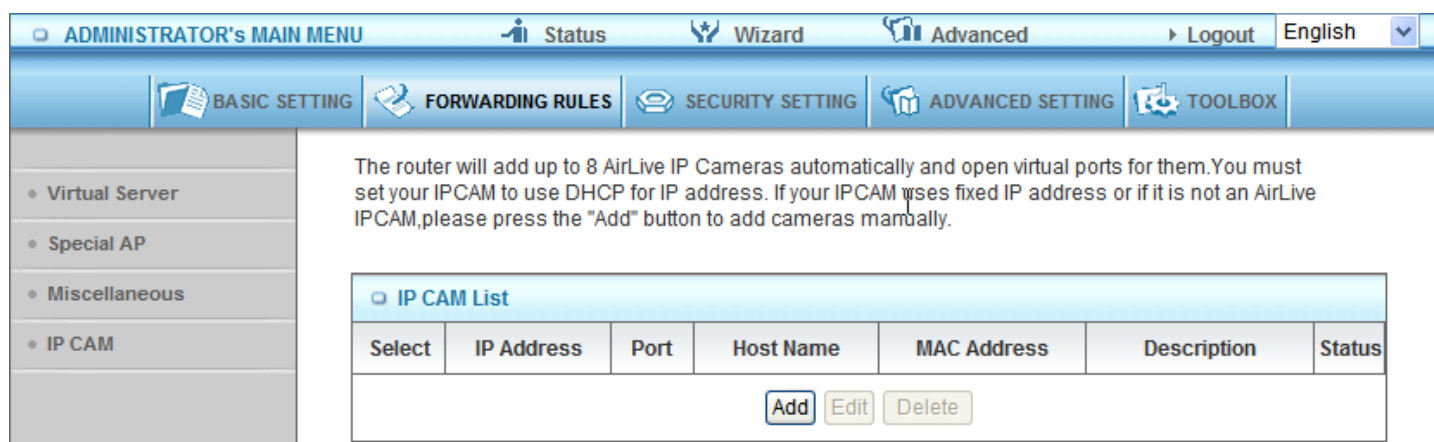

The router will add up to 8 AirLive IP Cameras automatically and open virtual ports for them. You must set your IPCAM to use DHCP for IP address. If your IPCAM uses fixed IP address or if it is not an AirLive IPCAM, please press the "Add" button to add cameras manually.

Select	IP Address	Port	Host Name	MAC Address	Description	Status
<input type="button" value="Add"/> <input type="button" value="Edit"/> <input type="button" value="Delete"/>						

If you add Airlive IP camera right now, the list will renew the information automatically.

If you add other brand IP camera, please check the IP address of the IP camera by Clients List.

(Please click "Advanced -> BASIC SETTING -> DHCP Server-> Client List")

Then please click the "Add" button of IP CAM function to input the IP address and port of IP camera.

Thus the other brand IP camera will be added into the list.




The router will add up to 8 AirLive IP Cameras automatically and open virtual ports for them. You must set your IPCAM to use DHCP for IP address. If your IPCAM uses fixed IP address or if it is not an AirLive IPCAM, please press the "Add" button to add cameras manually.

Select	IP Address	Port	Host Name	MAC Address	Description	Status
<input type="radio"/>	192.168.1.201	8080	WL-350HD	00-4F-76-00-2A-25		●
<input type="button" value="Add"/> <input type="button" value="Edit"/> <input type="button" value="Delete"/>						

As you can see, the router has already pointed a specific IP address and a port number to IP camera.

- If your PC is in the same LAN, just type camera's IP address, like <http://192.168.1.201>
- If you would like to monitor IP camera in internet, please click "Status" to check Router's WAN IP as below picture, and type WAN IP and IP camera's Port Number, like <http://59.115.118.179:8080>

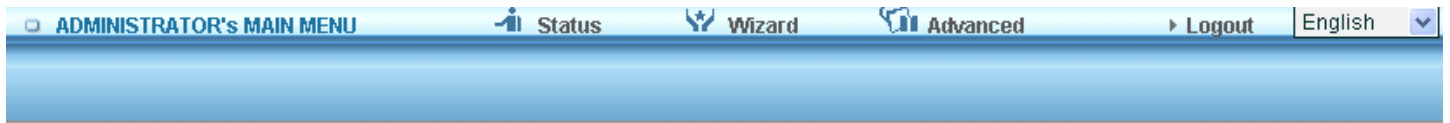

System Status [HELP]		
Item	WAN Status	Sidenote
IP Address	59.115.118.179	PPPoE
Subnet Mask	255.255.255.255	
Gateway	168.95.98.254	
Domain Name Server	168.95.192.1 , 168.95.1.1	
Connection Time	00:01:06	<input type="button" value="Disconnect"/>

Then you can easily make connection to this IP camera and monitor it.