

Q: How work NVR when Camera disconnect?

Answer:

New NVR firmware has Video loss detection, you can use the function, please follow as below:

- 1.) Please upgrade NVR firmware V 1.7.2 or above.
- 2.) Please enable "When Camera Connection Status Changed" function.

Air Live [Main View](#) | [Google Map Monitor](#)

NVR8 Network Video Recorder

	1	2	3	4	5	6	7	8
I/O Input	<input type="checkbox"/>							
Motion Detection	<input type="checkbox"/>							

*Please make sure you have properly enabled and configured motion detection region in the camera's web configuration UI before enabling motion detection in the NVR. The NVR only supports single region detection, and only the first region will be used even if you set multiple motion detection regions in the camera.

When NVR is triggered by

- Recycled
- Disk Full
- Disk Fail
- When Camera Connection Status Changed
- When NVR Start Up
- When NVR System Configuration Changed
- When Channel's Configuration Changed

Trigger Actions

- E-Mail:** E-Mail Addresses: *use "," to separate e-mails
- FTP** Upload Path:
- LED**
- Move to particular preset points**

- 3.) Please choose the Trigger Action notification that you want.
- 4.) You will receive a notification when the camera disconnect.

Wed Aug 3 18:37:41 2011 : CH1 DISCONNECTED from 192.168.0.59 - Western Europe...

File Edit View Tools Message Help

Reply Reply All Forward Print Delete Previous Next Addresses

From: ricky
Date: 2011年8月3日 下午 06:37
To: wayne.wu@airlive.com
Subject: Wed Aug 3 18:37:41 2011 **CH1 DISCONNECTED from 192.168.0.59**