

Q : Why the MIC in (audio in) of FE-200VD does not work? I can't hear the sound from the PC.

A:

Please use an active microphone to connect to MIC in of FE-200VD instead of using a passive microphone.

A kind of Active Microphone

