

Q. How can I see the temperature and humidity values remotely?

A. The temperature and humidity values are shown on the OSD(On Screen Display) of the live view video. Please check the picture below for details.

