



AC-1200R

**Wireless Access Point
Quick Installation Guide**

Support

You can download the complete guides and supporting programs from <http://www.airlive.com/product/ac-1200r/download>, or scan the QR code here.



Please consult with the FAQs <http://www.airlive.com/product/ac-1200r/faq> before writing to OvisLink Tech Support Team for further assistance




For any other question, please read the user manual in the CD or mail to tech@airlive.com for technical support.

AC-1200R Package Contents


Please check the package contents and contact your distributor if any part is missing.



One AC-1200R
main unit

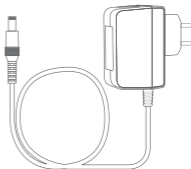

One 12V 1A DC
power adapter

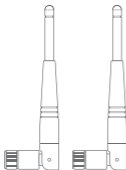

Indoor Detachable
Dual Band
Omni Antenna x 2



Quick
Start
Guide



User's
Guide
CD

I/O Interface



Antenna

Power

WAN


LAN

Reset/
WPS

Antenna


01 Power up the AC-1200R

Connect the 12V adapter to power up the AC-1200R

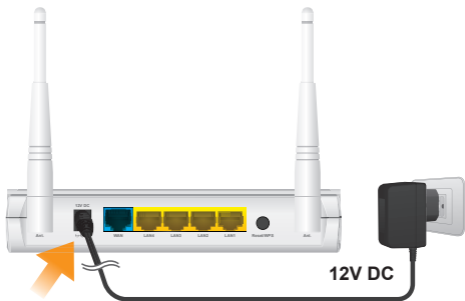

02 Connect AC-1200R to Network

- Connect your xDSL/ cable modem to the WAN port of router by Ethernet cable
- Connect all your computers , network devices to the LAN port of the router

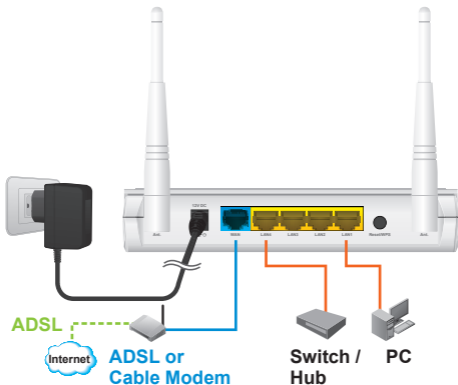

03 Access AC-1200R via Browser

The default IP address of AC-1200R is 192.168.1.254. Please set your PC/NB to the same subnet

Enter the AC-1200R's IP address into browser to visit the AC-1200R web UI.

The default username/password is admin/airlive

The default SSID for 2.4G is Airlive

The default SSID for 5G is Airlive-5G



Note: AC-1200R has 2 radio 2.4G/5G and each radio can work in difference mode. The default mode is AP router. You can change operation mode in webpage.