



CoreNVR 9/16

Network Video Recorder Quick Installation Guide

Support

You can download the complete guides and supporting programs from <http://www.airlivesecurity.com/product/corenvr9/download>, or scan the QR code here.



CoreNVR 9

Please consult with the FAQs <http://www.airlivesecurity.com/product/corenvr9/faq> before writing to OvisLink Tech Support Team for further assistance



You can download the complete guides and supporting programs from <http://www.airlivesecurity.com/product/corenvr16/download>, or scan the QR code here.



CoreNVR 16


Please consult with the FAQs <http://www.airlivesecurity.com/product/corenvr16/faq> before writing to OvisLink Tech Support Team for further assistance




For any other question, please read the user manual in the CD or mail to tech@airlive.com for technical support.

CoreNVR 9/16 Package Contents


Please check the package contents and contact your distributor if any part is missing.

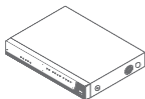

CoreNVR 9/16

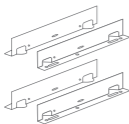

HDD cradle
X 4

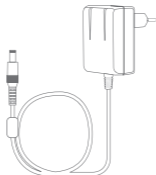

12V / 4.16A
Power Adapter



Screws
from the case
X 5



Silver screws
X 8



Black screws
X 8



User
Manual
CD



Quick
Installation
Guide





HDD
power
cable
X 2



HDD
data
cable
X 2


I/O Interface

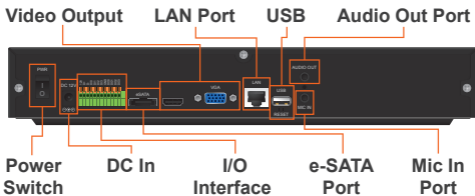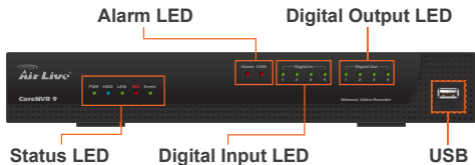

01 HDD Installation Steps


Before to use the CoreNVR 9/CoreNVR 16. The SATAII Hard Drive should be installed. Please follow the step 1 ~ 7 to install the Hard Drive.

1. Remove the screws from the box.

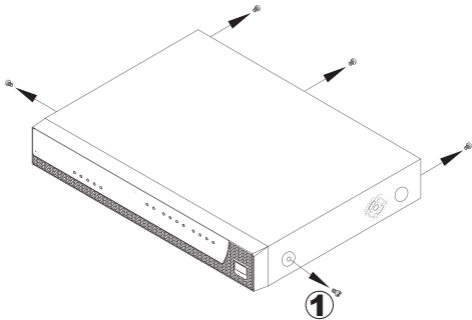


02 HDD Installation Steps

2. Lift up and remove the cover.

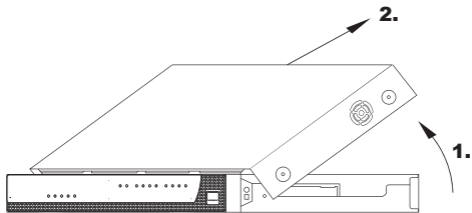


03 HDD Installation Steps

3. Assemble HDD cradles with silver screws.

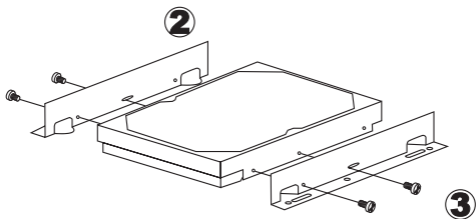


04 HDD Installation Steps

4. Assemble HDD into case with black screws.

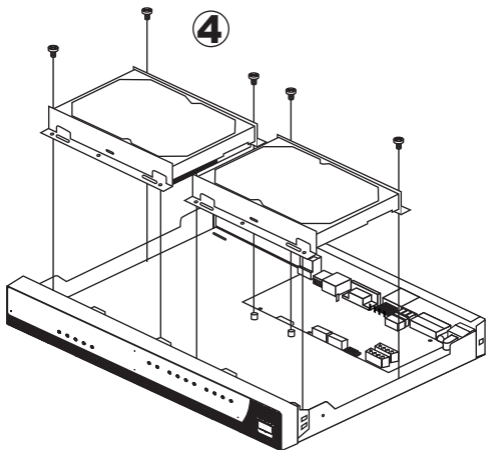


05 HDD Installation Steps

5. Connect SATA power cable and data cable between HDD and main board.

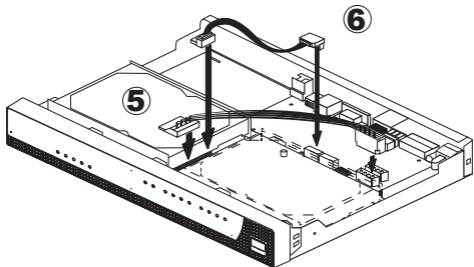


06 HDD Installation Steps

6. Put on the cover back.

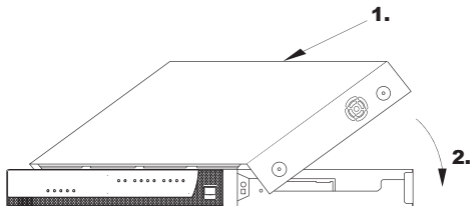


07 HDD Installation Steps

7. Assemble all screws back properly.

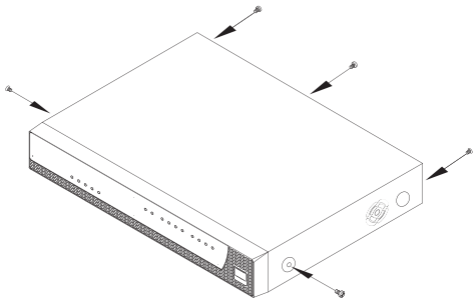

Start to use CoreNVR

After the Hard Drive is installed. Please connect the VGA Cable monitor and mouse. Then, turn on the CoreNVR 9/16's power and wait until the system is ready.

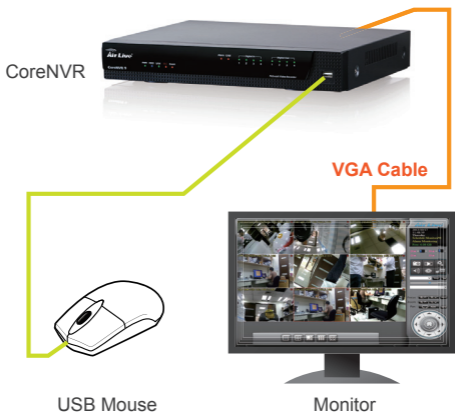

Login CoreNVR

Login CoreNVR 9/16 system by default username and password.

Default username: ***admin***

Default password: ***airlive***

Login

Username

Password

System Setting

Click to enter the setting page.



Auto Setting

Click "Auto Setting" at setting page then press "OK" without input any information. CoreNVR 9/16 will auto install AirLive cameras which installed under same network.

Auto Setting


Auto Setting Filter

Model Name

IP Address

MAC Address


Please enter the filtering rule or keep empty to search all



Note: If cameras has change the user name & password, please remember to change it in "**Camera Parameter**".

Motion Detection

Setup Motion parameter in "**System Setting**"
-> "**Motion Detection**".

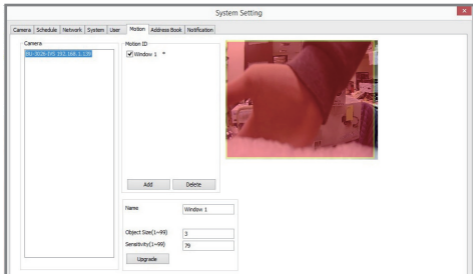

Schedule Recording

Default Recording type is "**Continues Recording**". Enter "**System Setting**" -> "**Schedule**" to change the recording type to "**Motion**" to save the Hard disk space.

The screenshot shows the 'System Setting' window with the 'Schedule' tab selected. The interface is divided into several sections:

- Navigation:** Camera, Schedule, Network, System, User, Motion, Address Book, Notification.
- Weekly Schedule:** A grid showing recording status for each day of the week. Monday and Tuesday are highlighted in green, indicating recording is active. Wednesday through Sunday are blue, indicating no recording.
- Start/End Time:** Start Time: 06:00, End Time: 23:59. Buttons for Add, Modify, and Delete are present.
- Recording Details Table:**

Start Time	End Time	Record Type
06:00	23:59	Motion Detection